

Manuals.plus /

› VINABTY /

› VINABTY RM-F04 Replacement Remote Control Instruction Manual for Humax HD Recorders

VINABTY RM-F04

VINABTY RM-F04 Replacement Remote Control Instruction Manual

For Humax HD Digital TV Recorders

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the VINABTY RM-F04 replacement remote control. This remote is designed to function as a direct replacement for your original Humax HD Digital TV Recorder remote, offering immediate usability without complex setup procedures.







PAGE

LIST

P

i

OPT+

Speaker icon

SUB

TV/RADIO

TEXT

TV icon

Grid icon

Play icon

SOURCE

SLEEP

V-FORMAT

WIDE

RM-F04

Image 1: Front view of the VINABTY RM-F04 Remote Control, showcasing its button layout.

2. COMPATIBLE MODELS

The VINABTY RM-F04 remote control is compatible with the following Humax HD Digital TV Recorder models:

- Humax TN5000HD
- Humax TN5050DR
- Humax TN5000
- Humax HD-FOXT2
- Humax HDR-FOXT2
- Humax HD-FOX-T2

3. SETUP

3.1. Battery Installation

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image 2: Back view of the remote control with the battery compartment open, showing where to insert AAA batteries.

3.2. Initial Use (No Setup Required)

The VINABTY RM-F04 remote control is designed for immediate use with compatible Humax models. No programming, pairing, or additional software installation is required. Once batteries are correctly installed, the remote is ready to operate your device.



RM-F04

No Any Set Up

Image 3: The remote control highlighting its plug-and-play functionality, indicating no setup is required.

4. OPERATING INSTRUCTIONS

This section outlines the general functions of the buttons on your VINABTY RM-F04 remote control. Refer to your Humax device's manual for specific functions related to your model.

4.1. Basic Functions

- **Power Button:** Turns your Humax device on or off.
- **Numeric Keypad (0-9):** Used for direct channel selection or inputting numbers.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes the TV channel.
- **Mute:** Silences the audio output.

4.2. Navigation and Menu Controls

- **Directional Arrows (Up, Down, Left, Right):** Navigate through menus and on-screen guides.
- **OK/Enter Button:** Confirms selections or opens menus.
- **MENU:** Accesses the main menu of your Humax device.
- **EXIT:** Exits current menus or screens.
- **BACK:** Returns to the previous screen or menu.
- **GUIDE:** Opens the electronic program guide (EPG).

4.3. Media Playback Controls

- **Play/Pause:** Starts or pauses playback of recorded content.
- **Stop:** Stops playback.
- **Fast Forward/Rewind:** Skips forward or backward through content.
- **Record (PVR):** Initiates recording of the current program.
- **MEDIA:** Accesses media library or recorded programs.

4.4. Special Function Buttons

- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to on-screen prompts for specific functions within menus or applications.
- **TEXT:** Accesses teletext services.
- **SOURCE:** Changes the input source on your television (if the remote is programmed for TV control).
- **SLEEP:** Sets a sleep timer for the device.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.
- **Liquid Exposure:** Do not expose the remote to liquids, as this can cause permanent damage.

6. TROUBLESHOOTING

If you experience issues with your VINABTY RM-F04 remote control, refer to the following common problems and solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and your Humax device's infrared receiver.
- **Short Operating Range:**
 - Replace the batteries, as low battery power can reduce the remote's range.
 - Ensure the remote is pointed directly at the Humax device.
 - Minimize sources of infrared interference (e.g., strong sunlight, certain types of lighting).
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the problematic buttons, to remove any dirt or debris that might be obstructing them.
 - If only certain buttons fail, and others work, it might indicate a hardware issue.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

7. SPECIFICATIONS

Brand	VINABTY
Model Name	RM-F04
Connectivity Technology	Infrared
Compatible Devices	Humax HD Digital TV Recorders (Television)
Power Source	2 x AAA Batteries (not included)
Maximum Range	10 Meters
Item Weight	80 Grams
Number of Buttons	50
Material	Durable ABS

8. WARRANTY AND SUPPORT

For any questions, concerns, or issues not covered in this manual, please contact the VINABTY customer support team. While specific warranty details may vary by region and retailer, VINABTY is committed to providing satisfactory solutions for its products.

Please retain your purchase receipt as proof of purchase for any warranty claims or support inquiries.