

[Manuals.plus](#) /

› [AUNA](#) /

› Auna 100 MKII Rechargeable DAB Radio User Manual

AUNA 4060656513008

Auna 100 MKII Rechargeable DAB Radio User Manual

Model: 4060656513008

1. PRODUCT OVERVIEW

The Auna 100 MKII is a versatile and portable DAB/DAB+/FM digital radio with integrated Bluetooth connectivity, designed to provide high-quality audio and extensive listening options. It features 15W stereo speakers, a clear TFT display, and supports streaming from various sources. With its rechargeable battery, it offers up to 5 hours of operation, making it suitable for both home and portable use. The radio also includes an alarm clock function and a robust design.

Key Features

- DAB/DAB+/FM Radio Tuner for a wide range of digital and analog stations.
- Bluetooth Connectivity for wireless audio streaming from smartphones, tablets, and other devices.
- 15W Stereo Speakers delivering powerful and clear sound.
- TFT Display for easy navigation and information display (artist, song name, etc.).
- USB Input for media playback from external storage devices.
- AUX Connection for wired audio input from external devices.
- Integrated Alarm Clock with multiple settings.
- Rechargeable Lithium Battery providing up to 5 hours of portable operation.
- Telescopic Antenna for enhanced signal strength.
- Compact and portable design with a stylish Black-Wood finish.



Front view of the Auna 100 MKII DAB Radio, showing the central TFT display, control knobs, and function buttons.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before operating the device and keep them for future reference.

- Do not expose the device to rain, moisture, dripping or splashing liquids.
- Do not place objects filled with liquids, such as vases, on the device.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Dispose of this product correctly. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Portable DAB+/FM Radio (Auna 100 MKII)
- 1 x Power Supply Unit
- 1 x Remote Control
- 1 x Multilingual User Manual (this document)

4. SETUP

4.1 Power Connection

To power the radio, connect the supplied power supply unit to the DC IN port on the back of the radio and then plug it into a wall outlet. The internal rechargeable battery will begin charging automatically. For portable use, ensure the battery is sufficiently charged.

4.2 Antenna Setup

For optimal DAB/DAB+ and FM radio reception, fully extend the telescopic antenna located at the back of the unit. Adjust its position for the best signal quality.

4.3 Initial Setup / First Use


Upon first power-on, the radio will guide you through an initial setup wizard.

1. **Language Selection:** Use the navigation knob to select your preferred language and press the OK/Navigate/Snooze button to confirm.
2. **Network Configuration (for Internet Radio):**
 - The radio will scan for available Wi-Fi networks.
 - Select your network from the list.
 - Enter the Wi-Fi password using the navigation knob and OK button.
 - Confirm the connection. The radio will attempt to connect to the internet.
3. **Time and Date:** The time and date will typically synchronize automatically via DAB or internet connection. If not, you can set it manually in the system settings.



NUMEROUS CONNECTIONS

Connect many input or output devices and operate them with ease

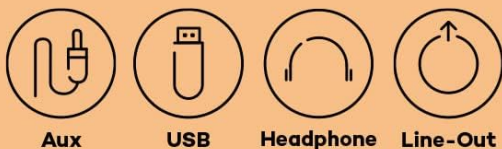

Rear view of the Auna 100 MKII DAB Radio, highlighting the various connection ports including Aux In, Aux Out, DC In, and the telescopic antenna. Dimensions are also indicated.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

- **Power On/Off:** Press the O/VOLUME knob to turn the radio on or off.
- **Volume Control:** Rotate the O/VOLUME knob to adjust the volume.
- **Navigation:** Rotate the OK/NAVIGATE/SNOOZE knob to scroll through menus and options.
- **Selection/Confirmation:** Press the OK/NAVIGATE/SNOOZE knob to confirm a selection.
- **Back:** Press the "BACK" button to return to the previous menu.
- **Menu/Info:** Press the "MENU / INFO" button to access the main menu or view information about the current track/station.
- **Preset Buttons (1-5+):** Use these buttons to quickly access your saved favorite stations.

EVERYTHING IN VIEW & TIMELESSLY ELEGANT DESIGN



LARGE 2,8" TFT COLOUR DISPLAY

Shows you all functions while enjoying music



CLASSIC FUNCTIONALITY

Particularly elegant design with aluminium housing

The large TFT color display of the Auna 100 MKII, showing various function icons such as Web Radio, Podcasts, USB, DAB, FM Radio, Bluetooth, and AUX 1.

5.2 Mode Selection

Press the "HOME" button or navigate through the main menu to select your desired operating mode.

5.2.1 DAB/DAB+ Radio

1. Select "DAB Radio" from the main menu.
2. The radio will perform a full scan for available DAB/DAB+ stations.
3. Once the scan is complete, use the navigation knob to browse the station list.
4. Press OK to select a station.
5. To save a station as a preset, press and hold one of the preset buttons (1-5+) until "Preset Saved" appears.

5.2.2 FM Radio

1. Select "FM Radio" from the main menu.

2. Press the "SCAN" button to automatically scan for FM stations.
3. Alternatively, rotate the navigation knob to manually tune to a frequency.
4. Press OK to select a station.
5. To save a station as a preset, press and hold one of the preset buttons (1-5+) until "Preset Saved" appears.

5.2.3 Internet Radio

Ensure the radio is connected to a Wi-Fi network (refer to section 4.3).

1. Select "Internet Radio" from the main menu.
2. You can browse stations by location, genre, or search for specific stations.
3. Use the navigation knob to select a station and press OK to start playback.
4. To save a station as a preset, press and hold one of the preset buttons (1-5+) until "Preset Saved" appears.

**LISTEN TO THE WHOLE WORLD ON THE RADIO:
UP TO 10,000 WEB STATIONS THANKS TO WIFI**



Stereo
speaker:
15 W max

**WORLDWIDE
RECEPTION**

Endless listening to
music & news



The Auna 100 MKII radio, emphasizing its capability for worldwide reception of up to 10,000 web stations via Wi-Fi, and its 15W max stereo speaker.

5.2.4 Bluetooth Mode

1. Select "Bluetooth" from the main menu. The radio will enter pairing mode and display "Waiting for connection".
2. On your Bluetooth-enabled device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "Auna 100 MKII" from the list.
4. Once paired, you can stream audio from your device to the radio.
5. Use your device to control playback (play/pause, skip tracks) and the radio's volume knob for overall volume.

CONVENIENT CONTROL VIA APP & MUSIC STREAMING



WIRELESS MUSIC STREAMING

Listen to your favourite songs from your smart-phone, tablet or laptop via Bluetooth



SMART OPERATION

From multiple devices such as smartphone or tablet via UNDOK app

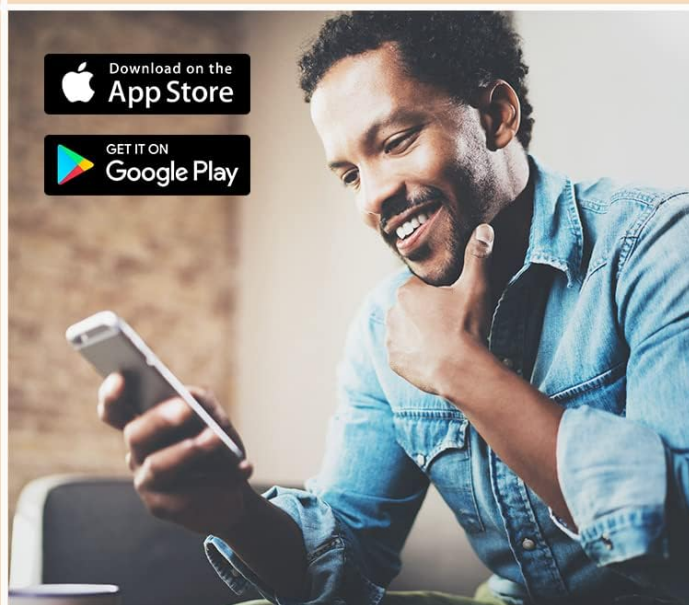


Illustration of the Auna 100 MKII radio being controlled wirelessly via a smartphone app, highlighting its wireless music streaming capabilities.

5.2.5 USB Playback

1. Insert a USB flash drive into the USB IN port on the front of the radio.
2. Select "USB" from the main menu.
3. The radio will scan the USB drive for compatible audio files.
4. Use the navigation knob to browse folders and files.
5. Press OK to select and play a file.

5.2.6 AUX Input

1. Connect an external audio device (e.g., MP3 player, CD player) to the AUX IN port on the back of the radio using a 3.5mm audio cable (not supplied).
2. Select "AUX" from the main menu.
3. Audio from the connected device will now play through the radio's speakers. Control playback from the external device.

5.3 Alarm and Timer Functions

The Auna 100 MKII includes an alarm clock and sleep timer function. Access these settings via the main menu under "System Settings" or "Alarm/Timer".

- **Alarm:** Set up to two independent alarms with customizable time, source (buzzer, FM, DAB, Internet Radio), and volume.
- **Sleep Timer:** Set a countdown timer (e.g., 15, 30, 60 minutes) after which the radio will automatically turn off.
- **Snooze:** When an alarm sounds, press the OK/NAVIGATE/SNOOZE knob to activate snooze for a short period.

6. MAINTENANCE

6.1 Cleaning

To clean the radio, gently wipe the surfaces with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

6.2 Battery Care

To prolong the life of the rechargeable lithium battery:

- Avoid fully discharging the battery frequently.
- Charge the battery regularly, even if the radio is not used for extended periods.
- Store the radio in a cool, dry place when not in use.

7. TROUBLESHOOTING

If you encounter any issues with your Auna 100 MKII radio, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No power / Unit does not turn on	Power cable not connected properly; Battery discharged.	Ensure power cable is securely connected. Charge the battery.
No sound	Volume too low; Mute function active; Incorrect source selected.	Increase volume. Check if mute is active. Select the correct input source (DAB, FM, Bluetooth, etc.).
Poor DAB/FM reception	Antenna not extended or positioned incorrectly; Weak signal area.	Fully extend and adjust the telescopic antenna. Try moving the radio to a different location. Perform a full scan for stations.
Bluetooth connection issues	Device not in pairing mode; Radio too far from device; Interference.	Ensure radio is in Bluetooth pairing mode. Move devices closer. Disconnect other Bluetooth devices.

Problem	Possible Cause	Solution
Internet Radio not connecting / buffering	Incorrect Wi-Fi password; Weak Wi-Fi signal; Network issues.	Re-enter Wi-Fi password. Move radio closer to router. Check your internet connection. Restart router.
Remote control not working	Batteries depleted; Obstruction between remote and radio.	Replace remote control batteries. Ensure no obstructions. Point remote directly at the radio's sensor.

8. SPECIFICATIONS

Feature	Detail
Model Number	4060656513008
Brand	AUNA
Product Dimensions (WxHxD)	22.5 x 16.45 x 12.05 cm
Weight	1.42 kg
Tuner Technology	DAB+, FM
Connectivity Technology	Bluetooth, Auxiliary, USB, Wi-Fi
Speaker Output	2 x 5 Watt RMS (15W max stereo speakers)
Display	TFT Colour Display (approx. 2.8 inches)
Power Source	Mains Powered (via adapter), Battery Powered (rechargeable lithium battery)
Battery Operation Time	Up to 5 hours
Included Components	Radio unit, Power Supply, Remote Control

9. WARRANTY AND SUPPORT

Your Auna 100 MKII radio comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact AUNA customer service. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Keep your proof of purchase (receipt or invoice) as it may be required for warranty service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question