

[Manuals.plus](#) /

› [Famisym](#) /

› FamiSym White Noise Sound Machine User Manual (Model MBZ081)

Famisym MBZ081

FamiSym White Noise Sound Machine User Manual

Model: MBZ081

Brand: Famisym

INTRODUCTION

The FamiSym White Noise Sound Machine (Model MBZ081) is designed to create a peaceful and conducive environment for sleep and relaxation. Featuring 28 non-looping sounds, adjustable volume, and a convenient timer function, this portable device is suitable for individuals of all ages, including babies, children, and adults. Its rechargeable battery ensures extended use, making it ideal for home, office, or travel.



Image: Front view of the FamiSym White Noise Sound Machine, showcasing its compact, circular design with a central speaker grille and control buttons.

SAFETY INFORMATION

- Always unplug and disconnect the device from the power source before cleaning.
- Do not use the device if the cord is damaged.
- Keep the device out of the reach of children and pets.
- Avoid exposure to loud sounds for extended periods to prevent hearing damage.
- Do not use the device while sleeping to avoid the risk of fire.

SETUP

Follow these steps to set up your FamiSym White Noise Sound Machine:

1. Remove the sound machine from its packaging.
2. Charge the rechargeable battery fully before using it for the first time. Use the provided USB charging cable.
3. Turn on the sound machine using the power button.
4. Select a desired sound using the sound selection buttons.
5. Adjust the volume to your preference.
6. Set a timer if desired, or allow it to play continuously.
7. Place the sound machine in your preferred location for optimal sound distribution.

Revitalize with Deep Sleep

Relax and fall asleep faster
with FamiSym



Image: The sound machine placed on a nightstand, providing a calming atmosphere for sleep.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button (usually indicated by a universal power symbol) to turn the device on or off.

Sound Selection

The device offers 28 non-looping sounds. These include:

- **White Noise:** White noise, brown noise, pink noise, fan sounds.
- **Natural Sounds:** Thunder, rain, ocean, stream.
- **Baby Soothing Sounds:** Heartbeat, shushing, dryer, lullabies.

Use the dedicated sound selection buttons (often indicated by arrows or music notes) to cycle through the available sounds.



Image: Close-up of the sound machine's control panel, showing icons for various sound types.

Volume Adjustment

Adjust the volume using the '+' and '-' buttons. The device features 32 levels of adjustable volume to suit your environment and preference.

Timer Function

Set a timer for automatic shut-off. Options include 30, 60, or 90 minutes. For continuous play, select the infinite loop option. The device will remember your last timer setting.



Image: The sound machine on a nightstand, illustrating the timer settings (30, 60, 90 minutes, or continuous).

Memory Function

The FamiSym White Noise Sound Machine is equipped with a memory function that recalls your last selected sound and volume settings upon restart.

MAINTENANCE

- **Cleaning:** Always unplug the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or immerse the device in water.
- **Battery Care:** To prolong battery life, fully charge the device before initial use and when the battery is low. Avoid completely draining the battery frequently.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is fully charged. Connect the device to a power source using the USB cable.
- **No sound:** Check the volume level and ensure it is not muted. Verify that a sound has been selected.
- **Short battery life:** Ensure the device is fully charged. Battery performance may decrease over time with regular use.
- **Sound quality issues:** Ensure the device is placed on a stable, flat surface. Avoid placing it near other electronic devices that may cause interference.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.91 x 5.91 x 1.5 inches
Weight	11.36 ounces
Item Model Number	MBZ081
Battery Type	Lithium Ion (rechargeable)
Battery Life	Over 15 hours (on full charge)
Sound Options	28 non-looping sounds (White Noise, Natural Sounds, Lullabies, etc.)
Volume Levels	32 adjustable levels
Timer Settings	30, 60, 90 minutes, or continuous play
Material	Plastic
Color	Basic-white
Manufacturer	Famisym Store

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the product packaging or contact Famisym customer service directly. Specific warranty details are not provided in this manual.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended

to diagnose, treat, cure, or prevent any disease or health condition.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question