

Duronic AF34

Duronic AF34 BK Triple Drawer 10L Digital Air Fryer

Model: AF34

INTRODUCTION

Thank you for choosing the Duronic AF34 BK Triple Drawer 10L Digital Air Fryer. This versatile appliance is designed to provide healthier, faster, and more convenient cooking for a wide range of dishes. With its innovative triple drawer system, dual-zone capabilities, and intuitive digital controls, you can easily prepare meals for individuals or large families. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to

allow for proper air circulation.

- Do not block any ventilation openings.

PRODUCT OVERVIEW

The Durotic AF34 features a sleek design with a digital control panel and transparent viewing windows for monitoring your cooking progress.



Figure 1: Front view of the Durotic AF34 Air Fryer with dual drawers and a large single drawer shown separately.

Key Components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Digital Control Panel:** Touch-sensitive display for setting time, temperature, and selecting presets.
- **5L Dual Zone Baskets (x2):** Two individual non-stick baskets with visual windows for cooking separate dishes.
- **10L Large Interchangeable Basket (x1):** A single large non-stick basket with a visual window for larger

portions.

- **Crisper Plates:** Removable plates for optimal air circulation and crisping.
- **Internal Lights:** Allow monitoring of food without opening the drawers.

Dimensions and Capacity:



Figure 2: Product dimensions (39x37.7x32.5cm) and basket capacities (2x 5L and 10L) with internal measurements.

- **Twin Drawer Capacity:** 10L (2x 5L air fryer dual drawers)
- **Large Drawer Capacity:** 10L
- **Overall Size:** 39cm (W) x 37.7cm (D) x 32.5cm (H) / 15in (W) x 14.8in (D) x 9.1in (H)
- **Inner Drawer Size (5L):** 22.5cm (L) x 14.5cm (W) x 11cm (H) / 8.9in (L) x 5.7in (W) x 4.3in (H)
- **Cable Length:** 105cm / 41.3in

SETUP

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly. Ensure all

components are present: main unit, two 5L baskets, one 10L basket, and crisper plates.

2. **Initial Cleaning:** Before first use, wash the baskets and crisper plates with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, flat, heat-resistant surface. Ensure there is adequate space (at least 10-15 cm) around the back and sides for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is fitted with a 3-pin BS UK plug.
5. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) before cooking food. This helps to burn off any manufacturing residues and eliminate initial odors. A slight odor or smoke may be present during this process; this is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

The Duroc AF34 offers versatile cooking options with its digital control panel and multiple presets.

Control Panel Overview:



Figure 3: Digital control panel showing temperature, time, and preset options.

- **Power Button:** Turns the unit on/off.
- **Temperature Controls (+/-):** Adjusts cooking temperature (50°C to 200°C).
- **Time Controls (+/-):** Adjusts cooking time.
- **Zone Select (1/2):** Selects which cooking zone (left or right) to control.
- **Preset Icons:** 10 pre-programmed settings for common dishes (Preheat, Reheat, Grill, Bake, Roast, Broil, Steam, Cook, Toast, Dehydrate).
- **Sync Cook:** Synchronizes settings for both zones.
- **Sync Finish:** Ensures both zones finish cooking at the same time.
- **Light Button:** Activates the internal lights in the drawers.

Basic Operation:

1. Place the crisper plate inside the desired basket(s).
2. Place food into the basket(s). Do not overfill.
3. Insert the basket(s) firmly into the main unit.
4. Press the Power button to turn on the air fryer.
5. Select the desired cooking zone (1 or 2) if using dual baskets.
6. Adjust the temperature and time manually using the +/- buttons, or select a preset.
7. Press the Start/Pause button to begin cooking.
8. You can pause cooking at any time by pulling out the drawer or pressing the Start/Pause button. Cooking will resume when the drawer is reinserted or the button is pressed again.
9. The air fryer will beep when cooking is complete. Carefully remove the basket(s) and transfer food.

Using Sync Cook:

The Sync Cook feature allows you to apply the same cooking settings (temperature and time) to both 5L dual baskets simultaneously, ideal for cooking larger quantities of the same food.



Figure 4: Sync Cook in action, applying identical settings to both 5L drawers.

1. Insert both 5L baskets with food.
2. Set the desired temperature and time for one zone.
3. Press the "Sync Cook" button. The settings will be mirrored to the other zone.
4. Press Start/Pause to begin cooking.

When using the 10L large drawer, the Sync Cook function can also be used to apply settings across the entire cooking area.



Figure 5: Sync Cook used with the 10L large drawer for uniform cooking.

Using Sync Finish:

The Sync Finish feature is perfect for cooking two different items that require different cooking times but need to be ready simultaneously. The air fryer will automatically adjust the start time of the shorter program.



Figure 6: Sync Finish ensures both dishes are ready at the same time, even with different cooking durations.

1. Insert both 5L baskets with different foods.
2. Set the desired temperature and time for Zone 1.
3. Set the desired temperature and time for Zone 2.
4. Press the "Sync Finish" button. The air fryer will calculate and delay the start of the shorter cooking cycle.
5. Press Start/Pause to begin cooking.

Preset Functions:

The AF34 comes with 10 versatile presets to simplify your cooking. Each preset has a default time and temperature, which can be adjusted manually if needed.



Figure 7: Examples of preset functions on the control panel.

- **Preheat:** Quickly heats the air fryer to the desired temperature.
- **Reheat:** Ideal for warming up leftovers.
- **Grill:** For grilling meats and vegetables.
- **Bake:** Suitable for cakes, pastries, and other baked goods.
- **Roast:** Perfect for roasting meats and vegetables.
- **Broil:** For browning and crisping the top layer of food.
- **Steam:** For steaming delicate foods.
- **Cook:** General cooking setting.
- **Toast:** For toasting bread and similar items.
- **Dehydrate:** For drying fruits, vegetables, and making jerky.

Viewing Windows and Internal Lights:

The visual windows on the baskets, combined with internal lighting, allow you to monitor your food without opening

the drawers. This helps maintain consistent temperature and saves energy.



Figure 8: Internal light illuminating food through the viewing window.

Using the 10L Large Drawer:

The 10L large drawer is ideal for cooking bigger items like a whole chicken or a large batch of fries. It can also be used with a removable divider (sold separately) to create two separate cooking compartments within the large drawer.



Figure 9: The 10L large drawer with a removable divider for flexible cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Duroc AF34 Air Fryer.



Figure 10: Removable non-stick baskets and crisper plates are dishwasher safe for easy cleaning.

- **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Baskets and Crisper Plates:** The non-stick, removable baskets and crisper plates are dishwasher safe. For handwashing, use warm, soapy water and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials that could damage the non-stick coating.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food residue. Ensure the unit is completely cool and unplugged.
- **Storage:** Store the air fryer in a cool, dry place once it is clean and completely dry.
- **Optional Liners:** For even easier cleaning, consider using Durotic AFL1, AFL2, and AFL3 reusable silicone air fryer liners (sold separately).

TROUBLESHOOTING

If you encounter any issues with your Duronic AF34 Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Overcrowding the basket; insufficient shaking/flipping.	Do not overcrowd the basket. Cook in smaller batches if necessary. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high fat content food.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (if desired); incorrect temperature/time.	Pat food dry before air frying. A light spray of oil can help. Adjust temperature and time as needed.
Digital display not responding.	Temporary electronic glitch.	Unplug the unit for a few minutes, then plug it back in. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact Duronic customer support for assistance.

SPECIFICATIONS

- **Brand:** Duronic
- **Model Number:** AF34
- **Colour:** Black
- **Product Dimensions:** 37.7 cm (D) x 39 cm (W) x 32.5 cm (H)
- **Capacity:** 19.5 litres total (10L twin drawer capacity, 10L large drawer capacity)
- **Power / Wattage:** 2400 watts (1200W per cooking zone)
- **Voltage:** 230 Volts
- **Material:** Plastic, Aluminium, Metal, Acrylonitrile Butadiene Styrene (ABS)
- **Auto Shutoff:** Yes
- **Special Features:** Dual Zone Features, Temperature Control, Timer, Stain Resistant, Automatic Shut-Off, Programmable, Visual Window
- **Item Weight:** 12.1 kg
- **Cooking Temperature Range:** Minimum 50°C / Maximum 200°C
- **First Available Date:** 20 March 2023

WARRANTY AND SUPPORT

Duronic products are designed for durability and performance. For information regarding warranty coverage, product registration, or technical support, please refer to the official Duronic website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may visit the [Durotic Store on Amazon](#).

© 2024 Durotic. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.