

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WIKICO](#) /

› [WIKICO 4K Digital Camera W02 User Manual](#)

WIKICO W02

WIKICO 4K Digital Camera W02 User Manual

Model: W02

1. INTRODUCTION

Thank you for purchasing the WIKICO 4K Digital Camera W02. This camera is designed for both photography and video recording, offering 4K video capabilities and 56MP photos. It features a 3-inch 180° flip screen, 16X digital zoom, and built-in Wi-Fi. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance.

2. SAFETY INFORMATION

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from strong magnetic fields.
- Use only WIKICO-approved accessories and batteries.
- Do not attempt to disassemble or modify the camera.
- Store the camera in a cool, dry place when not in use.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- WIKICO 4K Digital Camera W02
- 52mm Wide Angle Lens
- Macro Lens
- 32GB TF Card

- 2 x 1500mAh Rechargeable Batteries
- Battery Charger
- USB 2.0 Data Cable
- Lens Cap
- User Manual



Figure 3.1: Included accessories with the WIKICO 4K Digital Camera W02.

4. CAMERA OVERVIEW

Familiarize yourself with the main components and controls of your camera.



Figure 4.1: Front view of the WIKICO 4K Digital Camera W02 with wide-angle lens attached.



Figure 4.2: Rear view of the WIKICO 4K Digital Camera W02 showing the 180° flip screen.

4.1. Controls and Ports

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Press halfway to focus, fully to capture photo/start video.
- **Mode Dial:** Selects between photo, video, time-lapse, continuous shooting, and other modes.
- **Zoom Buttons (T/W):** Controls digital zoom.
- **OK Button:** Confirms selections in menus.
- **Menu Button:** Accesses camera settings.
- **Playback Button:** Enters playback mode to view captured media.
- **LED Fill Light:** Provides illumination in low-light conditions.
- **Hot Shoe:** For external accessories like microphones.
- **USB Port:** For data transfer and charging.
- **Microphone Input:** 3.5mm jack for external microphone.
- **Tripod Thread:** Standard 1/4 inch thread for tripod mounting.

5. SETUP

5.1. Battery Installation and Charging

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert a fully charged 1500mAh battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. To charge the battery, insert it into the provided battery charger. Connect the charger to a power source using the USB cable and wall adapter. The indicator light will show charging status.
5. The camera supports recording while charging via AC power or a power bank.

5.2. Memory Card Installation

1. Locate the TF card slot on the side of the camera.
2. Insert the 32GB TF card (or another compatible Micro SD card, up to 128GB, Class 10 recommended) into the slot until it clicks into place.
3. To remove, gently press the card inward until it pops out.

5.3. Lens Attachment

1. The camera comes with a standard mount lens. For wide-angle or macro photography, attach the included 52mm wide angle and macro lenses.
2. Align the threads of the accessory lens with the camera's main lens.
3. Gently screw the lens clockwise until it is securely attached.
4. Ensure the lens cap is removed before use.

4K 56MP Digital Camera



Figure 5.1: WIKICO 4K Digital Camera W02 with detachable wide angle and macro lenses.

6. OPERATING THE CAMERA

6.1. Power On/Off

Press and hold the Power Button to turn the camera on or off.

6.2. Mode Selection

Rotate the Mode Dial on the top of the camera to select your desired shooting mode (e.g., Photo, Video, Time-lapse, Continuous Shooting, Silent Mode, Self-timer).

Upgraded Spin Digital Dial

Multi-function&Easy to Use for Beginner Photography



Figure 6.1: The mode dial on the WIKICO 4K Digital Camera W02 for selecting various functions.

6.3. Taking Photos

1. Select Photo mode using the Mode Dial.
2. Frame your shot using the 3-inch flip screen.
3. Press the Shutter Button halfway to focus, then fully press to capture the 56MP photo.

6.4. Recording Videos

1. Select Video mode using the Mode Dial.
2. Press the Shutter Button to start recording 4K (2160p) video at 30 frames per second.
3. Press the Shutter Button again to stop recording.
4. The camera supports a pause function during video recording.

6.5. Zoom Function

Use the T (telephoto) and W (wide) buttons to adjust the 16X digital zoom. Note that digital zoom may affect image quality.

16X Digital Zoom & Auto Focus Camera



Figure 6.2: Illustration of the 16X digital zoom capability.

6.6. Flash/Fill Light

The camera features a built-in LED fill light for improved illumination in dark environments. Activate it as needed through the camera settings or dedicated button.

WiFi Function

black Pink blue Purple



Figure 6.3: The camera's LED fill light providing illumination in a low-light setting.

6.7. Webcam Mode

Connect the camera to your computer via the USB cable and select 'Webcam Mode' from the camera's menu. This allows you to use the camera for live streaming, video calls, or online meetings.



Figure 6.4: The WIKICO 4K Digital Camera W02 being used as a webcam for online communication.

6.8. WiFi Function

Activate the built-in Wi-Fi function in the camera's settings to connect to your mobile phone. This enables instant sharing of photos and videos online.

Wireless WiFi Function

The camera has built-in wireless WiFi function, you could use your mobile phone to instantly share videos and photos online.



Figure 6.5: Demonstrating the wireless Wi-Fi function for sharing content to a mobile device.

6.9. Built-in Filters

Explore the variety of fun and artistic filters available in the camera's settings to add style and personality to your photos and videos.

Multiple photography styles



Figure 6.6: Examples of various photography styles and filter effects available on the camera.

6.10. Playback

Press the Playback button to review your captured photos and videos on the camera's screen. Use the directional buttons to navigate through your media.

7. MAINTENANCE

7.1. Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens surface with your fingers.
- Do not use harsh chemicals or abrasive materials.

7.2. Battery Care

- Charge batteries fully before first use.
- Remove batteries if the camera will not be used for an extended period.

- Store batteries in a cool, dry place.

7.3. Storage

When storing the camera, ensure it is powered off, batteries are removed, and the lens cap is on. Store in a protective case to prevent dust and scratches.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on	Low or depleted battery	Charge the battery or replace with a fully charged one.
Cannot take photos/videos	Memory card full or not inserted correctly	Insert a new/empty memory card or reinsert the existing one. Format the card if necessary (this will erase all data).
Poor image/video quality	Low light, digital zoom, dirty lens	Use the LED fill light, avoid excessive digital zoom, clean the lens.
Wi-Fi connection issues	Incorrect settings, interference	Ensure Wi-Fi is enabled on both camera and mobile device. Check for interference.

9. SPECIFICATIONS

Feature	Detail
Brand	WIKICO
Model Name	W02
Effective Still Resolution	56 MP
Video Resolution	4K (2160p)
Frame Rate	30fps
Digital Zoom	16 x
Screen Size	3 Inches (180° Flip Screen)
Lens Type	Macro, Wide Angle (52mm)
Connectivity Technology	USB, Wi-Fi, HDMI

Feature	Detail
Flash Memory Type	Micro SD (up to 128 GB, Class 10)
Batteries	2 x 1500mAh Lithium Ion
Item Weight	230 Grams
Special Features	Time-lapse, Continuous Shooting, Video Pause, Loop Recording, Silent Mode, Self-timer, Webcam Function, Built-in Filters

10. WARRANTY AND SUPPORT

WIKICO is committed to providing high-quality products and customer satisfaction. For any inquiries or support needs, please contact our customer service team. We offer:

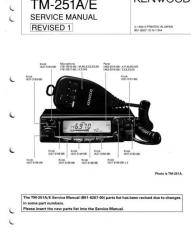
- Lifetime 24-hour Responsive Customer Support.
- Free accessory replacement within one year of purchase.
- Online consultation and support for any issues you may encounter.

Please retain your proof of purchase for warranty claims.

Your browser does not support the video tag.

Video 10.1: Official WIKICO video demonstrating the 4K Vlogging Camera features and capabilities.

Related Documents - W02

 AECOJOY Manual Retraction Slope Patio Awning Assembly Instructions	<p>AECOJOY Manual Retraction Slope Patio Awning Assembly Instructions</p> <p>Official assembly instructions for the AECOJOY Manual Retraction Slope Patio Awning. This guide lists essential components and provides context for installation. Features model numbers like aboj1027, aboj1232, and various 16013-W02 variants.</p>
 TECNO Watch 2 TSP-W02 User Manual: Smart Watch Features and Setup	<p>TECNO Watch 2 TSP-W02 User Manual: Smart Watch Features and Setup</p> <p>Official user manual for the TECNO Watch 2 (Model TSP-W02). Learn about setup, features, maintenance, and compliance for this smart watch.</p>
 KENWOOD TM-251A/E Service Manual and Parts List	<p>KENWOOD TM-251A/E Service Manual and Parts List</p> <p>Comprehensive service manual and parts list for the KENWOOD TM-251A/E 144MHz FM Transceiver, detailing component part numbers, descriptions, and specifications for repair and maintenance.</p>

 Head Up Display User Manual <small>Product images are displayed only for reference purposes. In places like the USA, the laws of the state of California prohibit the sale of products that contain lead. Therefore, the product image may not be identical to the actual product. The actual product may contain lead. Please refer to the product's user manual for more information.</small> Introduction <p>Thank you for purchasing our company's new product. Head up display (HUD) is a device that projects information such as speed, navigation, and turn-by-turn directions onto the windshield of the vehicle. It allows the driver to keep their eyes on the road while receiving information without having to take their eyes off the road. This manual provides step-by-step instructions for the installation and use of the VJOYCAR W02 5.5-inch OBDII Head Up Display (HUD). It covers basic features, setup, and troubleshooting for a safe and convenient driving experience.</p>	<p><u>VJOYCAR W02 5.5" Head Up Display (HUD) User Manual - Installation, Settings, and Operation</u></p> <p>Comprehensive user manual for the VJOYCAR W02 5.5-inch OBDII Head Up Display (HUD). This guide covers installation, main features, detailed settings, common operation procedures, troubleshooting common problems, and technical specifications for safe and convenient driving.</p>
 AECOJOY 10x10 Storage Shed Installation Guide SS16322	<p><u>AECOJOY 10x10 Storage Shed Installation Guide SS16322</u></p> <p>Step-by-step installation instructions for the AECOJOY 10x10 storage shed (Model SS16322). Includes parts list, required tools, safety precautions, and detailed assembly diagrams described textually.</p>
 CLAIKS W02 INSTALLATION GUIDE Glass Standing Desk SIZE: 48inch/120cm <small>service@claiks.com</small>	<p><u>Claiks Glass Standing Desk Installation Guide</u></p> <p>Comprehensive installation guide for the Claiks Glass Standing Desk (48-inch/120cm), covering setup, cable management, and controller operation with multilingual instructions.</p>