

Weitov BN59-01260A

Weitov Universal Replacement Remote Control for Samsung TVs - User Manual

Model: BN59-01260A

INTRODUCTION

This manual provides comprehensive instructions for the Weitov Universal Replacement Remote Control, designed for seamless operation with a wide range of Samsung televisions. Please read this guide thoroughly to ensure optimal performance and longevity of your remote.

PRODUCT OVERVIEW





Image: Two black remote controls with a minimalist design, featuring power, number pad, extra, return, home, play/pause, volume, and channel buttons.

The Weitov Universal Replacement Remote Control offers a streamlined design and direct compatibility with numerous Samsung TV models. It is designed for ease of use, requiring no complex programming.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards to remove it.
3. Insert two (2) AA batteries, ensuring correct polarity (+ and - ends match the markings inside the

compartment).

4. Slide the battery compartment cover back into place until it clicks securely.

Just put in 2 AA batteries and it's ready to use



(Batteries not included)

Image: A four-step diagram illustrating how to remove the battery cover, insert two AA batteries, and replace the cover.

The remote is ready for use immediately after battery installation. No programming is required.

OPERATING INSTRUCTIONS













-  **On / Off**
-  **123 Number Pad**
-  **Color Button**
-  **Return**
-  **Select**
-  **Direction Pad**
-  **Smart Hub**
-  **Play / Pause**
-  **VOL Volume +/-**
Move the button up or down to adjust the volume. To mute the sound press the button. When pressed for 1 second or more, the Accessibility Shortcuts appears.
-  **CH Channe +/-**
Move the button up or down to change the channel. To see the Guide screen, press the button.

Image: A close-up of the remote control with labels pointing to each button and describing its function.

- **Power Button:** Turns the TV on or off.
- **123 (Number Pad):** Accesses the on-screen number pad for direct channel input.
- **EXTRA (Color Button):** Activates extra functions or color-coded options, depending on the TV's interface.
- **Return:** Navigates back to the previous screen or menu.
- **Select (OK):** Confirms selections or opens menus.
- **Direction Pad:** Navigates through menus and options (Up, Down, Left, Right).
- **Smart Hub (Home):** Opens the Smart Hub or home screen of your Samsung TV.
- **Play / Pause:** Controls media playback (play, pause).
- **Volume +/-:** Adjusts the TV's volume. Press and hold for 1 second or more to activate Accessibility Shortcuts.
- **Channel +/-:** Changes TV channels. Press to view the Guide screen.

The remote utilizes infrared technology for signal transmission, offering a range of up to 40 feet with a quick

response time of 0.2 seconds.

Stable Infrared Signal

40ft long range precisely control & 0.2s quick response



Image: A hand holding the remote, demonstrating its use with a TV, highlighting its stable infrared signal and quick response.

COMPATIBILITY

This universal remote control is compatible with a wide range of Samsung TV models, including:

- All Samsung Frame, Serif, Curved, UHD, Neo QLED, OLED, 4K, and 8K Smart TVs.
- Replacement for Samsung TV Remote Control models: BN59-01259E, BN59-01259B, BN59-01260A, BN59-01241A, BN59-01296A, BN59-01266A, BN59-01242A, BN59-01292A, BN59-01312A, BN59-01294A, BN59-01298A, BN59-01298D, BN59-01293A, BN59-01295A, BN59-01288A, BN59-01266A, BN59-01309A, BN59-01298H, BN59-01309B, BN59-01279A, BN59-01274A, BN59-01290A, BN59-01278A, and more.

Pack of 2

Universal Remote Compatible with all Samsung TVs



Image: The remote control displayed next to images of different Samsung TV types, illustrating its broad compatibility.

MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

The remote is designed for durability, supporting over 120,000 clicks.

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and not depleted. Replace with fresh AA batteries if necessary.
- **Limited range:** Ensure there are no obstructions between the remote and the TV's infrared receiver. The optimal operating distance is up to 40 feet.
- **Specific buttons not working:** Verify that the button is clean and not stuck. If the issue persists, contact customer service.

SPECIFICATIONS

- **Product Dimensions:** 6 x 1 x 0.6 inches
- **Item Weight:** 2.12 ounces
- **Batteries Required:** 2 AA batteries (not included)
- **Transmission Technology:** Infrared
- **Max Number of Supported Devices:** 18 (Universal compatibility)
- **Compatible Devices:** Television

Pack of 2



Image: A visual representation of the remote control's dimensions.

WARRANTY AND SUPPORT

Weitov provides a 100-day warranty return service for this product. If you have any questions regarding compatibility or functionality, please contact our professional customer service team for assistance.

For further support, visit the [Weitov Store](#).

