

Hafele Hafele Aqua 13XL PRO

Hafele Aqua 13XL PRO Dishwasher User Manual

Model: Aqua 13XL PRO (533.23.330)

Brand: Hafele

INTRODUCTION

Welcome to the user manual for your new Hafele Aqua 13XL PRO Freestanding Dishwasher. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before using the dishwasher and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions completely before operating the dishwasher.
- Connect the dishwasher only to a properly grounded electrical outlet.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is in operation.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after a wash cycle.
- Load sharp items, such as knives, with the handles up to reduce the risk of cuts.
- Ensure the dishwasher door is fully closed and latched before starting a cycle.


PRODUCT OVERVIEW

The Hafele Aqua 13XL PRO is a 13 place setting freestanding dishwasher designed for efficient and thorough cleaning of your dishes with advanced features.

Key Features

- 13 Place Setting Capacity
- Black Steel Freestanding Design

- 3rd Layer Cutlery Basket for optimized space
- Electronic Control Panel for easy operation
- Dual Zone Wash Function for varied cleaning intensity
- Energy Rating: A++ for energy efficiency
- 6 Wash Programs to suit different needs
- Low Noise Level: 52 dBA for quiet operation

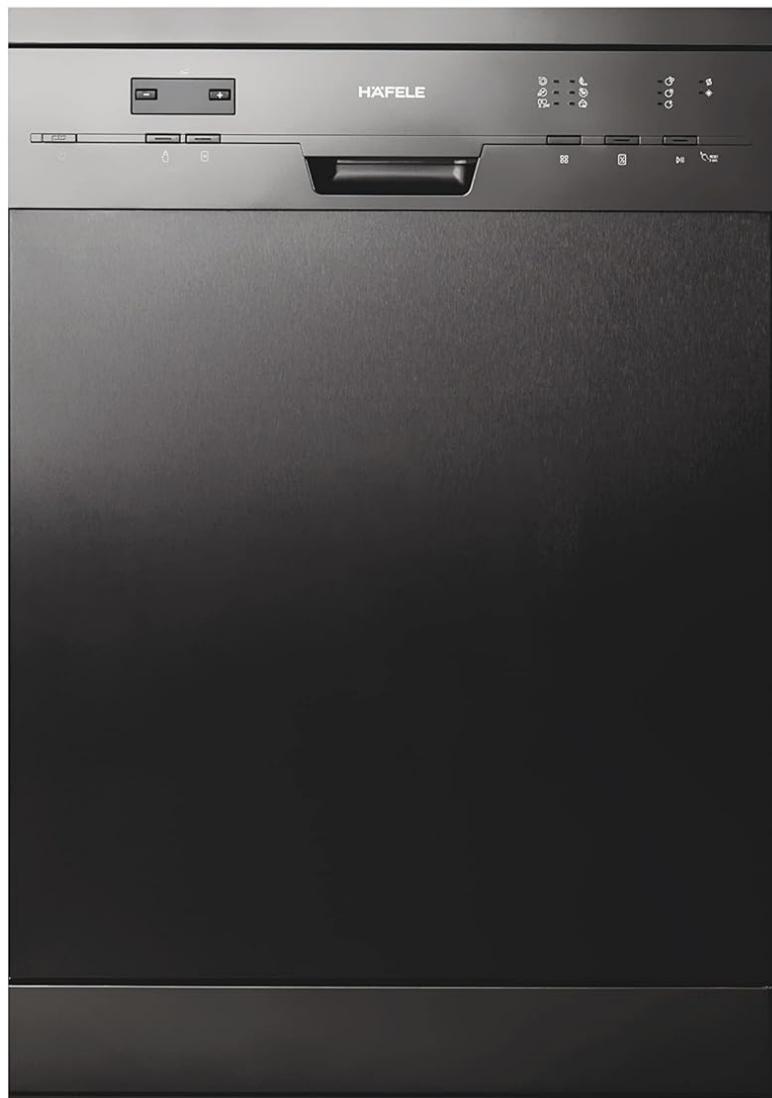

Front view of the Hafele Aqua 13XL PRO Freestanding Dishwasher in dark steel finish.



Interior view of the Hafele Aqua 13XL PRO Dishwasher with racks pulled out, showing loaded dishes and cutlery.



Close-up view of the stainless steel interior of the dishwasher, highlighting the durable construction.

Illustration representing the low noise level of the dishwasher, rated at 52 dB.

SETUP AND INSTALLATION

The Hafele Aqua 13XL PRO is a freestanding dishwasher. For detailed installation, it is recommended to contact qualified service personnel to ensure proper setup and connection to water and electrical supplies.

Pre-Installation Checks

- Ensure proper water supply (hot and cold) and drainage connections are available at the installation site.
- Verify that the electrical outlet meets the required voltage (240 Volts) and is properly grounded.
- Confirm the installation area can accommodate the dishwasher's dimensions: 59.8 cm (Depth) x 80 cm (Width) x 60 cm (Height).

Positioning the Dishwasher

Place the dishwasher on a level, stable surface. Ensure there is adequate space for the door to open fully and for proper ventilation around the appliance.



Rear view of the Hafele Aqua 13XL PRO Dishwasher, showing connections for water and power.

OPERATING INSTRUCTIONS


Loading the Dishwasher

Properly loading dishes ensures optimal cleaning performance and prevents damage to items.

- Scrape off large food particles from dishes before loading.
- Place larger items like pots, pans, and dinner plates in the lower rack.
- Place glasses, cups, and smaller bowls in the upper rack.
- Utilize the dedicated 3rd layer cutlery basket for forks, knives, and spoons, ensuring they are separated to allow water to reach all surfaces.
- Ensure that no items block the spray arms, allowing them to rotate freely.



Side view of the dishwasher with racks extended, illustrating proper loading of various dishware.

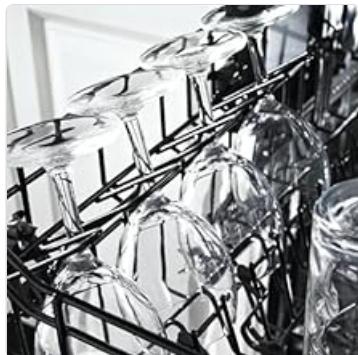

Close-up of the upper rack showing securely placed glasses.

Adding Detergent and Rinse Aid

Use only automatic dishwasher detergent. Add the recommended amount to the detergent dispenser. If desired, fill the rinse aid dispenser to improve drying performance and prevent water spots.



A hand placing a detergent tablet into the dispenser compartment.

Selecting a Wash Program

The dishwasher features 6 wash programs. Select the appropriate program based on the soil level and type of dishes.

- **Economy:** Ideal for lightly soiled dishes and for maximizing energy savings.
- **Intensive:** Designed for heavily soiled pots, pans, and dishes with baked-on food.
- **Delicate:** Gentle cycle suitable for fragile items like glassware and fine china.
- **Auto Program:** Automatically detects the soil level of the dishes and adjusts the wash cycle accordingly for optimal results.
- **Quick Wash:** A faster cycle for lightly soiled items that need a quick clean.
- **Dual Zone Wash:** Allows for different wash intensities in the upper and lower baskets, providing flexibility for mixed loads.

Starting a Cycle

After loading dishes and adding detergent, close the dishwasher door firmly until it latches. Press the power button, select your desired program using the control panel, and then press the start button to begin the wash cycle.

MAINTENANCE AND CLEANING

Regular maintenance and cleaning will ensure the longevity and optimal performance of your dishwasher.

Exterior Cleaning

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals that could damage the finish.

Interior Cleaning

Regularly clean the filter system to prevent blockages and maintain efficient washing. The filter system is located at the bottom of the dishwasher tub.

- Twist and remove the coarse and fine filters.
- Rinse the filters thoroughly under running water to remove any trapped food particles.
- Check the spray arms for any clogged nozzles and clear them if necessary.
- Reassemble the filter system and ensure it is securely in place before operating the dishwasher.



Internal view of the dishwasher during a wash cycle, showing water jets cleaning the interior.

TROUBLESHOOTING

Before contacting service, please refer to the following common issues and their potential solutions. This may help resolve minor problems quickly.

Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not properly closed and latched; Program not selected.	Check power connection and circuit breaker; Ensure door is securely latched; Select a wash program.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent or rinse aid; Incorrect program selection.	Reload dishes correctly, ensuring spray arms are not blocked; Clean spray arm nozzles; Add appropriate amount of detergent/rinse aid; Select a more intensive program if needed.
Water not draining	Clogged filter; Blocked drain hose; Drain pump malfunction.	Clean the filter system; Check drain hose for kinks or obstructions; If problem persists, contact service.
Excessive noise during operation	Improper loading (dishes rattling); Foreign object in pump area; Motor issue.	Rearrange dishes to prevent contact; Check for and remove any foreign objects; If noise is unusual or persistent, contact service.

TECHNICAL SPECIFICATIONS

Detailed specifications for the Hafele Aqua 13XL PRO Dishwasher.

Feature	Detail
Brand	Hafele
Model Name	Hafele Aqua 13XL PRO
Model Number	533.23.330
Capacity	13 Place Settings
Installation Type	Freestanding
Color	Dark Steel
Material	Stainless Steel
Controls Type	Push Button
Noise Level	52 dB
Item Weight	43 kg
Voltage	240 Volts

Feature	Detail
Energy Consumption	2100 Watts
Annual Energy Consumption	261 Kilowatt Hours
Number of Wash Programs	6
Cycle Options	Economy, Intensive, Delicate
Special Features	Auto Program, Extra-Drying Function, Quick Wash
Display Type	LED
Product Dimensions (LxWxH)	59.8 x 80 x 60 Centimeters
Country of Origin	Turkey
Included Components	User Manual, Dishwasher, baskets, tray

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

This Hafele Aqua 13XL PRO Dishwasher comes with a 1 Year Warranty. For complete details on warranty terms and conditions, including coverage and exclusions, please refer to the warranty card included with your purchase or contact Hafele customer service directly.

Customer Support

For technical assistance, installation services, spare parts, or any other inquiries regarding your Hafele dishwasher, please contact Hafele customer support.

Manufacturer: Hafele India Pvt. Ltd.

Address: Sumeet Logistics & Industrial Park, Bldg. No. H6, Village Kuksa, Bhiwandi, Post Amane, Mumbai Nasik Highway, Dist. Thane, Maharashtra 421303

Returns Policy: A 10 days Replacement policy applies for this product.