Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > **EWA** /
- > EWA A117 Mini Portable Wireless Bluetooth Speaker User Manual

EWA A117 (Model No. 6959297706215)

EWA A117 Mini Portable Wireless Bluetooth Speaker User Manual

Brand: EWA | Model: A117 (Model No. 6959297706215)

1. Introduction

This manual provides essential information for the safe and effective use of your EWA A117 Mini Portable Wireless Bluetooth Speaker. Please read this manual thoroughly before operating the device and retain it for future reference. The EWA A117 is a compact, magnetic, and waterproof Bluetooth speaker designed for portable audio playback and can also function as a phone stand.

2. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- EWA A117 Mini Portable Wireless Bluetooth Speaker
- Micro USB Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

The EWA A117 speaker features a compact, round body with a magnetic base for versatile attachment. It includes a speaker grille on top and a control button, typically located on the side or base, for power and pairing functions.



Image: The EWA A117 Mini Portable Wireless Bluetooth Speaker in silver, showcasing its compact design and the magnetic base. A smartphone is shown attached to the speaker, demonstrating its use as a phone stand.

4. SETUP

4.1. Charging the Speaker

Before initial use, fully charge the speaker. Connect the provided Micro USB cable to the charging port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. A full charge takes approximately 1.5 hours and provides up to 10 hours of playback time.



Image: An illustration depicting the EWA A117 speaker being charged, with text indicating 'Up to 10 hours of play time and only 1.5 hours to fully charge'.

4.2. Bluetooth Pairing

- 1. **Power On:** Press and hold the power button (usually located on the base or side) until you hear an audible prompt or see an indicator light flash.
- 2. **Activate Pairing Mode:** The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED light (e.g., blue light).
- 3. **Enable Bluetooth on Your Device:** On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and turn Bluetooth on.
- 4. Select Speaker: In the list of available devices, locate and select "EWA A117" to connect.
- 5. Confirmation: Once successfully paired, the speaker will provide an audible confirmation, and the

LED indicator light will typically become solid.

The speaker utilizes Bluetooth 5.0 technology for faster and more reliable connectivity.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **To Power On:** Press and hold the power button for approximately 2-3 seconds.
- **To Power Off:** Press and hold the power button again for approximately 2-3 seconds.

5.2. Audio Playback and Controls

Once connected via Bluetooth, audio from your device will play through the EWA A117 speaker. Control methods are primarily touch-based, typically through your connected device.

5.3. Magnetic Functionality

The EWA A117 features a powerful built-in magnet in its base, allowing it to attach securely to various metal surfaces.



Image: A visual demonstrating the 'Magnetic Base Design' of the EWA A117 speaker, showing it attached to a refrigerator, a golf cart, and a bathroom fixture.

This feature makes it suitable for use on gym equipment, golf carts, refrigerators, and other metal objects. Additionally, the speaker can be used as a convenient phone stand or grip, especially with MagSafe-compatible iPhone models (iPhone 12/13/14/15 series) or cases.



Image: A collage showing the EWA A117 speaker attached to the back of a smartphone, demonstrating its use as a grip and a stand for MagSafe phone cases.

5.4. Waterproof Design

The EWA A117 speaker is designed with waterproof capabilities, making it suitable for use in environments where it might be exposed to water, such as at the beach, by the pool, or during camping and picnics. It is important to ensure the charging port cover is securely closed to maintain its waterproof integrity.



Image: The EWA A117 speaker partially submerged in water, illustrating its waterproof feature.

6. MAINTENANCE

- Cleaning: Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Storage: Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

• **Speaker does not power on:** Ensure the battery is charged. Connect the speaker to a power source using the Micro USB cable.

• Cannot pair with Bluetooth device:

- Ensure the speaker is in pairing mode (flashing LED).
- Make sure Bluetooth is enabled on your device.
- Move the speaker closer to your device.
- Turn off and on both the speaker and your device's Bluetooth.

· No sound or low volume:

- Increase the volume on both the speaker and your connected device.
- Ensure the speaker is properly paired.
- Check for any obstructions blocking the speaker grille.
- Magnetic attachment is weak: Ensure the surface is clean, flat, and made of a ferromagnetic metal. Avoid attaching to non-metallic or uneven surfaces.

8. SPECIFICATIONS

Feature	Specification
Model Name	A117 (6959297706215)
Material	Stainless Steel
Speaker Type	Subwoofer
Special Feature	Magnetic Back Snap
Compatible Devices	Smartphone
Color	Silver
Product Dimensions	2.25"D x 2.25"W x 2"H
Item Weight	0.12 Kilograms (4.2 ounces)
Water Resistance Level	Waterproof
Control Method	Touch
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered (1 Lithium Polymer battery included)
Speaker Maximum Output Power	3 Watts
Connectivity Technology	Bluetooth, USB
Audio Output Mode	Stereo

9. WARRANTY AND SUPPORT

The EWA A117 Mini Portable Wireless Bluetooth Speaker comes with a12-month warranty from the date of purchase. Additionally, a 30-day risk-free guarantee is provided. For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official EWA website.

Related Documents - A117 (Model No. 6959297706215)

	EWA A119 Mini Bluetooth Speaker User Manual User manual for the EWA A119 Mini Bluetooth Speaker, covering setup, TWS pairing, indicator status, specifications, important notices, and warranty information.
No.	EWA A17 Mini Karaoke Machine User Manual User manual for the EWA A17 Mini Karaoke Machine, detailing packaging contents, button interfaces, connection instructions, LED indicator guide, specifications, troubleshooting, notices, and FCC compliance.
	EWA A106Pro Wireless Speaker User Manual User manual for the EWA A106Pro wireless speaker, covering setup, connection, charging, commands, LED indicator guide, reset button, specifications, and important care instructions.
COLD COLD	EWA L102 Wireless Speaker User Manual Comprehensive user manual for the EWA L102 Wireless Speaker, covering packaging, button functions, connection, specifications, and important notices.
CO CO CO CO CO CO CO CO	EWA A106Max Portable Bluetooth Speaker User Manual & Quick Start Guide Comprehensive user manual for the EWA A106Max portable Bluetooth speaker. Learn about packaging, setup, button functions, Bluetooth connection, specifications, indicator lights, important notices, and warranty information from J.Y.M. Electronics Co., Ltd.
	EWA A119X Wireless Speaker User Manual User manual for the EWA A119X Wireless Speaker, covering packaging, quick start guide, TWS pairing, connection, specifications, indicator status, important notices, warranty information, manufacturer details, and FCC compliance. Includes detailed textual descriptions of diagrams and icons.