

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fastrack](#) /

› [Fastrack Urban Camo Quartz Analog Watch NT3295SM01 Instruction Manual](#)

Fastrack NT3295SM01

Fastrack Urban Camo Quartz Analog Watch - Model NT3295SM01

Instruction Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Fastrack Urban Camo Quartz Analog Watch, Model NT3295SM01. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Front view of the Fastrack Urban Camo Quartz Analog Watch, Model NT3295SM01, showcasing its white dial with a camouflage-inspired pattern and silver stainless steel strap.

PRODUCT OVERVIEW VIDEO

Watch this video for a general overview of the Fastrack Urban Camo Quartz Analog Watch, highlighting its design and key features.

Your browser does not support the video tag.

This video provides a visual introduction to the Fastrack Urban Camo Quartz Analog Watch, demonstrating its stainless steel case, white dial, silver strap, fold-over clasp, quartz movement, analog display, and water resistance.

SETUP

Adjusting the Strap

The watch features a silver stainless steel strap with a fold-over deployment clasp. To adjust the strap length, it may be necessary to remove or add links. This procedure typically requires specialized tools and is best performed by a professional watch technician or jeweler to avoid damage.



Angled view of the watch, highlighting the silver stainless steel strap and its fold-over deployment clasp mechanism.

OPERATING INSTRUCTIONS

Your Fastrack watch is equipped with a quartz analog movement and features a day and date display.

Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to the second click position.
2. Turn the crown to move the hands clockwise until the desired time is displayed. Ensure to set the correct AM/PM by observing the date change. If the date changes when setting the time past 12, it indicates midnight.
3. Push the crown back into its normal position to start the watch.

Setting the Day and Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise (depending on the specific movement) to adjust the date.
3. Turn the crown in the opposite direction to adjust the day.
4. Once the correct day and date are set, push the crown back into its normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this is when the watch's internal mechanism is engaged in changing the date, and manual adjustment during this period can cause damage.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For stainless steel components, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or abrasive materials.

Battery Replacement

Your watch is powered by a Lithium Polymer battery. When the watch stops or the second hand begins to jump irregularly, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from strong magnetic fields, which can affect the accuracy of the quartz movement.

WATER RESISTANCE GUIDELINES

This watch has a water resistance rating of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, showering, and general water exposure. However, it is **not** suitable for diving, snorkeling, or high-impact water sports.

- Do not operate the crown or pushers when the watch is wet or submerged.
- Ensure the crown is fully pushed in before any water exposure.
- Avoid exposing the watch to hot water or steam, as this can compromise the seals.



Rear view of the watch, showing the stainless steel back and engraved water resistance rating.

TROUBLESHOOTING

Watch Has Stopped

- **Possible Cause:** Depleted battery.
- **Solution:** Replace the battery. Consult a professional watch technician.

Incorrect Time/Date

- **Possible Cause:** Time/date not set correctly or crown pulled out.
- **Solution:** Refer to the "Setting the Time" and "Setting the Day and Date" sections to reset. Ensure the crown is fully pushed in.

Condensation Inside Watch

- **Possible Cause:** Exposure to extreme temperature changes or compromised water resistance.
- **Solution:** Seek immediate professional service to prevent internal damage.

SPECIFICATIONS

Feature	Detail
Brand	Fastrack
Model Number	NT3295SM01
Display Type	Analog
Movement	Quartz
Case Material	Stainless Steel
Strap Material	Stainless Steel
Dial Color	White (Urban Camo Texture)
Special Features	Day and Date Display, Second Hand
Water Resistance Depth	50 Meters (5 ATM)
Power Source	Battery Powered (1 Lithium Polymer battery included)
Product Dimensions	14 x 7 x 10 cm
Item Weight	200 g
Country of Origin	India

WARRANTY AND SUPPORT

Your Fastrack Urban Camo Quartz Analog Watch, Model NT3295SM01, comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Fastrack website. For any service or support inquiries, please contact Fastrack customer service or an authorized service center.



Side profile of the watch, showing the crown and the sleek design of the stainless steel case.