

OCEAN DRIVE X9 Plus

OCEAN DRIVE X9 Plus Electric Scooter User Manual

Model: X9 Plus

1. INTRODUCTION

Thank you for choosing the OCEAN DRIVE X9 Plus Electric Scooter. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.

2. SAFETY INFORMATION

Operating an electric scooter carries inherent risks. To minimize these risks, always adhere to the following safety guidelines:

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding.
- Do not ride in heavy rain, snow, or icy conditions. The scooter has an IPX5 water resistance rating, meaning it is resistant to splashes, but not immersion or heavy downpours.
- Observe all local traffic laws and regulations.
- Maintain a safe distance from other vehicles and pedestrians.
- Avoid riding on uneven surfaces, potholes, or obstacles.
- Do not exceed the maximum weight limit of 120 kg (264 lbs).
- Ensure the scooter is fully charged and all components are securely fastened before each use.
- Do not allow children under the age of 16 to operate the scooter.
- Avoid sudden braking, especially at high speeds, to prevent loss of control.

3. PACKAGE CONTENTS

Verify that all items are present in the box:

- OCEAN DRIVE X9 Plus Electric Scooter
- Charging Cable
- User Manual (this document)

4. SETUP AND ASSEMBLY

4.1 Unfolding the Scooter

1. Place the scooter on a flat surface.
2. Gently lift the handlebar stem until it locks into the upright position. Ensure the locking mechanism is fully engaged.
3. Tighten any visible clamps or screws on the handlebar stem to secure it.





Image: The OCEAN DRIVE X9 Plus Electric Scooter in its fully unfolded, ready-to-ride position. The image highlights the main components including the handlebars, vertical stem, foot deck, and both 10-inch wheels.

4.2 Folding the Scooter

1. Ensure the scooter is powered off.
2. Locate the folding latch mechanism at the base of the handlebar stem.
3. Press or pull the latch to release the stem.
4. Carefully fold the handlebar stem downwards until it clicks into place, securing it to the rear fender.



Image: The OCEAN DRIVE X9 Plus Electric Scooter shown in its folded configuration. The handlebar stem is collapsed and secured to the rear wheel fender, making the scooter compact for storage or transport.

4.3 Initial Charging

Before first use, fully charge the scooter's battery. The charging port is typically located on the side of the deck. Connect the charging cable to the scooter and then to a power outlet. The charging indicator light will change when charging is complete (refer to the scooter's display or indicator for specific behavior). Charging time is approximately 8-9 hours.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on: Press and hold the power button on the display for a few seconds.
- To power off: Press and hold the power button again until the display turns off.

5.2 Riding the Scooter

1. Place one foot firmly on the deck.
2. Use your other foot to push off the ground to gain initial momentum.
3. Once moving, gently press the accelerator lever with your thumb.
4. Place your second foot on the deck.
5. To steer, gently lean in the desired direction.

5.3 Speed Modes

The X9 Plus offers multiple speed modes:

- Mode 1: Up to 6 km/h
- Mode 2: Up to 15 km/h
- Mode 3: Up to 25 km/h (Maximum Speed)

To switch between modes, short press the power button while the scooter is on. The current mode will be indicated on the display.

5.4 Braking

The scooter is equipped with a front disc brake and a rear electronic ABS + disc brake system for effective stopping power.

- To brake, gently squeeze the brake levers on the handlebars.
- Apply both brakes simultaneously for balanced and efficient stopping.
- Avoid sudden, hard braking, especially at high speeds, to maintain stability.



Image: A top-down perspective of the OCEAN DRIVE X9 Plus Electric Scooter, showcasing the textured foot deck, the handlebar grips, brake levers, and the central display unit. This view helps in understanding the rider's interaction points.

5.5 Lights

The scooter features front and rear LED lights for visibility. To turn the lights on/off, typically a short press of the power button (or a dedicated light button if available) will toggle them. Always use lights when riding in low-light conditions.

6. MAINTENANCE

6.1 Cleaning

Wipe the scooter with a damp cloth. Do not use high-pressure water jets or immerse the scooter in water. Avoid using abrasive cleaners.

6.2 Tire Care

The X9 Plus is equipped with 10-inch anti-puncture pneumatic tires. Regularly check tire pressure and inflate to the recommended PSI (usually indicated on the tire sidewall) to ensure optimal performance and prevent punctures.

6.3 Battery Care

- Charge the battery regularly, even if the scooter is not in use, to prolong its lifespan.
- Avoid completely draining the battery before recharging.
- Store the scooter in a cool, dry place, away from direct sunlight and extreme temperatures.

6.4 Brake Adjustment

Periodically check the brake levers and cables for proper tension and responsiveness. If braking feels weak or inconsistent, consult a qualified technician for adjustment or replacement of brake pads.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; loose connections	Charge the battery; check all cable connections.
Reduced range/autonomy	Under-inflated tires; heavy load; riding uphill frequently; cold weather; aging battery	Check tire pressure; reduce load; avoid aggressive riding; ensure proper battery care.
Brakes feel weak	Worn brake pads; loose brake cable	Inspect brake pads and replace if necessary; adjust brake cable tension. Consult a technician if unsure.
Unusual noises during operation	Loose components; foreign object in wheel; motor issue	Inspect all parts for looseness; check wheels for obstructions. If noise persists, contact support.

If you encounter issues not listed here or require further assistance, please contact OCEAN DRIVE customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	X9 Plus Eu
Dimensions (Unfolded)	1110 x 500 x 1230 mm
Dimensions (Folded)	1110 x 500 x 540 mm
Net Weight	24 kg
Frame Material	Aluminum
Maximum User Weight	120 kg
Motor Power (Nominal)	36V, 500W (Max 850W)

Feature	Specification
Maximum Speed	25 km/h
Maximum Range	65 km
Climbing Angle	25°
Battery Type	Lithium
Battery Capacity	15.6 Ah
Charging Time	8-9 hours
Tire Size	10 inches
Tire Type	Anti-puncture Pneumatic
Brake System	Front Disc, Rear Electronic ABS + Disc
Water Resistance Rating	IPX5
Lights	Front LED, Rear LED

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The OCEAN DRIVE X9 Plus Electric Scooter comes with a **2-year limited warranty**. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For warranty claims, technical support, or any questions regarding your scooter, please contact OCEAN DRIVE customer service. Refer to your purchase documentation or the official OCEAN DRIVE website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question