



[Manuals.plus](#) /

- › [Emeril Lagasse](#) /
- › Emeril Lagasse Dual Zone 360 Air Fryer Oven Combo Instruction Manual

Emeril Lagasse 4-00718-02X

Emeril Lagasse Dual Zone 360 Air Fryer Oven Combo

Model: 4-00718-02X

INTRODUCTION

The Emeril Lagasse Dual Zone 360 Air Fryer Oven Combo is a versatile 10-in-1 kitchen appliance designed to simplify your cooking experience. It combines the functions of an air fryer, toaster oven, roaster, broiler, baker, and more, all within a spacious 25-quart capacity. Featuring innovative dual-zone technology and QuickSync capabilities, you can cook two different foods at varying temperatures simultaneously, ensuring both finish at the same time. This manual provides essential information for safe operation, maintenance, and optimal use of your new appliance.



Image: The Emeril Lagasse Dual Zone 360 Air Fryer Oven with its French doors closed, showcasing its sleek stainless steel design.

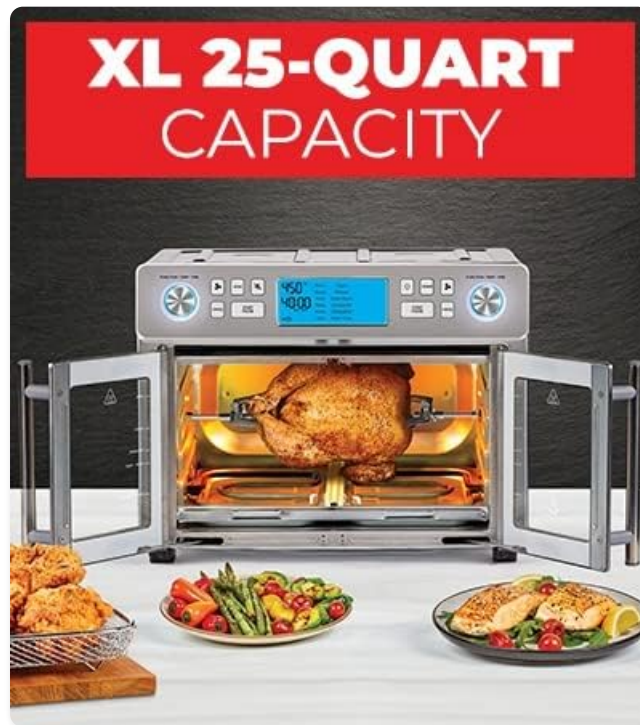


Image: A graphic highlighting the extra-large 25-quart capacity of the oven, capable of cooking substantial meals.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric

shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP AND ASSEMBLY

Unpacking and Initial Cleaning

Before first use, carefully unpack all components and remove any packaging materials. Wash all removable parts, such as the air fry baskets, bake pans, and drip tray, with warm, soapy water. Wipe the interior and exterior of the main unit with a clean, damp cloth. Ensure all parts are completely dry before assembly and use.

Placement

Place the appliance on a stable, level, heat-resistant surface. Ensure there is adequate air circulation around the unit, with at least 6 inches of clearance on all sides and above. Do not place the appliance directly against a wall or under cabinets.



Image: The Emeril Lagasse Dual Zone 360 Air Fryer Oven positioned on a kitchen counter, demonstrating appropriate clearance.

Component Identification

Your Emeril Lagasse Dual Zone 360 Air Fryer Oven comes with several accessories to enhance your cooking versatility:

- **Dual Air Fry Baskets:** For air frying smaller items or using the dual-zone function.
- **Bake Pans:** For baking, roasting, or collecting drips.
- **Wire Racks:** For general cooking and supporting other accessories.
- **Rotisserie Spit Set:** For roasting whole chickens or other large cuts of meat.
- **Drip Tray:** Collects excess oil and crumbs for easy cleaning.

INCLUDED ACCESSORIES



 
DUAL-ZONE AIRFRYER OVEN™



Large Bake Pan



2 Small Bake Pans



Large Wire Rack



2 Small Wire Racks



Rotisserie Spit Set



Image: A visual representation of all included accessories: large bake pan, two small bake pans, large wire rack, two small wire racks, and a rotisserie spit set.

OPERATING INSTRUCTIONS



Image: The Emeril Lagasse Dual Zone 360 Air Fryer Oven with its French doors open, revealing the interior cooking compartments.

Control Panel Overview

The appliance features an easy-to-read LED touchscreen and intuitive controls. Each cooking zone has its own set of controls for temperature, time, and function selection.

Your browser does not support the video tag.

Video: A demonstration of the control panel and various cooking functions of the Emeril Lagasse Dual Zone 360 Air Fryer Oven.

Cooking Functions

The Emeril Lagasse Dual Zone 360 Air Fryer Oven offers 24 cooking presets and 12 primary functions:

- **Air Fry:** For crispy, golden results with little to no oil.
- **Roast:** Perfect for meats and vegetables.
- **Bake:** Ideal for cookies, cakes, and casseroles.

- **Grill:** Achieve grilled marks and flavors indoors.
- **Slow Cook:** For tender, flavorful dishes cooked over a longer period.
- **Toast:** For perfectly browned toast and bagels.
- **Dehydrate:** Preserve fruits, vegetables, and meats.
- **Reheat:** Warm up leftovers quickly and efficiently.
- **Keep Warm:** Maintain food temperature until ready to serve.
- **Rotisserie:** For even cooking of whole poultry or roasts.
- **Pizza:** Dedicated setting for perfect pizzas.
- **Broil:** For quick browning and melting.



Air Fry

Bake

Pizza

Reheat

Dehydrate

Rotisserie

12-IN-1 VERSATILITY

Roast

Broil

Grill

Toast

Keep Warm

Slow Cook



Image: A collage showcasing various dishes prepared using the 12-in-1 versatility of the oven, including air-fried chicken, baked goods, pizza, and roasted meats.



Image: Bagels being toasted on a rack inside the Emeril Lagasse Dual Zone 360 Air Fryer Oven, demonstrating the 'Toast' function.

Using Dual Zones and QuickSync Technology

The dual-zone feature allows you to cook two different foods simultaneously with independent temperature and time settings. The QuickSync Technology ensures both zones finish cooking at the same time, perfect for preparing a complete meal.

1. Place food items in their respective air fry baskets or bake pans.
2. Insert the accessories into the desired cooking zones.
3. Select the appropriate cooking function, temperature, and time for each zone using the dedicated controls.
4. Activate QuickSync if you wish for both zones to finish simultaneously. The oven will automatically adjust cooking times.
5. Press Start/Pause to begin cooking.

COOK 2 FOODS 2 WAY

Custom Settings
In Each Zone

Finish At The Same Time



Image: A graphic illustrating the dual-zone capability, showing air-fried food on one side and roasted food on the other, with custom settings for each.

Cooking from Frozen

This appliance is designed to cook many foods directly from frozen, saving you time. Adjust cooking times as needed for frozen items.



Image: A woman carefully placing a tray of food into one of the oven's compartments, demonstrating ease of use.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your appliance.

General Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior with a clean, damp cloth. Do not use abrasive cleaners or scouring pads.
- For the interior, wipe with a damp cloth and mild detergent. For stubborn stains, a non-abrasive liquid cleanser can be used.

Cleaning Accessories

- All removable accessories, including air fry baskets, bake pans, wire racks, and the drip tray, are dishwasher safe

for convenient cleaning.

- For manual cleaning, wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing.

TROUBLESHOOTING

If you encounter any issues with your Emeril Lagasse Dual Zone 360 Air Fryer Oven, please refer to the following common solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food not cooking evenly.	Overcrowding; incorrect temperature/time.	Do not overcrowd baskets/pans. Ensure proper temperature and cooking time are set. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Excess oil/grease in drip tray; fatty foods.	Clean the drip tray regularly. For fatty foods, drain excess grease during cooking.
Error code displayed.	Internal malfunction.	Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

- **Model Name:** Extra Large Everyday Dual Zone French Door
- **Model Number:** 4-00718-02X
- **Brand:** Emeril Lagasse
- **Capacity:** 25 Quarts
- **Product Dimensions:** 17.72"D x 15.94"W x 14.17"H
- **Item Weight:** 30.6 pounds
- **Material:** Stainless Steel
- **Color:** Stainless Steel
- **Wattage:** 1750 Watts
- **Voltage:** 120 Volts
- **Control Method:** Touchscreen
- **Min Temperature Setting:** 75 Degrees Fahrenheit
- **Max Temperature Setting:** 360 Degrees Fahrenheit
- **Special Features:** Dual Zone Features, Temperature Control, Timer, Programmable

WARRANTY AND SUPPORT

Your Emeril Lagasse Dual Zone 360 Air Fryer Oven Combo is backed by a manufacturer's warranty. For detailed warranty information, product registration, or customer support, please refer to the warranty card included in your packaging or visit the official Emeril Lagasse website. You can also find additional resources and recipes to maximize your cooking experience.

For further assistance, please contact Emeril Lagasse Customer Service.

