

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Digital Alarm Clock User Manual](#)

## Timex T1320W

# Timex Digital Alarm Clock User Manual

Model: T1320W

## INTRODUCTION

Thank you for purchasing the Timex Digital Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use to ensure proper functionality and to maximize your product experience.


This alarm clock features a large LED display, dual alarms, a built-in 5W USB-A charging port, and a battery backup system.

## PACKAGE CONTENTS

- Timex Digital Alarm Clock (Model T1320W)
- 100-240V Universal Power Adapter
- CR2032 Battery (pre-installed for backup)
- User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the various components of your Timex Digital Alarm Clock.

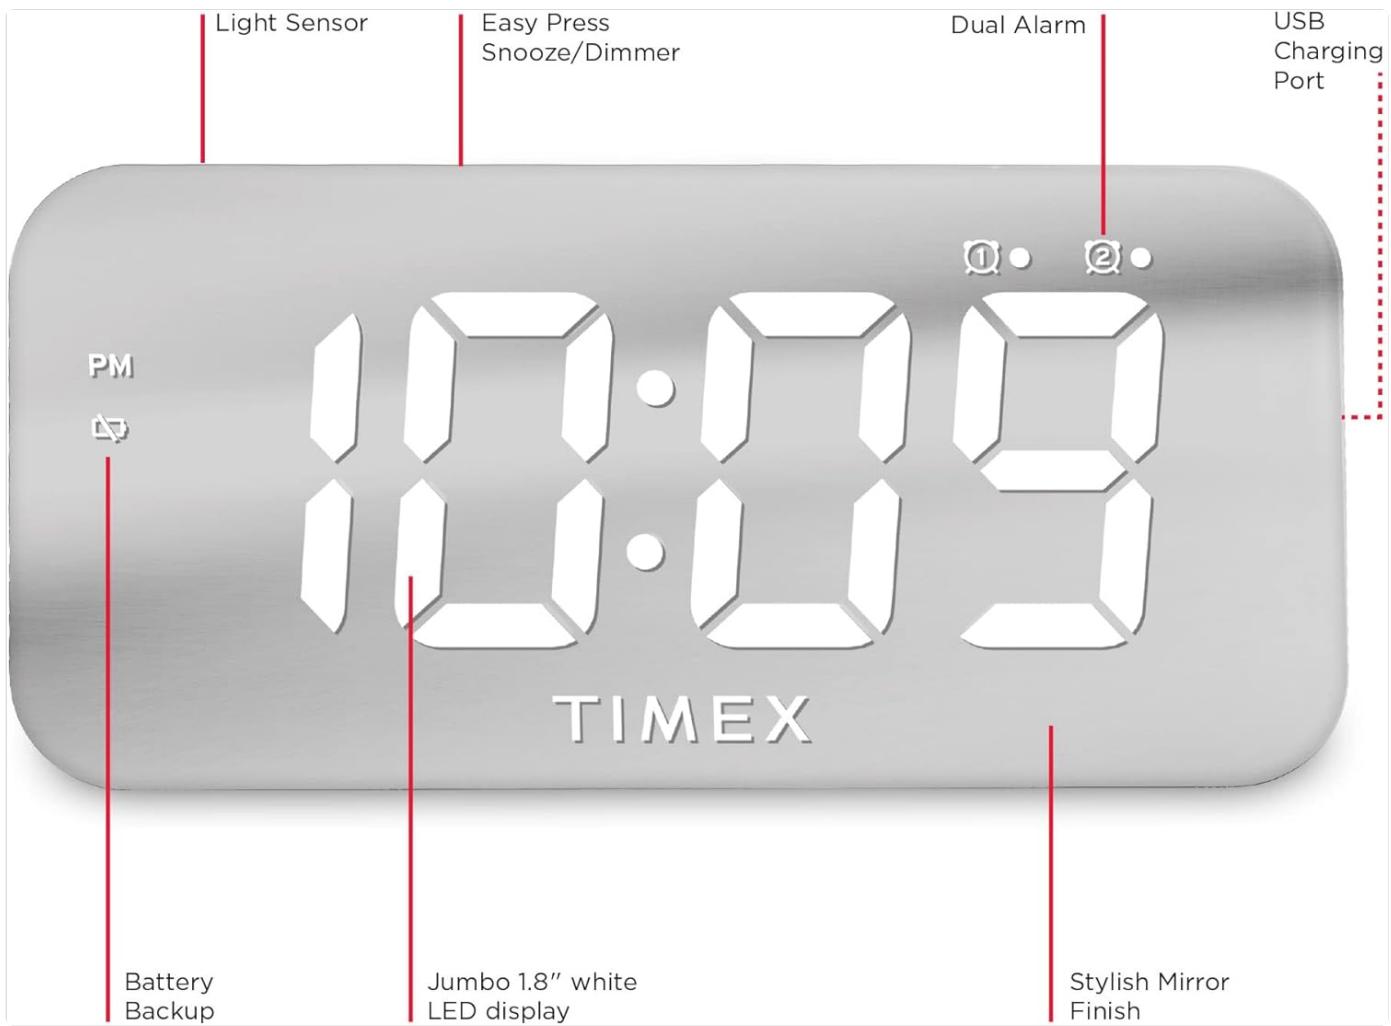

**Figure 1: Front View with Labeled Components**

This image displays the front of the Timex T1320W alarm clock, highlighting key features such as the large 1.8" white LED display, PM indicator, battery backup indicator, light sensor, snooze/dimmer button, dual alarm indicators (1 and 2), and the USB charging port on the side. The image helps users identify the various controls and indicators on the device.

# TIMEX®



**USB  
Charging**



**Stylish  
MIRROR  
Finish**



**Dual  
Alarm**

**Figure 2: USB Charging Port in Use**

This image shows the Timex T1320W alarm clock with a smartphone connected to its side-mounted USB-A charging port, demonstrating the 5W charging capability. The clock displays the time 10:09, and the phone screen indicates it is charging. This illustrates a primary feature of the alarm clock.

## SETUP

### Power Connection

1. Unpack the Timex Digital Alarm Clock and its universal power adapter.
2. Insert the small plug of the power adapter into the DC IN jack located on the back of the alarm clock.
3. Plug the power adapter into a standard 100-240V AC wall outlet.
4. The display will light up, indicating the clock is powered on.

### Battery Backup Installation (if not pre-installed)

The clock comes with a pre-installed CR2032 battery for backup. This battery maintains time and alarm settings during a temporary power outage. If the battery needs replacement:

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert one CR2032 battery, ensuring the correct polarity (+/-).
4. Close the battery compartment cover securely.



**Figure 3: Rear View with Battery Compartment**

This image shows the rear of the Timex T1320W alarm clock, highlighting the battery compartment cover and the DC power input. This view is essential for understanding how to install or replace the backup battery and connect the power adapter.

## OPERATING INSTRUCTIONS

### Setting the Time

1. Press and hold the **TIME SET** button (usually located on the top or back) until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Observe the PM indicator for correct AM/PM setting.
3. Press the **MINUTE** button repeatedly to adjust the minutes.
4. Press the **TIME SET** button again to confirm and exit time setting mode.

### Setting the Alarm (Alarm 1 and Alarm 2)

This clock features dual alarms, allowing you to set two independent wake-up times.

1. Press and hold the **ALARM 1 SET** button until the alarm hour digits flash.
2. Press the **HOUR** button to adjust the alarm hour.
3. Press the **MINUTE** button to adjust the alarm minutes.
4. Press the **ALARM 1 SET** button again to confirm.
5. To activate Alarm 1, press the **ALARM 1 ON/OFF** button. The Alarm 1 indicator will light up on the display.
6. Repeat steps 1-5 for **ALARM 2 SET** and **ALARM 2 ON/OFF** buttons to set the second alarm.

## Snooze Function

When the alarm sounds, press the large **SNOOZE/DIMMER** button (usually on top) to temporarily silence the alarm. The alarm will sound again after approximately 9 minutes.

## Turning Off the Alarm

To turn off the alarm completely after it sounds, press the corresponding **ALARM ON/OFF** button (e.g., **ALARM 1 ON/OFF** for Alarm 1). The alarm indicator will turn off.

The alarm reset button turns off the alarm and automatically resets it for the next day.



**Figure 4: Alarm Reset Feature**

This image depicts a woman sleeping, with the Timex T1320W alarm clock on her nightstand. Text overlays indicate "Alarm Reset Button Turns Off Alarm and Automatically Resets It for the Next Day" and "Sure Alarm Battery Backup." This visually explains the convenience of the alarm reset and the reliability of the battery backup.

## Display Dimmer

Press the **SNOOZE/DIMMER** button repeatedly (when the alarm is not sounding) to cycle through different display brightness levels. The clock also features an automatic light sensor that adjusts display brightness based on room lighting conditions.



**Figure 5: Auto Dimmer Function**

This image illustrates the auto dimmer feature of the Timex T1320W alarm clock. It shows the clock with its large 1.8" LED display, and text indicates "Auto Dimmer" and "Light Sensor with Automatic Display Dimming," demonstrating how the display brightness adjusts automatically to ambient light.

## USB Charging Port

The 5W USB-A charging port is located on the side of the clock. Connect your smartphone, tablet, or other USB-powered device using your device's charging cable (not included) to charge it.

*Note: The USB charging port is for charging devices only and does not transfer data.*

## MAINTENANCE

### Cleaning

- Unplug the alarm clock from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use liquid cleaners, abrasive cleaners, or sprays, as they may damage the finish or internal components.

## Battery Replacement

The CR2032 backup battery typically lasts for several years. If the clock loses time or alarm settings during a power outage, it's time to replace the battery. Refer to the "Battery Backup Installation" section under Setup for instructions.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	No power connection.	Ensure the power adapter is securely plugged into the clock and a working wall outlet.
Alarm does not sound.	Alarm not activated or set incorrectly.	Verify that the alarm is set to the correct time and the alarm indicator (1 or 2) is lit on the display.
Time/alarm settings lost after power outage.	Backup battery is dead or missing.	Replace the CR2032 backup battery.
USB charging is slow or not working.	Device requires more than 5W; faulty cable; device not compatible.	Ensure your device is compatible with 5W charging. Try a different USB cable. Ensure the clock is powered.

## SPECIFICATIONS

- **Model:** T1320W
- **Display:** 1.8" White LED
- **Power Source:** AC Powered (100-240V Universal Power Adapter included)
- **Battery Backup:** 1 x CR2032 (included)
- **USB Charging Port:** 5W USB-A
- **Dimensions:** 1.58"W x 3.23"H
- **Weight:** 10.5 ounces
- **Manufacturer:** SDI Technologies

## WARRANTY AND SUPPORT

This Timex product is covered by a Limited Warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Timex website.

For technical support or customer service, please visit the [Timex Brand Store on Amazon](#) or contact Timex customer support directly.

