

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control User Manual for Dune HD Boxes (Models: 53D Lite, TV-101, TV-102, TV-301, TV-303, Smart Base, Duo, Max, Solo)

ECONTROLLY 53D Lite, TV-101, TV-102, TV-301, TV-303, Smart Base, Duo, Max, Solo

ECONTROLLY Replacement Remote Control User Manual

For Dune HD Boxes: 53D Lite, TV-101, TV-102, TV-301, TV-303, Smart Base, Duo, Max, Solo

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your ECONTROLLY replacement remote control. This remote is designed to be compatible with various Dune HD box models, offering a straightforward solution for controlling your device.

Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

PRODUCT OVERVIEW



Figure 1: Front view of the ECONTROLLY replacement remote control. This image displays the layout of all buttons, including power, navigation, playback, and numeric keys.

The ECONTROLLY replacement remote control is an infrared (IR) device designed to function as a direct replacement for original Dune HD box remotes. It features a standard button layout for easy navigation and control of your media player.

SETUP AND BATTERY INSTALLATION

This remote control requires no programming or pairing. Simply install the batteries, and it will be ready for use with your compatible Dune HD box.

Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



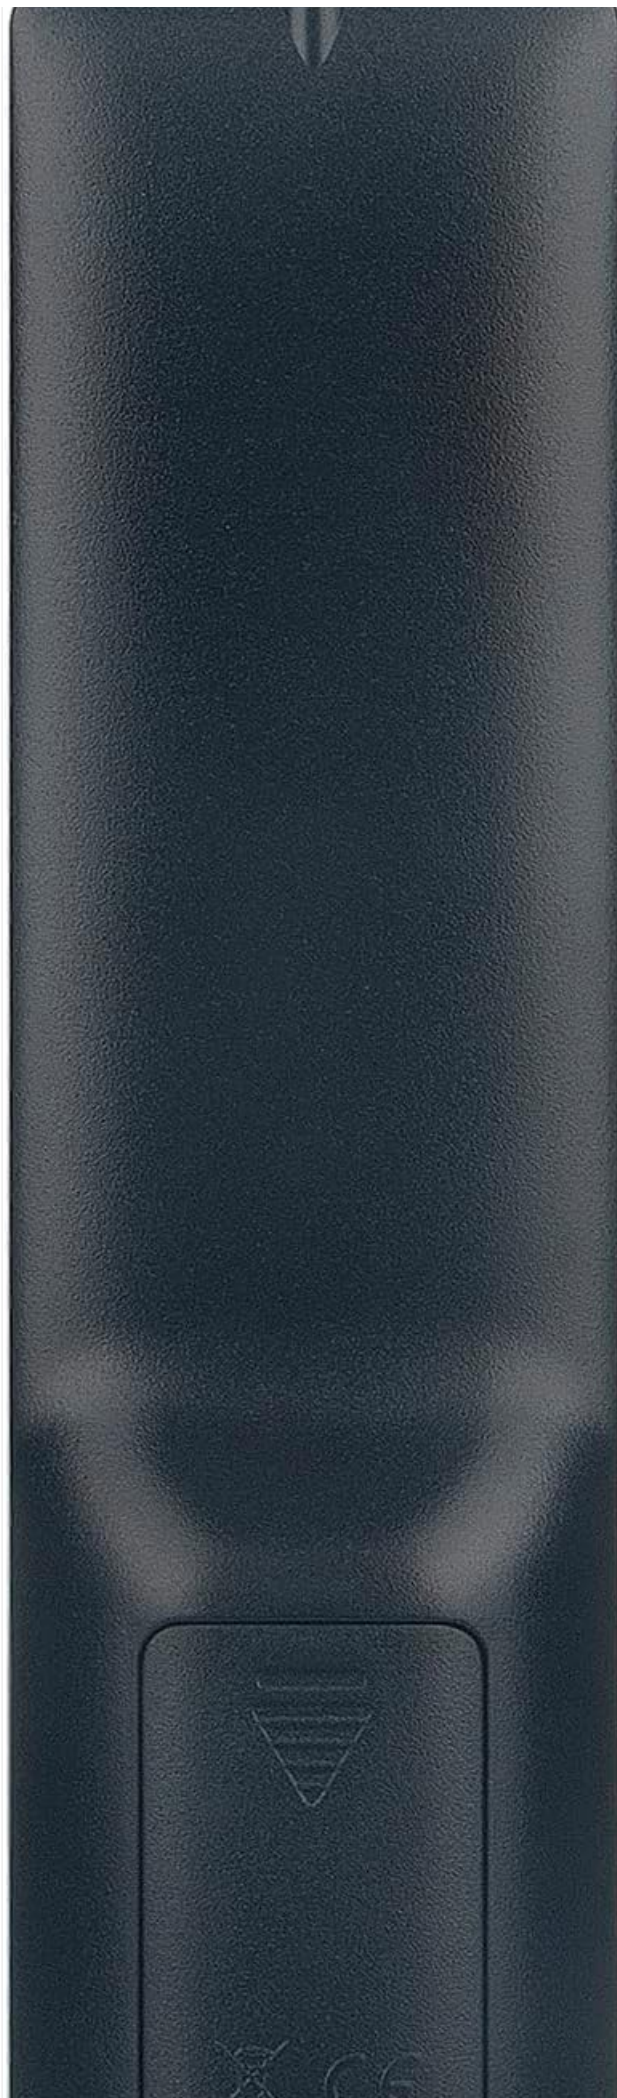




Figure 2: Back view of the remote control, highlighting the battery compartment.

Important: Use only new alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Dune HD box. The remote operates using infrared signals, so ensure there are no obstructions between the remote and the device.

Key Functions:

- **POWER:** Turns the Dune HD box on or off.
- **Navigation (Arrow Keys & ENTER):** Used to navigate menus and select options.
- **MENU / TOP MENU:** Accesses the main menu or top-level menu of your device.
- **PLAY / PAUSE / STOP / FWD / REV:** Controls media playback.
- **VOLUME +/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **Numeric Keys (0-9):** For direct channel selection or inputting numbers.
- **Colored Buttons (A, B, C, D):** These buttons typically correspond to specific functions within applications or menus, as indicated on your screen.
- Other buttons like **INFO, ZOOM, SUBTITLE, AUDIO** provide access to specific features of your Dune HD box.

Refer to your Dune HD box's user manual for specific functions of each button within its operating system.

MAINTENANCE

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and markings.
- Avoid getting liquids inside the remote control.

Storage:

- Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- If not used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control is not working.	• Dead or incorrectly inserted batteries. • Obstruction between remote and Dune HD box. • Remote is out of range.	• Replace batteries with new AAA alkaline batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the Dune HD box. • Move closer to the Dune HD box (within approximately 20 feet or 6 meters).
Buttons are unresponsive or sticky.	• Dirt or debris under buttons. • General wear and tear.	• Clean the remote control as described in the Maintenance section. • If the issue persists, the remote may need replacement.

SPECIFICATIONS

- **Brand:** ECONTROLLY
- **Compatible Devices:** Dune HD Boxes (53D Lite, TV-101, TV-102, TV-301, TV-303, Smart Base, Duo, Max, Solo)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** Approximately 7 x 2 x 0.65 inches
- **Item Weight:** Approximately 3 ounces (without batteries)
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (specific Dune HD box)

WARRANTY AND SUPPORT

Specific warranty information for this ECONTROLLY replacement remote control is not provided in this manual. For details regarding warranty coverage, please refer to the product packaging or contact the seller directly. For technical support or further assistance, please contact the seller or the ECONTROLLY manufacturer through their official support channels.