

SENIX GTX2-M

SENIX 20V 10-inch Cordless String Trimmer GTX2-M Instruction Manual

Model: GTX2-M

1. INTRODUCTION

This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your SENIX 20V 10-inch Cordless String Trimmer, Model GTX2-M. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of injury, the user must read the instruction manual.

WARNING: Wear protective eyewear and gloves to prevent injury from flying debris. Keep bystanders and children away from the work area. Avoid contact with the trimmer line. Do not use near flammable materials.

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, long pants, and sturdy footwear.
- Ensure the battery is removed before performing any adjustments, cleaning, or maintenance.
- Keep hands and feet away from the cutting line at all times, especially when the tool is operating.
- Inspect the work area for debris, rocks, or other objects that could be thrown by the cutting line.
- Do not operate the trimmer in wet conditions or rain.
- Store the trimmer and battery in a dry, secure location away from children.

3. PACKAGE CONTENTS

Upon unpacking, ensure all items listed below are present and undamaged. If any parts are missing or damaged, contact SENIX customer service.

- SENIX 20V Cordless String Trimmer (Main Unit)
- Auxiliary Handle
- Safety Guard
- 2.5Ah Lithium-ion Battery
- 2A Charger
- Instruction Manual

Video: Unpacking and initial overview of the SENIX X2 20V Max string trimmer components.

4. ASSEMBLY

Follow these steps to assemble your string trimmer. Always wear protective gloves during assembly.

1. **Attach the Safety Guard:** Align the safety guard with the trimmer head and snap it into place. Ensure it is securely fastened to protect against debris.
2. **Install the Auxiliary Handle:** Loosen the knob on the main shaft. Slide the auxiliary handle onto the shaft and adjust it to a comfortable working position. Tighten the knob securely.
3. **Insert the Battery:** Ensure the battery is fully charged. Slide the battery pack into the battery slot on the main handle until it clicks into place. To remove, press the release button and slide the battery out.

TRIGGER SWITCH

ADJUSTABLE HEAD & HANDLE

Allows for improved ergonomics

SAFETY LOCK BUTTON

TELESCOPING SHAFT

Easily adjust the length

BATTERY PACK

With 2.0 Ah lithium-ion battery & 2 Amp charger

180 DEGREE ROTATING SHAFT

Ideal for trimming or edging

AUTOMATIC LINE FEED

Advances line without bump

10" CUT SWATH

Allows for working in tight spaces

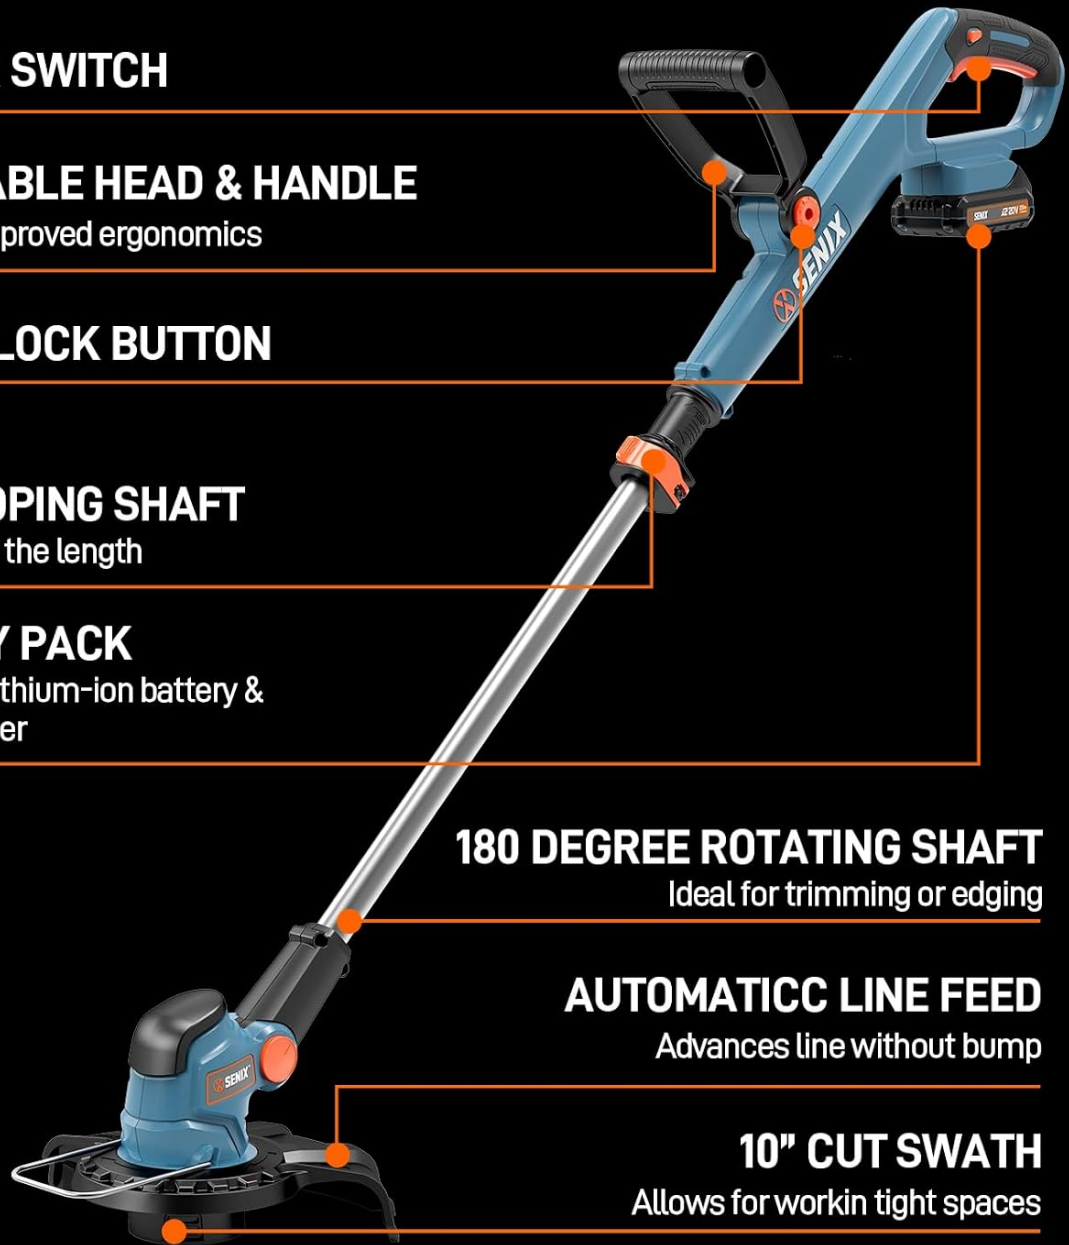


Image: Detailed diagram showing the various adjustable components of the SENIX string trimmer.

Video: Demonstrates the assembly process, including attaching the guard, auxiliary handle, and battery installation (from 0:59 to 1:53).

5. OPERATION

Familiarize yourself with the trimmer's functions before beginning work.

5.1 Starting and Stopping

- To start the trimmer, press the safety lock button and then squeeze the trigger switch.
- To stop, release the trigger switch.

Video: Demonstrates the operation of the trigger and safety lock button (from 3:01 to 3:09).

5.2 Adjustments

- **Telescoping Shaft:** Adjust the shaft length by loosening the collar, extending or retracting the shaft, and then tightening the collar.
- **Head Angle:** The trimmer head can be adjusted for different cutting angles, including edging.
- **Auxiliary Handle:** Adjust the angle of the auxiliary handle for optimal comfort and control.



Image: Ergonomic features allowing for adjustable head and auxiliary handle angles.

Video: Demonstrates adjusting the auxiliary handle, head angle, and telescoping shaft (from 1:57 to 2:57).

5.3 Trimming and Edging

- The 10-inch cutting width is ideal for various tasks.
- The 360-degree rotating shaft allows for easy conversion from trimming to edging without tools.
- The automatic line feed system advances the trimmer line as needed.



2-IN-1

TRIMMING & EDGING

With a **10"** cutting width & a **180-degree** turn for both edging & trimming

Image: The 2-in-1 functionality for trimming and edging.

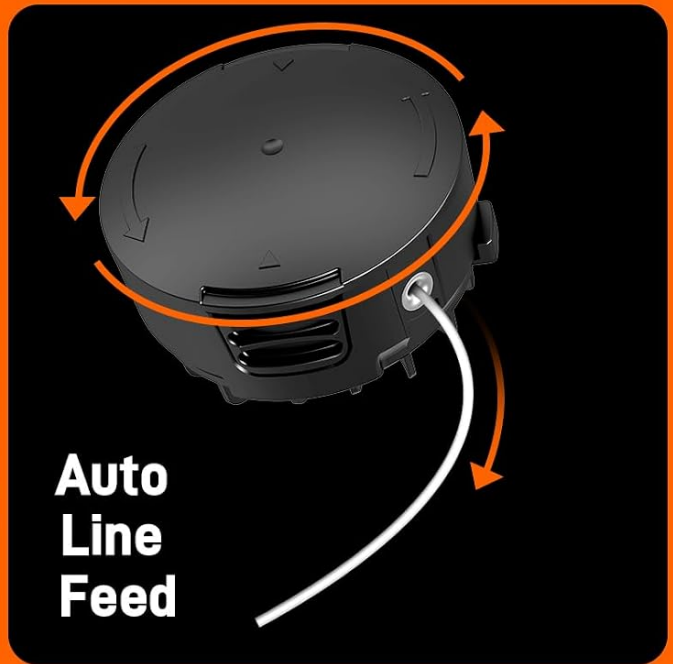


Image: The automatic line feed system in action.

6. FEATURES

- Powered by a SENIX 20V Max 2.5 Ah lithium-ion battery for extended run time.
- Automatic feed spool for continuous trimming without manual adjustment.
- 10-inch cutting width with a single 0.065" trimmer line spool.
- 360-degree rotating head converts from trimmer to edger.
- Brushless motor for quiet operation and easy starting.
- Adjustable angle auxiliary handle for comfortable operation.
- Telescopic shaft for easy transportation and storage.



UP TO 38 MINUTES OF RUNTIME
With 2.5Ah Battery

Image: Illustrates the extended runtime of up to 38 minutes with the 2.5Ah battery.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your trimmer.

- **Cleaning:** After each use, remove the battery and clean the trimmer head, guard, and air vents with a soft brush or cloth. Do not use water or solvents.
- **Trimmer Line Replacement:** When the trimmer line runs out, replace it with 0.065" diameter line. Refer to the full manual for detailed instructions on spool replacement.
- **Battery Care:** Store the battery in a cool, dry place. Do not expose it to extreme temperatures. Fully charge the battery before long-term storage.
- **Inspection:** Periodically check all fasteners, nuts, and bolts for tightness. Inspect the cutting line and guard for wear or damage.

8. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not start	Battery not inserted correctly or discharged; Safety lock not engaged; Trigger not pressed.	Ensure battery is fully charged and properly seated. Press safety lock button before squeezing trigger.
Trimmer line does not advance	Line is tangled or too short; Spool is empty; Debris in trimmer head.	Remove battery, clear debris, untangle line, or replace spool.
Reduced cutting performance	Dull or worn line; Low battery charge.	Replace trimmer line; Recharge battery.

For further assistance, contact SENIX customer support.

9. SPECIFICATIONS

Specification	Value
Brand	SENIX
Model Number	GTX2-M
Power Source	Battery Powered (20V Max Lithium-ion)
Battery Capacity	2.5 Ah (included)
Charger	2A Charger (included)
Cutting Width	10 Inches
Trimmer Line Diameter	0.065 Inches
Speed	7000 RPM
Item Weight	4.32 Pounds
Item Dimensions (L x W)	38.98"L x 9.84"W
Assembly Required	Yes

10. WARRANTY AND SUPPORT

The SENIX 20V 10-inch Cordless String Trimmer (Model GTX2-M) comes with a 5-year limited warranty for peace of mind. For warranty registration and further support, please visit the official SENIX website.

Official Website: www.senixtools.com

Video: Information on warranty registration at www.senixtools.com (from 3:17 to 3:22).

© 2026 SENIX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question