

[Manuals.plus](#) /

> [Remington](#) /

> Remington 32mm Main Trimmer Head Replacement Manual for PG6250, PG6251, PG6255

Remington RE-RP00277

Remington 32mm Main Trimmer Head Replacement Manual

FOR MODELS PG6250, PG6251, PG6255

1. Introduction

This manual provides essential instructions for the proper installation, use, and maintenance of your Remington 32mm Main Trimmer Head replacement part. This replacement head is specifically designed for use with Remington personal groomer models PG6250, PG6251, and PG6255. Please read these instructions carefully before attempting to replace or use the trimmer head to ensure optimal performance and longevity of your device.

The Remington 32mm Main Trimmer Head is engineered to provide precise trimming for various grooming needs, restoring your groomer's performance to its original standard.

2. Safety Information

Always adhere to the following safety guidelines when handling and installing the trimmer head:

- Ensure the personal groomer is turned off and unplugged from any power source before attempting to remove or install the trimmer head.
- Handle the trimmer head with care. The blades are sharp.
- Keep the trimmer head and all groomer components out of reach of children.
- Do not use the trimmer head if it appears damaged or if the blades are bent or broken.
- Only use this replacement head with the specified Remington groomer models (PG6250, PG6251, PG6255).

3. Setup and Installation

Follow these steps to correctly install your new Remington 32mm Main Trimmer Head:

1. **Prepare the Groomer:** Ensure your Remington personal groomer (PG6250, PG6251, or PG6255) is turned off and unplugged.

2. **Remove the Old Trimmer Head:** Gently twist or pull the existing trimmer head upwards from the groomer body. Refer to your original groomer's manual for specific removal instructions if you encounter difficulty.
3. **Attach the New Trimmer Head:** Align the new 32mm Main Trimmer Head with the groomer body. Press down firmly until you hear a click, indicating it is securely locked into place. Ensure the head is flush with the groomer body and does not wobble.
4. **Verify Installation:** Gently tug on the installed head to confirm it is firmly attached.



Image: The Remington 32mm Main Trimmer Head. This image displays the replacement head, which is designed for easy attachment to compatible Remington personal groomers. It features a metallic blade assembly and a plastic base for secure fitting.

4. Operating Instructions

Once the new trimmer head is securely installed, your groomer is ready for use. Refer to your original Remington personal groomer manual for detailed operating instructions, including how to turn the device on/off, select settings, and proper trimming techniques for various hair types and areas.

The 32mm Main Trimmer Head is designed for general trimming and shaping. For best results, ensure your groomer is fully charged before use.

5. Maintenance and Cleaning

Regular cleaning and maintenance will extend the life of your trimmer head and ensure consistent performance.

1. **Daily Cleaning:** After each use, turn off and unplug the groomer. Remove the trimmer head and use the cleaning brush (usually supplied with your groomer) to brush away any accumulated hair from the blades and the inside of the head.
2. **Rinsing (if applicable):** If your groomer model is washable, you may rinse the trimmer head under running water. Ensure the head is completely dry before reattaching it to the groomer or storing it. *Do*

not rinse the groomer body unless explicitly stated in its original manual.

- 3. **Lubrication:** Periodically, apply a small drop of clipper oil (not included, but often supplied with groomers) to the blades to maintain smooth operation and prevent rust. Turn the groomer on for a few seconds to distribute the oil.
- 4. **Storage:** Store the trimmer head and groomer in a cool, dry place, away from direct sunlight and moisture.

6. Troubleshooting

If you encounter issues with your new trimmer head, consider the following common solutions:

- **Trimmer Head Not Attaching Securely:**
 - Ensure the head is correctly aligned with the groomer body.
 - Apply firm, even pressure until it clicks into place.
 - Check for any debris obstructing the connection point on either the head or the groomer body.
- **Poor Trimming Performance:**
 - Clean the trimmer head thoroughly to remove any trapped hair or debris.
 - Apply clipper oil to the blades.
 - Ensure the groomer's battery is fully charged.
 - If performance issues persist, the blades may be dull, indicating a need for a new replacement head.
- **Unusual Noise or Vibration:**
 - Verify the trimmer head is securely attached and not loose.
 - Clean and lubricate the blades.
 - If the noise originates from the groomer body itself, consult your original groomer manual or contact Remington support.

7. Specifications

Feature	Detail
Product Name	Remington 32mm Main Trimmer Head
Model Number	RE-RP00277
Compatibility	Remington Personal Groomer Models PG6250, PG6251, PG6255
Dimensions (Approx.)	3 x 2 x 0.2 inches
Weight (Approx.)	1.76 ounces
Manufacturer	Remington

8. Warranty and Support

For information regarding the warranty of your Remington replacement part, please refer to the documentation included with your original Remington personal groomer or visit the official Remington

website. Warranty terms and conditions may vary.

If you require further assistance, have questions about installation, or need to report a defect, please contact Remington Customer Support through their official website or the contact information provided in your original groomer's manual. Always provide the model number of your groomer (PG6250, PG6251, or PG6255) and the replacement head model number (RE-RP00277) when seeking support.

You can find more information and support on the [Remington Store on Amazon](#).