

Motorola MT150

Motorola MT150 Cordless Phone User Manual

Model: MT150

1. INTRODUCTION

The Motorola MT150 Cordless Phone is designed for practical and efficient communication. Featuring DECT 6.0 digital technology, it ensures high-quality calls, minimizes interference, and provides clear, secure audio. This manual provides comprehensive instructions for setting up, operating, and maintaining your MT150 cordless phone system.

Key features include:

- Multi-handset digital technology (DECT 6.0), expandable up to 4 handsets.
- Illuminated display for easy viewing.
- Caller ID (DTMF/FSK/Bellcore) to identify incoming calls.
- Integrated speakerphone for hands-free conversations.
- Phonebook capacity for 50 names and numbers.
- Conference call capability, allowing an external call to be shared with two handsets.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 Handset
- 1 Base Unit
- 1 Telephone Line Cord
- 1 Bivolt Power Adapter (6 VDC / 450 mA)
- 2 Rechargeable AAA Batteries (400mAh)
- 1 User Manual
- 1 Quick Guide
- 1 Technical Assistance Guide



Image: The Motorola MT150 cordless phone, showing the black handset resting in its black base unit. The handset features an illuminated blue display and a standard numeric keypad with function buttons.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards to remove it.
3. Insert the two supplied AAA rechargeable batteries, observing the correct polarity (+ and -).

4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

3.2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the LINE jack on the back of the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Connect the small end of the power adapter to the POWER jack on the back of the base unit.
4. Plug the large end of the power adapter into a standard electrical outlet.



Image: A side view of the Motorola MT150 cordless phone, showing the handset angled in its base. This view highlights the ergonomic design and the placement of the handset within the charging cradle.

3.3. Charging the Handset

Place the handset on the base unit. The display will indicate that it is charging. For optimal battery performance, allow the handset to charge for at least 12-16 hours before its first use, even if the display indicates a full charge sooner.

3.4. Handset Registration (for multiple handsets)

The MT150 supports up to 4 handsets. If you purchase additional handsets, they will need to be registered to the base unit. Refer to the "Technical Assistance Guide" for detailed instructions on handset registration.

4. OPERATING INSTRUCTIONS

4.1. Making and Receiving Calls

- **Making a Call:** Press the **Talk** button, then dial the number. Alternatively, dial the number first, then press **Talk**.
- **Receiving a Call:** When the phone rings, press the **Talk** button.
- **Ending a Call:** Press the **End** button or place the handset back on the base unit.

4.2. Caller ID

The phone displays the number of the incoming call (if available and subscribed to Caller ID service from your telephone provider). The last 20 identified calls are stored in the call history.

4.3. Phonebook

Store up to 50 names and numbers in the phonebook. Use the menu navigation buttons to access, add, edit, or delete entries.

4.4. Speakerphone (Viva Voz)

During a call, press the **Speakerphone** button to activate hands-free mode. Press it again to return to handset mode.

4.5. Redial

Press the **Redial** button to view the last 10 dialed numbers. Select a number and press **Talk** to redial.

4.6. Mute Function

During a call, press the **Mute** button to temporarily turn off your microphone. The other party will not hear you. Press **Mute** again to resume conversation.

4.7. Conference Call

The conference feature allows an external call to be shared simultaneously with two handsets registered to the same base unit. Consult the "Technical Assistance Guide" for specific steps on initiating a conference call.

4.8. Volume Adjustment

- **Handset Volume:** During a call, use the navigation buttons to adjust the earpiece volume (5 levels).
- **Ringer Volume:** Adjust the ringer volume for the handset (5 levels + off) through the menu settings. There are 5 distinct ringtones available.

4.9. Keypad Lock

To prevent accidental dialing, you can lock the keypad. Refer to the handset menu for the keypad lock option.

4.10. Alarm Function

The handset includes an alarm function. Set the alarm time and tone through the menu settings.

4.11. Handset Locator (PAGE)

If you misplace your handset, press the **PAGE** button on the base unit to make the handset ring.

4.12. Language Selection

The phone supports 9 language options, including Portuguese, English, and Spanish. You can change the display language through the handset's settings menu.

5. MAINTENANCE

5.1. Cleaning

Wipe the phone and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure no liquid enters the phone's openings.

5.2. Battery Care

- Always use the supplied rechargeable batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

If you experience issues with your Motorola MT150, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No dial tone.	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the power adapter is properly connected to the base unit and the electrical outlet. Verify that the handset batteries are charged.
Cannot make or receive calls.	Check the line connection as above. Ensure the handset is registered to the base unit. Confirm your telephone service is active.
Echo during calls.	This can sometimes occur due to line conditions or network issues. Try adjusting the handset volume. Ensure the handset is not too close to other electronic devices that might cause interference.

Problem	Possible Cause / Solution
Handset not charging.	Ensure the handset is correctly seated in the base unit. Check the power adapter connection to the base unit and outlet. Clean the charging contacts on both the handset and base unit with a dry cloth.

If the problem persists, please consult the "Technical Assistance Guide" included in your package or contact Motorola customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	MT150 (193742)
Color	Black
Frequency	DECT 6.0 Digital
Caller ID Signaling	FSK/DTMF/Bellcore
Caller ID Memory	20 last calls
Phonebook Capacity	50 names and numbers
Redial Memory	10 last numbers
Expandability	Up to 4 handsets (main + 3 additional)
Ringtone Types	5
Volume Levels (Reception)	5 levels
Volume Levels (Ringer)	5 levels + off
Language Options	9 (e.g., Portuguese, English, Spanish)
Power Supply	Automatic Bivolt Power Adapter (100Vac to 240Vac)
Batteries	2 AAA rechargeable batteries (included)
Dimensions (Packaging)	15.7 x 14.2 x 6.8 cm
Weight	330 g

8. WARRANTY AND SUPPORT

Your Motorola MT150 Cordless Phone comes with a standard manufacturer's warranty. Please refer to the "Technical Assistance Guide" included in your package for detailed warranty information, terms, and conditions.

For technical support, service, or further inquiries, please contact Motorola customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why are calls not coming through on my Motorola MT150 cordless phone when the screen displays 'NO MOLESTAR' (Do Not Disturb)?

If your Motorola MT150 is not receiving calls and displays the message "NO MOLESTAR" (Do Not Disturb), it means the ringer has been silenced or a privacy mode is active. To resolve this, please...

[Read full answer](#)