

Motorola MT150-2

Motorola MT150-2 Cordless Phone User Manual

Model: MT150-2

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Motorola MT150-2 Digital Cordless Phone. The MT150-2 features DECT 6.0 technology, which enhances call quality, reduces interference, and provides clear, secure audio. This model is designed for users seeking a reliable and feature-rich cordless telephone system.

2. PACKAGE CONTENTS

Verify that your package contains the following items:

- 2 Handsets
- 2 Communication Bases
- 2 Line Cords
- 2 Bivolt Power Adapters (6 VDC / 450 mA)
- 4 Rechargeable AAA Batteries (400mAh)
- 1 User Manual (this document)
- 1 Quick Start Guide
- 1 Technical Assistance Guide



Image: Two Motorola MT150-2 cordless phone handsets with their respective bases.

3. SETUP

3.1. Installing Handset Batteries

1. Open the battery compartment cover on the back of each handset.
2. Insert the two supplied AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.

3.2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the LINE jack on the back of the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Plug the small end of the power adapter into the DC IN 6V jack on the back of the base unit.
4. Plug the large end of the power adapter into a standard electrical outlet.
5. Repeat for the second base unit and handset.

3.3. Initial Charge

Place each handset on its respective base unit. Allow the handsets to charge for at least 12-15 hours before initial use.

This ensures optimal battery performance and longevity.

4. OPERATING INSTRUCTIONS

4.1. Making Calls

- To make a call, press the **TALK** button (usually green or a phone icon).
- Dial the desired phone number.
- To end a call, press the **END** button (usually red or a phone icon with a slash).

4.2. Receiving Calls

When the phone rings, press the **TALK** button to answer the call.

4.3. Caller ID (Identificador de Chamadas)

The phone supports Caller ID (DTMF/FSK/Bellcore). The display will show the caller's number or name (if available in your service plan and phonebook) for the last 20 identified calls.

4.4. Phonebook (Agenda Telefônica)

Store up to 50 names and numbers in the phonebook for quick dialing. Refer to the Quick Start Guide for specific steps on adding and retrieving contacts.

4.5. Conference Call (Conferência)

The conference feature allows an external call to be shared with two handsets simultaneously. Consult the Quick Start Guide for activation steps.

4.6. Mute Function (Função Mute)

During a call, press the **MUTE** button to temporarily disable your microphone, allowing you to speak privately without the other party hearing you. Press it again to unmute.

4.7. Keypad Lock (Bloqueio do Teclado)

Lock the keypad to prevent accidental dialing. Refer to the Quick Start Guide for instructions on how to activate and deactivate this feature.

4.8. Handset Locator (PAGE)

If you misplace a handset, press the **PAGE** button on the base unit. All registered handsets will ring, helping you locate them.

4.9. Volume Adjustment

- **Ringer Volume:** Adjust the handset ringer volume to 5 levels or turn it off.
- **Reception Volume:** Adjust the earpiece volume during a call to 5 levels.

4.10. Language Selection (Seleção de Idiomas)

The phone offers 9 language options, including Portuguese, English, and Spanish. You can change the display language through the handset menu.

4.11. Redial (Rediscagem)

The phone stores the last 10 dialed numbers for quick redialing.

5. MAINTENANCE

- **Cleaning:** Clean the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Use only the specified rechargeable AAA batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Placement:** Avoid placing the phone in direct sunlight, near heat sources, or in areas with high humidity.

6. TROUBLESHOOTING

If you experience issues with your Motorola MT150-2, try the following steps:

- **No Dial Tone:** Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the power adapter is properly connected.
- **Handset Not Charging:** Make sure the handset is correctly seated in the base unit. Verify that the charging contacts on both the handset and base are clean.
- **Poor Call Quality/Interference:** Move the base unit away from other electronic devices (e.g., Wi-Fi routers, microwaves) that may cause interference.
- **Display Not Working:** Ensure the batteries are correctly installed and charged.
- **Cannot Make/Receive Calls:** Check your telephone line service. If the issue persists, contact your service provider.

For further assistance, refer to the Technical Assistance Guide included in your package or contact Motorola customer support.

7. SPECIFICATIONS

Feature	Description
Brand	Motorola
Model	MT150-2
Color	Black
Phone Type	Cordless
Number of Handsets	2
Technology	DECT 6.0 Digital (Expandable up to 4 handsets)
Caller ID	Yes (DTMF/FSK/Bellcore), stores last 20 calls
Phonebook Capacity	50 names and numbers
Display	Illuminated
Conference Call	Yes (external call shared with two handsets)
Redial Memory	Last 10 numbers
Handset Ringtones	5 types
Volume Control	5 levels for ringer and reception
Language Options	9 options (e.g., Portuguese, English, Spanish)
Power Source	Electrical Power (Bivolt 100Vac to 240Vac automatic power supply)

Batteries	2 AAA rechargeable batteries per handset (included)
Material	Plastic

8. WARRANTY AND SUPPORT

Your Motorola MT150-2 Cordless Phone comes with a **1-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical assistance, or further inquiries, please refer to the Technical Assistance Guide included in your package or visit the official Motorola support website.

© 2026 Motorola. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question