



[Manuals.plus](#) /

> [xamily](#) /

> xamily OEM 089036008914 Dust Bag Instruction Manual for Ridgid Miter Saws R4112, R41121, R4113

xamily 089036008914

xamily OEM 089036008914 Dust Bag Instruction Manual

For Ridgid Miter Saw Models R4112, R41121, R4113

1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of the xamily OEM 089036008914 Dust Bag. This dust bag is a genuine OEM replacement part designed specifically for use with Ridgid miter saw models R4112, R41121, and R4113. Please read this manual thoroughly before installation and use to ensure optimal performance and safety.

2. PRODUCT OVERVIEW

The xamily OEM 089036008914 Dust Bag is designed to collect sawdust and debris generated during the operation of compatible Ridgid miter saws, helping to maintain a cleaner work environment. This product is supplied new and bulk packed, ensuring you receive a genuine replacement part.

- **Part Number:** 089036008914
- **Compatibility:** Specifically fits Ridgid miter saw models R4112, R41121, and R4113.
- **Material:** Constructed from durable paper material, designed for effective dust collection.
- **Included:** One (1) dust bag.



An image showing the xamily OEM 089036008914 dust bag. The bag is light-colored, possibly beige or off-white, with the 'RIDGID' logo prominently displayed in black letters with an orange accent line underneath. It appears to be made of fabric, with a zipper running along one side and a metal hook at the top for attachment. The bag is designed to collect sawdust during miter saw operation.

3. SETUP AND INSTALLATION

Proper installation of the dust bag is crucial for effective dust collection and safe operation of your miter saw. Always ensure the saw is unplugged from its power source before attempting any installation or maintenance.

1. **Verify Compatibility:** Confirm that your Ridgid miter saw model is R4112, R41121, or R4113. Refer to your saw's original owner's manual for specific part number identification and installation instructions.
2. **Locate Dust Port:** Identify the dust collection port on your miter saw. This is typically located at the rear of the saw's blade guard assembly.
3. **Attach Dust Bag:** Align the opening of the xamily dust bag with the saw's dust port. Securely attach the bag, ensuring a snug fit to prevent dust leakage. The bag may feature a hook for additional support or a zipper for emptying.
4. **Inspect Connection:** After attachment, gently tug on the dust bag to confirm it is firmly seated and will not detach during operation.

Important: For detailed, model-specific installation steps, always consult the original owner's manual provided with your Ridgid miter saw.

4. OPERATING INSTRUCTIONS

Once the dust bag is correctly installed, it operates passively to collect sawdust. No specific user interaction with the bag is required during the cutting process itself.

- **Regular Checks:** Periodically check the dust bag during operation to ensure it is not overfilling, which can reduce collection efficiency.
- **Emptying:** Empty the dust bag when it is approximately two-thirds full to maintain optimal dust collection performance. Refer to the Maintenance section for emptying instructions.

5. MAINTENANCE

Regular maintenance of your dust bag will prolong its lifespan and ensure efficient dust collection.

1. Emptying the Bag:

- Unplug the miter saw from the power source.
- Carefully detach the dust bag from the saw's dust port.
- Locate the zipper or opening mechanism on the dust bag.
- Empty the collected sawdust into a suitable waste receptacle.
- Close the zipper/opening securely before reattaching the bag to the saw.

2. Cleaning:

- For optimal performance, periodically shake out any fine dust particles that may cling to the inside of the bag.
- Do not wash the dust bag with water, as this can damage the paper material and reduce its effectiveness.

3. **Inspection:** Regularly inspect the dust bag for any tears, holes, or damage to the zipper/attachment mechanism. A damaged bag will not effectively collect dust and should be replaced immediately.

6. TROUBLESHOOTING

If you experience issues with dust collection, consider the following:

• Poor Dust Collection:

- Check if the dust bag is full and needs emptying.
- Ensure the dust bag is securely attached to the saw's dust port without gaps.
- Inspect the dust bag for any tears or holes that could allow dust to escape.
- Verify that the saw's internal dust collection channels are not clogged. Refer to your miter saw's manual for cleaning instructions.

• Bag Detaches During Use:

- Ensure the bag was properly and securely attached to the dust port.
- Check the attachment mechanism on both the bag and the saw for wear or damage.

7. SPECIFICATIONS

Manufacturer	xamily
Item Model Number	089036008914
Material	Paper
Special Features	Lightweight
Included Components	One (1) dust bag
Compatibility	Ridgid Miter Saw Models R4112, R41121, R4113

8. WARRANTY AND SUPPORT

As an OEM replacement part, warranty coverage may vary. Please retain your proof of purchase. For specific warranty information or technical support regarding the xamily OEM 089036008914 Dust Bag, please contact the seller or the manufacturer directly. For issues related to your Ridgid miter saw, refer to the saw's original manufacturer documentation.



© 2023 xamily. All rights reserved. Ridgid is a registered trademark of its respective owner.