

Manuals.plus /
› Generic Brand /
› User Manual: Foldable 88-Key Digital Piano with Bluetooth and MIDI (White)

Generic Brand music-001-0-wh

User Manual: Foldable 88-Key Digital Piano with Bluetooth and MIDI (White)

Model: music-001-0-wh

1. PRODUCT OVERVIEW AND PACKAGE CONTENTS

This foldable 88-key digital piano is designed for portability and versatility, offering a range of features for beginners and experienced players alike. Its compact design allows for easy storage and transport.

Package Contents:

- Digital Piano Main Unit
- Sustain Pedal
- Earphones
- Charger (Type-C)
- Charging Cable
- Carrying Bag
- Instruction Manual (this document)
- Music Stand

ホワイト



譜面台



充電機 & コード



イヤホン



説明書



サスティンペダル 持ち運び用カバン

商品内容：本体、サスティンペダル、イヤホン、充電器 & コード、説明書、持ち運び用カバン

大きさ：横幅 約124cm、奥行 約21cm、高さ 約6cm

折りたたみ時：横幅 約 64cm、奥行 約 21cm、高さ 約 12cm

重さ：5kg

充電器：Type-C、USB

カラー：ブラック、ホワイト

鍵盤：88 鍵盤

素材：ABS

バッテリー：1800mAh

※演奏以外の用途でのご使用は破損や損傷の原因になりますので、おやめください。

※折りたたむ際に手を挟まない様お気をつけ下さい。

Image 1.1: The complete set of the foldable 88-key digital piano, including the main unit, sustain pedal, earphones, charger, cable, carrying bag, music stand, and instruction manual.

2. SETUP

2.1 Unfolding the Piano

1. Place the folded piano on a flat, stable surface.
2. Gently unfold the two sections of the piano until they lock into place, forming a continuous 88-key keyboard. Ensure the hinge mechanism is fully extended and stable.

2.2 Powering On and Charging

The piano is equipped with a built-in rechargeable lithium-ion battery. For initial use, it is recommended to fully charge the device.

- Connect the provided Type-C charging cable to the piano's charging port.
- Connect the other end of the cable to the included charger, and plug the charger into a standard electrical outlet.
- The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.
- To power on the piano, press and hold the Power button located on the control panel.

イヤホン・ヘッドホン対応

夜中や音が響きそうな場所でも、
安心の専用イヤホン付き。
スポンジが付いていて長時間の
使用の負担を軽減。



イヤホン付き



あんしんのPSE取得

あんしんのPSE(電気用品安全法)取得



電気用品の安全確保を定めた
日本の法律の基準をクリアした
安心の製品です。

Image 2.1: The Type-C charger and cable for powering and recharging the digital piano.

2.3 Connecting Accessories

- **Sustain Pedal:** Plug the sustain pedal cable into the designated pedal input jack on the piano.
- **Earphones:** For private practice, plug the included earphones into the headphone jack.
- **Music Stand:** Insert the music stand into the slot on the piano's top panel to hold sheet music.

演奏の表現をより広げる

付属のサステインペダルを使用することで、
音の伸びを調整し、演奏の表現がより豊かに。

Image 2.2: The sustain pedal, used to extend the decay of notes, enhancing musical expression.

イヤホン・ヘッドホン対応

夜中や音が響きそうな場所でも、
安心の専用イヤホン付き。
スポンジが付いていて長時間の
使用の負担を軽減。



イヤホン付き



あんしんのPSE取得



あんしんのPSE(電気用品安全法)取得



電気用品の安全確保を定めた
日本の法律の基準をクリアした
安心の製品です。

Image 2.3: The included earphones, allowing for quiet practice without disturbing others.

3. OPERATING INSTRUCTIONS

3.1 Basic Playback

- After powering on, the piano will default to a standard piano tone.
- Adjust the volume using the dedicated volume controls on the control panel.
- The 88 keys are touch-sensitive, meaning the volume and timbre of the sound will vary based on how hard you press the keys.



Image 3.1: The touch-response keys allow for dynamic expression based on playing intensity.

3.2 Changing Tones (Instrument Sounds)

This digital piano features 128 different instrument tones. Refer to the Tone List in the appendix (if available) for a complete list.

- Press the 'Tone' button on the control panel.
- Use the '+' and '-' buttons or the numeric keypad (if present) to select your desired instrument tone.

3.3 Rhythm Function

The piano includes 128 rhythm patterns to accompany your playing.

- Press the 'Rhythm' button.
- Select a rhythm pattern using the '+' and '-' buttons.
- Adjust the rhythm tempo as needed.

3.4 Metronome Function

The built-in metronome supports time signatures from 1/4 to 4/4, assisting with timing and practice.

- Press the 'Metronome' button.
- Adjust the tempo and time signature using the control panel buttons.

リズム機能

128種類の様々な
パターンのリズムを
搭載。

ドラムと一緒に
セッションする様に
演奏ができる。



メトロノーム機能

1/4 拍子
～ 4/4 拍子の
メトロノームを搭載。
練習中の拍数の
カウントが可能です。



Image 3.2: The control panel features dedicated buttons for rhythm and metronome functions, aiding in practice and performance.

3.5 Bluetooth and MIDI Connectivity

Connect the piano wirelessly to your computer or tablet via Bluetooth for use with music learning apps, recording software, or other MIDI-compatible applications.

- Ensure the piano is powered on.
- Activate Bluetooth on your external device (computer, tablet, smartphone).
- Search for available Bluetooth devices and select the piano (e.g., "Digital Piano MIDI").
- Once paired, the piano can send and receive MIDI data, allowing interaction with various music applications.

3.6 Recording and Playback

The piano includes a simple one-button recording and playback function.

- Press the 'REC' button to start recording your performance.
- Press 'REC' again to stop recording.
- Press the 'PLAY' button to listen to your recorded performance.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the piano. Avoid using abrasive cleaners or solvents.
- **Storage:** When not in use, fold the piano and store it in the provided carrying bag to protect it from dust and damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the piano regularly, even if not in constant use.
- **Handling:** When folding or unfolding the piano, ensure your hands are clear of the hinge mechanism to prevent injury.

5. TROUBLESHOOTING

- **No Sound:**
 - Check if the piano is powered on.
 - Ensure the volume is not set to minimum or muted.
 - If earphones are plugged in, sound will only come through them. Unplug earphones to hear sound from the built-in speakers.
- **Keys Not Responding:**
 - Ensure the piano is fully unfolded and the sections are securely locked.
 - Restart the piano.
- **Bluetooth Connection Issues:**
 - Ensure Bluetooth is enabled on both the piano and your external device.
 - Make sure the piano is not already paired with another device.
 - Try restarting both the piano and your external device.
- **Charging Problems:**
 - Verify the charging cable and adapter are securely connected.
 - Ensure the power outlet is functional.
 - Use only the provided charging cable and adapter.

6. SPECIFICATIONS

Feature	Specification
Model Number	music-001-0-wh
Keys	88 keys
Dimensions (Unfolded)	Approx. 124 cm (Width) x 21 cm (Depth) x 6 cm (Height)
Dimensions (Folded)	Approx. 64 cm (Width) x 21 cm (Depth) x 12 cm (Height)
Weight	Approx. 5 kg
Connectivity	Bluetooth, Type-C USB (for charging)
Power Source	Rechargeable Lithium-Ion Battery (1 included)
Instrument Tones	128 types
Rhythm Patterns	128 types
Metronome	1/4 to 4/4 time signatures
Special Features	Touch Response, Recording/Playback Function
Color	White

商品サイズ



Image 6.1: Detailed dimensions of the digital piano in both its unfolded and folded states.

7. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please refer to the contact information provided with your purchase documentation or visit the retailer's support website.

Note: Unauthorized repairs or modifications may void your warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BZCWZJKS>

More documents and user manuals: <https://manuals.plus/>