

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EKO](#) /
- › [EKO EK6268-40L-WH Pedal Type Trash Can User Manual](#)

EKO EK6268-40L-WH

EKO EK6268-40L-WH Pedal Type Trash Can User Manual

Model: EK6268-40L-WH | Brand: EKO

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your EKO EK6268-40L-WH Pedal Type Trash Can. Please read thoroughly before use and retain for future reference.

Product Overview

The EKO EK6268-40L-WH is a slim, 40-liter pedal-operated trash can designed for convenience and hygiene. Its features include a slow-closing lid, a mechanism to hold the lid open, and a design that conceals the trash bag for a clean aesthetic. The plastic body is lightweight and features a matte finish to resist fingerprints and smudges, making it easy to clean. The slim profile allows for easy placement in various spaces, such as next to counters or in narrow gaps.



The EKO EK6268-40L-WH pedal type trash can in white, illustrating the foot pedal for hands-free operation.

2. IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not allow children to play with the trash can.
- Do not overload the trash can beyond its 40-liter capacity.
- Ensure the trash can is placed on a stable, level surface to prevent tipping.
- Avoid placing hot ashes, flammable materials, or hazardous waste directly into the bin.

- Keep hands clear of the lid mechanism when closing to prevent pinching.
- Do not attempt to modify or repair the product yourself. Contact customer support if issues arise.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- EKO EK6268-40L-WH Pedal Type Trash Can Unit (White)
- Lid with integrated Smart Liner Unit

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all packaging materials. Inspect the trash can for any damage.
2. **Positioning:** Place the trash can in your desired location. The slim design allows for placement in narrow spaces, such as next to kitchen counters or furniture.
3. **Installing the Trash Bag:**
 - Lift the lid to its fully open position.
 - Lift the Smart Liner Unit (the removable frame on the lid) upwards.
 - Drape your trash bag over the top edge of the main body of the trash can.
 - Secure the trash bag by pulling its edges through the liner fixers located on the left and right sides inside the bin.
 - Lower the Smart Liner Unit back into place over the trash bag. This conceals the bag edges for a neat appearance and prevents the bag from slipping.



Illustration of how to properly install a trash bag, securing it with the internal liner fixers for a clean look.

ゴミ箱のフタを開けたままにするには、スマートライナーユニットとフタを一緒に開けて固定します。



スマートライナー
ユニット



Close-up view of the Smart Liner Unit, which holds the trash bag in place and hides its edges.



▲紐付きゴミ袋も、普通のゴミ袋も後部のフィクサーに引っ掛けてピッタリ装着

◀最後にスマートライナーユニットを被せれば外側からゴミ袋が隠れて見えません

Detail of the liner fixers inside the trash can, designed to secure the trash bag.

5. OPERATING INSTRUCTIONS

- 1. Opening the Lid (Pedal Operation):** Gently step on the pedal located at the base of the trash can. The lid will open smoothly, allowing for hands-free disposal of waste.
- 2. Slow-Closing Lid:** Release the pedal, and the lid will close slowly and quietly due to the integrated oil damper. This prevents slamming and reduces noise.

3. **Holding the Lid Open:** To keep the lid open for extended periods, such as when changing the trash bag or disposing of larger items, lift the lid manually to its highest position. It will remain open until manually closed.



Sequence showing the lid opening and closing mechanism, highlighting the pedal operation and slow-close feature.

6. CARE AND MAINTENANCE

To maintain the appearance and functionality of your EKO trash can:

- Wipe the exterior with a soft, damp cloth and mild soap. Avoid abrasive cleaners or scouring pads, which can damage the matte finish.
- For stubborn stains, a non-abrasive household cleaner can be used, followed by rinsing and drying.
- Regularly clean the interior with a disinfectant cleaner to prevent odors.
- Ensure the pedal mechanism is free from debris to ensure smooth operation.
- The plastic body is lightweight, making it easy to move for cleaning around the unit.



◀ 軽量・スリムで動かしやすい

ステップガードで床の傷つきも安心



◀ 表面はマット仕上げで傷や指紋が目立ちにくい



Visual representation of the trash can's lightweight and slim design, along with the matte finish that resists fingerprints and the step guard for floor protection.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Lid does not open/close smoothly.	Debris in pedal mechanism or lid hinge; uneven surface.	Check for obstructions and clean the mechanism. Ensure the bin is on a level surface.
Trash bag slips down.	Bag not properly secured by the Smart Liner Unit or liner fixers.	Ensure the trash bag edges are fully tucked under the Smart Liner Unit and secured by the internal fixers.
Unpleasant odors.	Bin needs cleaning or bag is full.	Empty the trash bag and clean the interior of the bin thoroughly with a disinfectant.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	EK6268-40L-WH
Brand	EKO
Capacity	40 Liters (approx. 10.9 US gallons)
Color	White
Opening Mechanism	Step-On Pedal
Material	Plastic
Special Features	Slim body, Oil damper for slow-close lid, Fingerprint-resistant matte finish, Lightweight, Casters for easy movement, Smart Liner Unit to conceal trash bag.
Package Dimensions	65 x 46 x 26 cm
Package Weight	3.1 kg
Recommended Room Type	Kitchen

9. WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the official EKO website or contact your local retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

