

[Manuals.plus](#) /

› [RICUTON](#) /

› RICUTON 6-in-1 Convertible Wooden High Chair Instruction Manual

RICUTON B0BZHH7WBZ

RICUTON 6-in-1 Convertible Wooden High Chair Instruction Manual

Model: B0BZHH7WBZ

INTRODUCTION

Thank you for choosing the RICUTON 6-in-1 Convertible Wooden High Chair. This versatile product is designed to adapt to your child's growth, offering six different configurations from infancy through toddlerhood. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.



Image: The RICUTON 6-in-1 High Chair shown in its full high chair configuration, with smaller insets illustrating other modes like a low chair, booster, and table and chair set.

SAFETY INFORMATION

Your child's safety is our top priority. Please adhere to all safety guidelines.

- Always secure your child with the **adjustable five-point safety harness**. Ensure it is snug but comfortable.
- The high chair features a **fixed safety guard** to prevent leaning or falling.
- The stable **pyramid-shaped base** with **anti-slip pads** ensures stability. Always place the high chair on a flat, level surface.
- This product is made from **food-grade, child-safe materials** and smooth hardwood, ensuring it is non-toxic and odor-free.
- The product is **CPSIA & ASTM Certified**, meeting safety standards for stability, suffocation, weight-bearing, and shear tests.
- Do not leave your child unattended in the high chair.

- Do not use the high chair if any parts are damaged or missing.
- Maximum weight recommendation: 33 pounds.

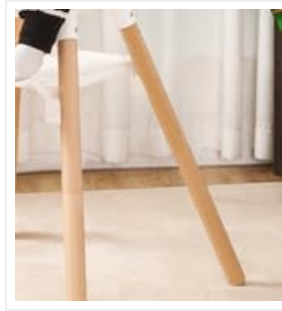


Image: A close-up view of the adjustable five-point safety harness, highlighting its secure design.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- High Chair Seat Unit with PU Cushion
- Long Wooden Legs (4 pcs)
- Short Wooden Legs (4 pcs)
- Footrest/Table Base (1 pc)
- Double-Layer Food Tray (1 set)
- Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

The RICUTON high chair features an automatic locking design for quick assembly without tools. Follow these steps for initial setup.

1. **Attach Legs to Seat Unit:** Align the long wooden legs with the designated slots on the bottom of the high chair seat unit. Push firmly until they click into place, indicating the automatic locking mechanism has engaged.
2. **Install Footrest/Table Base:** Slide the footrest/table base onto the lower part of the long wooden legs. Ensure it is level and securely attached.
3. **Attach Food Tray:** Position the double-layer food tray onto the front of the seat unit. Adjust the tray to one of the four available positions by sliding it forward or backward until it locks securely.
4. **For Lower Configurations:** To convert to a low chair or table and chair set, detach the long wooden legs and replace them with the short wooden legs. The footrest/table base can then be used as a separate table.



Image: A close-up of the solid beech wood legs, showing the connection points for assembly.

OPERATING INSTRUCTIONS

This 6-in-1 high chair offers multiple modes to suit your child's developmental stage.

Configurations:

- **High Chair:** Full height for feeding at standard tables.
- **Infant Booster Seat:** A compact seat that can be used on the floor or secured to an adult chair (straps not included, use with caution).
- **Infant Feeding Chair:** A lower height chair suitable for feeding directly on the floor.
- **Infant Floor Mat Chair:** A low chair without the tray, suitable for floor play.
- **Regular Stool:** The seat unit can be used as a standalone stool.
- **Children's Study Desk and Chair:** The footrest/table base converts into a small table, and the seat unit (with short legs) becomes a matching chair.

Adjustments:

- **Tray Position:** The food tray has **4 adjustable positions**. Press the release buttons on both sides of the tray and slide it to the desired distance from your child, then release to lock.
- **Harness Adjustment:** The five-point safety harness can be adjusted to fit your child securely. Refer to the safety section for proper harness usage.



Image: A visual representation of the six different ways the high chair can be configured, including high chair, low chair, and table and chair set.

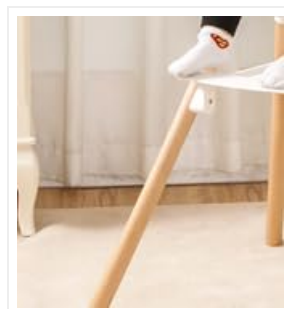


Image: A detailed view of the food tray, indicating its four adjustable positions for optimal child comfort and fit.



Image: A child seated at the converted low table, which features a removable game table surface, demonstrating the versatility for playtime.

CLEANING AND MAINTENANCE

Regular cleaning will ensure hygiene and extend the product's lifespan.

- **Food Tray:** The high chair uses a **food-grade double-layer tray**. The upper tray can be easily removed and is **dishwasher safe** for effortless cleaning. The lower tray can remain in place for continued use or playtime.
- **Seat Cushion:** The smooth, waterproof PU seat cushion is easy to clean. Simply wipe with a damp cloth and mild soap.
- **Frame and Legs:** Wipe down the wooden legs and plastic frame with a damp cloth. Avoid abrasive cleaners.
- **Harness:** The safety harness can be spot cleaned with mild soap and water. Allow to air dry completely.



Image: The removable upper food tray being rinsed under a faucet, demonstrating its ease of cleaning.



Image: A close-up of the waterproof PU seat cushion, showing its water-resistant surface for easy cleaning.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions.

- **Chair feels unstable:** Ensure all legs are fully inserted and locked into place. Verify the high chair is on a flat, level surface. Check anti-slip pads for wear.
- **Tray not locking:** Ensure the tray is correctly aligned with the grooves on the seat unit. Press the release buttons fully when adjusting, and ensure they click into place when released.
- **Harness too tight/loose:** Adjust the harness straps according to your child's size. Refer to the safety section for proper fitting.

For further assistance, please contact RICUTON customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	25.5"D x 25.5"W x 39"H (High Chair)

Item Weight	13 Pounds
Maximum Weight Recommendation	33 Pounds
Material Type	Beech Wood, Plastic (PP)
Safety Certification	CPSIA & ASTM Certified
Tray Positions	4-position adjustable
Harness	5-point adjustable safety harness
Portability	Yes



Image: A diagram illustrating the key dimensions of the high chair in its various configurations, including the table and chair set.

WARRANTY AND SUPPORT

For warranty information or customer support, please contact RICUTON directly through their official channels or the retailer where the product was purchased. Please have your model number (B0BZHH7WBZ) and purchase date available.

Brand: RICUTON

Model: B0BZHH7WBZ



