

PROSCAN PDVD1332

Proscan 13.3" Portable DVD Player

Model: PDVD1332 - User Manual

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Proscan 13.3" Portable DVD Player, model PDVD1332. Please read this manual thoroughly before using the device and retain it for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury, always follow basic safety precautions when using this product.

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Proscan 13.3" Portable DVD Player (PDVD1332)
- Remote Control
- AC Power Adapter
- Car Charger
- Earbuds
- User Manual

TRAVEL ESSENTIALS INCLUDE:
Remote control, earbuds, car charger, and AC power adapter, ideal for in-car entertainment and long journeys



Image showing the Proscan 13.3" Portable DVD Player alongside its travel essentials: remote control, earbuds, car charger, and AC power adapter. These accessories are designed to enhance the user's experience, especially during travel.

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your portable DVD player.

Front and Top View



The Proscan 13.3" Portable DVD Player shown open, displaying its large screen and the intuitive control panel located on the base. The screen is swiveled for optimal viewing.

Side View and Ports



A detailed side view of the Proscan Portable DVD Player, illustrating the accessible ports including USB, Card Slot (SD/MMC), Headphone Jack, AV Out, AV In, On/Off Switch, and DC 12V Power input.

Key Controls:

- **MODE/SETUP:** Access menu settings.
- **VOL +/-:** Adjust volume level.
- **PLAY/PAUSE:** Start or pause playback.
- **STOP:** Stop playback.
- **PREV/NEXT:** Navigate tracks or chapters.
- **USB/SD/MMC:** Ports for external media.
- **AV IN/OUT:** Audio/Video input and output.
- **DC 12V:** Power input for AC adapter or car charger.

Charging the Battery

The portable DVD player is equipped with a built-in lithium-polymer battery for extended playback. Before first use, fully charge the battery.

1. Connect the AC power adapter to the DC 12V input port on the player.
2. Plug the AC power adapter into a standard wall outlet.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off (refer to specific indicator behavior in the manual if available).
4. For car use, connect the car charger to the DC 12V input and plug it into your vehicle's cigarette lighter socket.

BUILT-IN LITHIUM-POLYMER BATTERY



For extended playback.



PORTABLE DESIGN

Weighs less than 3 lbs. for easy use while traveling.



This image emphasizes the Proscan Portable DVD Player's built-in lithium-polymer battery, which provides extended playback, and its lightweight, portable design, weighing less than 3 lbs, making it ideal for travel.

Powering On/Off

- To power on, slide the ON/OFF switch to the "ON" position.
- To power off, slide the ON/OFF switch to the "OFF" position.

OPERATING INSTRUCTIONS

Playing a DVD/CD

1. Open the disc compartment cover.
2. Carefully place a DVD or CD onto the disc spindle with the label side facing up.
3. Gently press the disc down until it clicks into place.
4. Close the disc compartment cover.
5. The player will automatically begin reading the disc. If not, press the **PLAY/PAUSE** button.

Using USB/SD/MMC Media

The player supports MP3 and JPEG files from USB drives, SD cards, and MMC cards.

1. Insert your USB drive into the USB port or your SD/MMC card into the card slot.
2. Use the **MODE** button to select the appropriate input source (USB or CARD).
3. Navigate through your files using the **PREV/NEXT** buttons and select with the **PLAY/PAUSE** button.

Adjusting Volume

Use the **VOL +/-** buttons on the player or the remote control to adjust the audio volume.

Using the Remote Control

The included remote control provides full functionality for operating the DVD player from a distance. Ensure the remote has working batteries and is pointed towards the player's IR sensor.

MAINTENANCE AND CARE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. Do not use liquid cleaners or abrasive materials.
- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected.
No disc playback	Disc inserted incorrectly; Disc is dirty or scratched; Incorrect region code.	Reinsert disc correctly; Clean or replace disc; Ensure disc is compatible with player's region.
No sound	Volume too low; Mute function activated; Headphones not connected properly.	Increase volume; Deactivate mute; Reconnect headphones securely.
Remote control not working	Batteries are dead or inserted incorrectly; Obstruction between remote and player.	Replace batteries; Ensure correct polarity; Remove obstructions.

SPECIFICATIONS

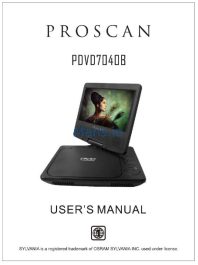

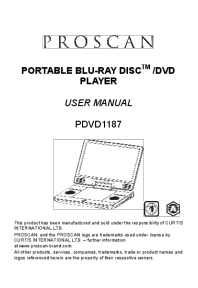
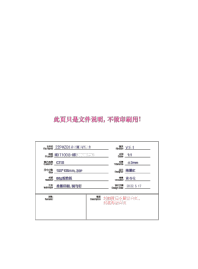

- **Model:** PDVD1332
- **Screen Size:** 13.3 inches TFT LCD
- **Display Type:** LCD
- **Supported Disc Formats:** DVD, DVD-R/RW, CD-R/RW
- **Supported Media Formats:** MP3, JPEG (via USB/SD/MMC)
- **Inputs:** USB, SD/MMC Card Slot, AV In, DC 12V
- **Outputs:** Headphone Jack, AV Out
- **Battery:** Built-in Lithium-Polymer
- **Weight:** Approximately 4 pounds
- **Dimensions:** Approximately 15.85 x 14.37 x 3.47 inches
- **Color:** Black

WARRANTY AND SUPPORT

This product is sold as a renewed item. Please refer to the specific warranty terms provided by the seller or retailer at the time of purchase. For technical support or service inquiries, please contact the seller or the Proscan customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may visit the official Proscan website or contact their customer support line, details for which are typically found on the product packaging or the seller's information page.



	<p>Proscan PDVD7040B Portable DVD Player User Manual</p> <p>User manual for the Proscan PDVD7040B portable DVD player, covering safety precautions, features, operation, system connections, troubleshooting, and specifications.</p>
	<p>Manuel d'utilisation du lecteur DVD portable Proscan PDVD1332 13.3 pouces</p> <p>Manuel d'utilisation détaillé pour le lecteur DVD portable Proscan PDVD1332 de 13,3 pouces, couvrant l'installation, le fonctionnement, la sécurité, le dépannage et la garantie.</p>
<p>尺寸105*148mm 80g书纸 黑白印刷</p>	<p>Proscan Elite 13.3" Swivel Screen Portable DVD Player User Manual</p> <p>This user manual provides comprehensive instructions for the Proscan Elite 13.3" Swivel Screen Portable DVD Player (Model No.: PEDVD1332), covering setup, operation, features, troubleshooting, and warranty information.</p>
	<p>Proscan PDVD1187 Portable Blu-ray/DVD Player User Manual</p> <p>Comprehensive user manual for the Proscan PDVD1187 portable Blu-ray and DVD player, covering setup, operation, features, specifications, and troubleshooting.</p>
	<p>ProScan PELTDV1029 User Manual</p> <p>User manual for the ProScan PELTDV1029 tablet, covering safety precautions, features, basic operation, DVD playback, camera function, Wi-Fi connection, mirror cast connection, text input, file transfer, battery use, specifications, troubleshooting, and warranty information.</p>
	<p>PROSCAN PLDV321300-F TV/DVD Combo Instruction Manual</p> <p>This instruction manual provides detailed information on the setup, operation, and safety precautions for the PROSCAN PLDV321300-F TV/DVD Combo. Learn how to connect devices, navigate menus, and troubleshoot common issues.</p>



[Manuel d'utilisation du lecteur DVD portable Proscan PDVD1332 13.3 pouces](#)

Manuel d'utilisation détaillé pour le lecteur DVD portable Proscan PDVD1332 de 13,3 pouces, couvrant l'installation, le fonctionnement, la sécurité, le dépannage et la garantie.

lang:fr **score:44** filesize: 51.07 M page_count: 18 document date: 2023-01-04



[\[pdf\] User Manual Warranty](#)

PDVD1332 20230104 Administrator English Manual Download Manuals Downloads Proscan 13 3"

SWIVEL PORTABLE DVD PLAYER User PDVD1332 EN legacy curtisint.html CustService |||

105 8 13.3 SWIVEL SCREEN PORTABLE DVD PLAYER MODEL NO.: **PDVD1332**

This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD. PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD. further information at www.proscan-brand.com

lang:en **score:44** filesize: 37.54 M page_count: 18 document date: 2023-01-04



[\[pdf\] Dimension Guide Catalog](#)

PowerPoint Presentation Brittany Whittaker Sell Spec Sheet Proscan Elite 13 3 In Portable DVD Player with Swivel Screen Headphones and Remote PDVD1332 Black Catalog

575929b85e50cb4e2338ef78cccf868c9730d20c spec 1 CURPDVD1332 order petra attachment 6796020

64bac406c66ab184208695 |||

13.3 PORTABLE DVD PLAYER MODEL **PDVD1332** 13.3 TFT LCD PORTABLE DVD PLAYER RESOLUTION 16:9 DISPLAY WITH 180 DEGREE SWIVEL USB PORT SD CARD READER DISC FORMATS:DVD,DVD-R/RW,CD-R/RW AUDIO FORMATS:MP3 PICTURE FORMATS:JPEG AC/CAR ADAPTER HEADPHONE JACK REMOTE CONTROL EARPHONE INCLUDED BUIL...

lang:en **score:31** filesize: 407.01 K page_count: 1 document date: 2023-01-04



[\[pdf\] Test Report](#)

Mark Rogers UN 38 3 Test Summary Proscan Elite 13 In Portable DVD Player with Swivel Screen Headphones and Remote PDVD1332 Black ccbdf1f64411c00f992174024003006fe72eddd1 test un383ts1 CURPDVD1332 petra attachment 6796021 64bac406c75a6298566951 |||

UN 38.3 Lithium Battery Test Summary Item Number: UTL 18650 7.4V 14.8Wh Item Name: Rechargeable Li-ion Battery Cell, battery, or product manufacturer s contact information Name: ShenZhen Utility Power Source Co., Ltd. Address: 1ST-3RD FLOOR, AREA A, BLOCK 3 3RD FLOOR, AREA B, BLOCK 2, HUIYE SCIE...

lang:en **score:12** filesize: 97.15 K page_count: 1 document date: 2022-12-27

