

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Max Power](#) /

› [Max Power MPD1238 Portable Karaoke Speaker System User Manual](#)

Max Power MPD1238

Max Power MPD1238 Portable Karaoke Speaker System User Manual

Model: MPD1238 | Brand: Max Power

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Max Power MPD1238 Portable Karaoke Speaker System. Please read this manual thoroughly before using the product and retain it for future reference. The MPD1238 is designed for powerful audio output, featuring a 15-inch woofer and a tweeter, built-in LED party lights, and versatile connectivity options including Bluetooth, USB, SD card, FM radio, and Aux input. It comes with a wired microphone and a DJ speaker stand, making it ideal for various events.

WHAT'S IN THE Box

Upon unpacking, please ensure all items listed below are present and in good condition. If any items are missing or damaged, contact your retailer immediately.

- Max Power MPD1238 Karaoke Speaker
- Wired Microphone
- Remote Control
- Aux Cable
- Battery Auxiliary Cable
- DJ Speaker Stand

MAXPOWER MPD1238

PORTABLE TROLLEY SPEAKER



15"
**TROLLEY
SPEAKER**

Mic & Remote Control



Comes with a **DJ STAND**

Image: The Max Power MPD1238 portable speaker, showcasing its 15-inch woofer, along with the wired microphone, remote control, and the included DJ stand.

FEATURES

The Max Power MPD1238 is equipped with a range of features designed for a versatile audio experience:

- **Powerful Audio Output:** Features a 1 x 15" WOOFER and 1 x TWEETER for clear and robust sound.
- **Built-in LED Party Lights:** Flashing lights around the woofer add visual effects, with multiple modes and an option to turn off.
- **Wireless Bluetooth Connectivity:** Easily connect your smartphone, tablet, or laptop for wireless audio streaming.
- **Multiple Playback Options:** Supports USB drive, Micro SD card, FM Radio, and Aux cable input.
- **Portable Design:** Equipped with a convenient trolley handle and wheels for easy transportation.
- **Rechargeable Battery:** Provides long battery life for extended use, ensuring your party keeps going.
- **Microphone Input:** Includes 2 MIC inputs and 1 GUITAR input for karaoke and live performances.
- **Remote Control:** Full control over volume and playback settings from a distance.

- **DJ Speaker Stand:** Adjustable tripod stand for optimal sound projection.



MAXPOWER MPD1238

PORTABLE TROLLEY SPEAKER

Flashing lights around the woofer



Comes with a DJ STAND

- TROLLEY & WHEELS
- FLASHING LIGHTS AROUND THE WOOFER TREBLE & BASS KNOB
- AC INPUT CHARGING
- USB/SD/FM RADIO
- MP3/WMA PLAYER
- REMOTE CONTROL
- BUILT IN BLUETOOTH
- WIRED MICROPHONE INCLUDED
- 2 MIC / 1 GUITAR INPUT
- LED DIGITAL DISPLAY
- DRIVER UNIT: 1 X 15" WOOFER, 1 X TWEETER
- IMPEDANCE: 4 OHM
- FREQUENCY RESPONSE: 20 HZ ~ 20KHZ
- WEIGHT: 22 LBS



Image: The Max Power MPD1238 speaker positioned on its stand, illustrating its portability with a trolley handle and highlighting features such as flashing lights, AC input charging, USB/SD/FM radio, Bluetooth, wired microphone inclusion, LED digital display, and driver unit specifications.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Charging the Battery:** Before first use, fully charge the speaker's internal battery using the provided AC power cable. Connect the cable to the speaker's AC input and then to a standard wall outlet. The charging indicator will show the status.
3. **Assembling the DJ Speaker Stand:**
 - Extend the tripod legs of the DJ stand to a stable position.

- Adjust the height of the stand using the locking pin and knob. Ensure the pin is fully engaged and the knob is tightened.
- Carefully place the Max Power MPD1238 speaker onto the pole of the DJ stand. Ensure it is securely seated.



Image: The Max Power MPD1238 speaker securely mounted on its adjustable DJ stand, demonstrating its elevated position for optimal sound projection.

4. **Connecting the Microphone:** Insert the wired microphone's cable into one of the MIC input jacks on the speaker's control panel.

OPERATING INSTRUCTIONS

Power On/Off

Locate the power switch on the speaker's control panel. Toggle it to the "ON" position to power on the unit. Toggle to "OFF" to power off.

Bluetooth Mode

1. Power on the speaker. The speaker will automatically enter Bluetooth pairing mode or you can select Bluetooth mode using the Mode button.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Max Power MPD1238" (or similar name) from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and you can begin streaming audio wirelessly.

USB/SD Card Playback

1. Insert a USB flash drive or SD card (pre-loaded with MP3/WMA audio files) into the respective port on the speaker's control panel.
2. The speaker will automatically detect the media and switch to USB or SD mode, beginning playback. If not, press the Mode button to select.
3. Use the playback controls (Play/Pause, Next/Previous Track) on the speaker or remote control to manage your music.

FM Radio Mode

1. Press the Mode button until "FM" is displayed on the LED screen.
2. Press the Play/Pause button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. Use the Next/Previous Track buttons to navigate between saved FM stations.

Auxiliary Input (AUX)

1. Connect one end of the provided Aux cable to the AUX input port on the speaker.
2. Connect the other end of the Aux cable to the audio output jack of your external device (e.g., MP3 player, computer).
3. Press the Mode button until "AUX" is displayed. Audio from your external device will now play through the speaker.

Microphone and Guitar Inputs

- Plug your wired microphone into one of the "MIC IN" jacks.
- Plug your guitar into the "GUITAR IN" jack.
- Adjust the individual volume controls for the microphone and guitar on the speaker's control panel to achieve the desired mix with your music.

LED Party Lights

The speaker features dynamic LED lights around the woofer. Use the dedicated light mode button on the control panel or remote to cycle through different light patterns or to turn the lights off.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.

- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before long-term storage and recharge it every 3-6 months if not in use.
- **Avoid Water:** This speaker is not waterproof. Keep it away from water and moisture to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is off.	Charge the speaker; Ensure power switch is in "ON" position.
No sound from speaker	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase master volume; Press Mode button to select correct input (Bluetooth, USB, AUX, FM); Reconnect device.
Bluetooth not pairing	Speaker not in pairing mode; Device too far; Bluetooth disabled on source device.	Ensure speaker is in Bluetooth mode; Move device closer to speaker; Enable Bluetooth on your device and rescan.
Microphone not working	Microphone not plugged in correctly; Microphone volume too low; Microphone faulty.	Ensure microphone is fully inserted into MIC IN jack; Increase microphone volume knob; Test with another microphone if available.
USB/SD card not playing	Incorrect file format; Card/drive not inserted correctly; Corrupted files.	Ensure files are MP3/WMA format; Reinsert USB/SD card; Try a different USB/SD card.

SPECIFICATIONS

Feature	Specification
Model	MPD1238
Driver Unit	1 x 15" WOOFER, 1 x TWEETER
Impedance	4 Ohm
Frequency Response	20 Hz ~ 20KHz
Connectivity Technology	Bluetooth, USB, SD Card, Aux

Feature	Specification
Inputs	2 x MIC, 1 x GUITAR, 1 x AUX
Power Source	Battery Powered (Rechargeable) / AC Input
Compatible Devices	Laptop, Tablet, Smartphone
Mounting Type	Pole Mount (DJ Stand included)
Dimensions (Approx.)	12" (W) x 12" (D) x 23.2" (H)
Weight (Approx.)	22 lbs
Batteries (for remote)	1 AAA batteries required (included)
UPC	647625216050



MAXPOWER MPD3116 DIMENSIONS

16"
WIDTH



23.2"
HEIGHT



12"
DEPTH

Image: A diagram illustrating the dimensions of a Max Power portable speaker, showing height, width, and depth. Note: The model

number shown in this diagram (MPD3116) may differ from the product model (MPD1238), but the general dimensional representation is similar.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Max Power website. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, you may contact Max Power customer service through their official channels.

© 2024 Max Power. All rights reserved.

Related Documents - MPD1238

	<p>Maxpower MPD1223 Portable Speaker Operating Manual</p> <p>Comprehensive operating manual for the Maxpower MPD1223 portable speaker, covering Bluetooth, MMC, USB, FM radio functions, TWS pairing, remote control, and control panel features.</p>
	<p>Maxpower MPD8920 Portable Speaker User Manual</p> <p>Comprehensive user manual for the Maxpower MPD8920 portable speaker, covering specifications, features, operating instructions, Bluetooth connectivity, TWS pairing, radio functions, and FCC compliance.</p>
	<p>Maxpower MPD611 Portable Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the Maxpower MPD611 portable Bluetooth speaker, covering specifications, features, operation instructions, TWS pairing, radio functions, and FCC compliance.</p>
	<p>Maxpower MPD621 Portable Speaker User Manual</p> <p>Comprehensive user manual for the Maxpower MPD621 portable speaker, detailing features, specifications, operating instructions, safety warnings, and FCC compliance information.</p>
	<p>Max Power STERN POD Installation, Operation, and Maintenance Manual</p> <p>Comprehensive guide for Max Power STERN POD thrusters, detailing installation, operation, maintenance, technical specifications, electrical diagrams, troubleshooting, and warranty information for marine applications.</p>
	<p>Max Power Portable Speaker User Manual - MPD12EQ, MPD15EQ</p> <p>User manual for Max Power portable speakers (MPD12EQ, MPD15EQ) by Guangzhou Langting Electronics Co., Ltd. Features setup, safety guidelines, rear panel functions, remote control operation, and FCC compliance.</p>