

[Manuals.plus](#) /

> [Beyution](#) /

> Beyution RC4390A Replacement Remote Control Instruction Manual

Beyution WY-RC4390A-HK

Instruction Manual for Beyution RC4390A Replacement Remote Control

Model: WY-RC4390A-HK

1. PRODUCT OVERVIEW

This manual provides instructions for the Beyution RC4390A replacement remote control, designed to be compatible with RCA RNSM4025 and RNSM4003-B 4K Smart LCD LED HDTV TVs. This remote is a direct replacement and requires no complex setup.





Figure 1: Front view of the Beyution RC4390A Remote Control.

The remote features an ergonomic design for comfortable grip and responsive buttons for ease of use. It operates using infrared technology.

2. SETUP AND BATTERY INSTALLATION

The Beyution RC4390A remote control is designed for immediate use without requiring any programming or pairing. Simply install the batteries, and it will function with compatible RCA TV models.

2.1 Battery Requirements

The remote control requires two (2) AAA batteries. Batteries are not included with the remote control.

2.2 Installing Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings

inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Battery compartment with cover removed.

Important: Ensure correct battery polarity to prevent damage to the remote control.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use. Point the remote directly at your RCA TV for optimal performance.

3.1 Remote Control Buttons and Functions

The Beyution RC4390A remote control features a standard layout with dedicated buttons for various TV functions and smart applications. Refer to Figure 1 for button locations.

- **Power Button** (⏻): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **EPG**: Access the Electronic Program Guide.
- **TXT**: Access Teletext (if supported by TV).
- **Volume Up/Down (+ / -)**: Adjust the TV volume.
- **Mute Button** (⏻): Mutes or unmutes the TV sound.
- **Channel Up/Down (▲ / ▼)**: Change TV channels.
- **Input/Source Button** (📺): Select input sources (HDMI, AV, etc.).
- **Home Button** (🏠): Access the TV's smart home screen or main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Navigate menus and confirm selections.
- **Back Button**: Return to the previous screen or menu.
- **Exit Button**: Exit the current menu or application.
- **Settings Button** (⚙️): Access TV settings.
- **Info Button** (i): Display information about the current program or content.
- **Dedicated App Buttons (Netflix, YouTube, Kids, USB)**: Directly launch these applications or functions.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next)**: Control media playback.
- **Audio Button**: Adjust audio settings or select audio tracks.

3.2 Remote Distance

The remote control offers a stable performance with a farther transmitting distance. It functions effectively within 8 meters and can also be used up to approximately 10 meters, depending on environmental factors and line of sight to the TV's infrared receiver.

4. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Beyution RC4390A remote control, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** While designed to be durable, avoid dropping the remote control, as this can damage internal circuitry or external casing.
- **Liquid Exposure:** Keep the remote control away from liquids. If it comes into contact with liquid, remove the batteries immediately and allow it to dry completely before reinserting them.

5. TROUBLESHOOTING

If you experience issues with your Beyution RC4390A remote control, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed directly at TV.	Replace batteries. Ensure clear line of sight to the TV's infrared sensor. Point the remote directly at the TV.
Specific buttons not working.	Button stuck or damaged; TV not compatible with specific function.	Gently press the button multiple times. Ensure your TV model supports the specific function (e.g., TXT, EPG).
Remote works for some functions but not others.	Partial compatibility issue or TV setting.	Verify your TV model is listed as compatible. Check TV settings for remote control options.

If the problem persists after trying these steps, please refer to the "Warranty and Support" section for further assistance.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Beyution
Model Number	WY-RC4390A-HK
Compatible Devices	RCA RNSM4025, RNSM4003-B 4K Smart LCD LED HDTV TV

Feature	Detail
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6.3 x 1.57 x 0.39 inches (16 x 4 x 1 cm)
Item Weight	2.82 ounces (80 grams)
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (Television)

7. WARRANTY AND SUPPORT

Beyution is committed to providing high-quality products and customer satisfaction. This remote control is designed to be a reliable replacement.

If you encounter any issues with your remote control, or if you cannot find your specific TV model listed as compatible, please contact our customer service team. We are dedicated to providing a satisfactory solution within 24 hours.

For support, please reach out via the contact method provided by your retailer or the Beyution official support channels.

© 2025 Beyution. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BZL8G9B6>

More documents and user manuals: **<https://manuals.plus/>**