

WONNIE W-BR142

WONNIE Remote Control for Model W-BR142 User Manual

Model: W-BR142

1. INTRODUCTION AND COMPATIBILITY

This user manual provides essential information for the operation and maintenance of your WONNIE Remote Control. This remote control is specifically designed for and compatible **only** with the WONNIE Model W-BR142 Blu-ray player. It is not compatible with any other WONNIE models or products from other brands.

Please confirm that your device is the WONNIE Model W-BR142 before attempting to use this remote control.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

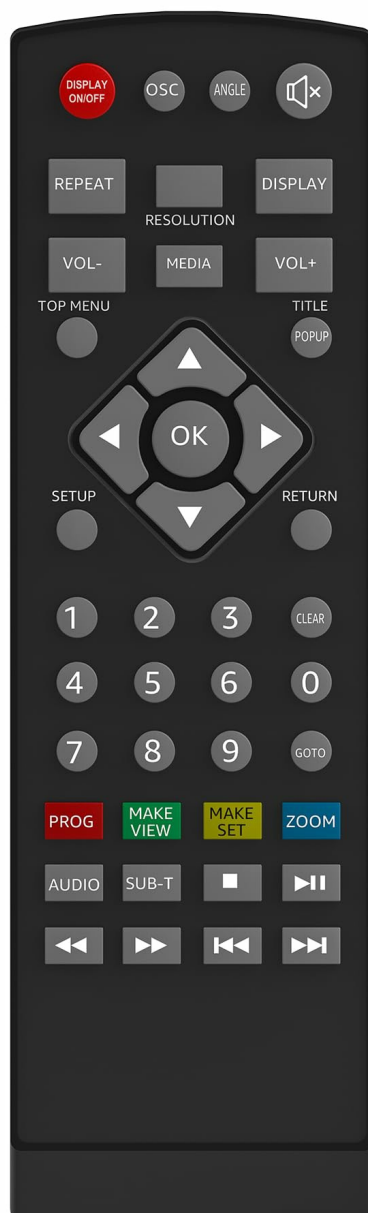


Figure 1: WONNIE Remote Control for Model W-BR142. This image displays the front of the remote control, showing its compact design and button layout, including the power, navigation, and playback controls.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your WONNIE Remote Control. Point the remote control directly at the infrared receiver on your WONNIE W-BR142 Blu-ray player for optimal performance.

- **POWER:** Turns the Blu-ray player on or off.
- **MENU:** Accesses the main menu or disc menu.
- **SETUP:** Enters the system setup menu.
- **DIRECTIONAL ARROWS (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER/OK:** Confirms a selection.
- **RETURN/BACK:** Returns to the previous screen or menu.
- **PLAY (▶):** Starts playback of a disc or media file.
- **PAUSE (⏸):** Pauses playback. Press again to resume.

- **STOP** (■): Stops playback.
- **FAST FORWARD** (▶▶): Advances playback quickly.
- **REWIND** (◀◀): Rewinds playback quickly.
- **PREVIOUS** (◀◀|): Skips to the beginning of the current track/chapter or the previous track/chapter.
- **NEXT** (|▶▶): Skips to the next track or chapter.
- **VOLUME** (+/-): Adjusts the volume level (if supported by the player and connected display).
- **MUTE**: Mutes or unmutes the audio.
- **EJECT**: Opens or closes the disc tray.
- **TITLE**: Accesses the disc title menu.
- **SUBTITLE**: Selects subtitle options.
- **AUDIO**: Selects audio track options.

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.

4.2 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

- **Remote control is not responding:**
 - Ensure the remote control is pointed directly at the Blu-ray player's infrared sensor.
 - Check if the batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the Blu-ray player.
- **Buttons are not functioning correctly:**
 - Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be causing sticking.
 - Replace the batteries, as low power can sometimes cause intermittent button response.

6. SPECIFICATIONS

Brand	WONNIE
Model Number	W-BR142 (Remote Control for)
Compatible Devices	WONNIE W-BR142 Blu-ray player ONLY
Product Dimensions	4.2 x 1.8 x 0.7 inches
Item Weight	0.81 ounces

Color	Black
Special Feature	Infrared (IR) Remote Control
Power Source	2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your WONNIE Remote Control or the WONNIE Model W-BR142 Blu-ray player, please refer to the documentation provided with your Blu-ray player or visit the official WONNIE website. Contact information for customer service can typically be found on the product packaging or the manufacturer's website. *Note: This remote control is an accessory for the WONNIE W-BR142 Blu-ray player. Any warranty claims or support requests should be directed to the manufacturer of the primary device.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question