

[Manuals.plus](#) /

› [iRUNTEK](#) /

› iRUNTEK QMQG10 Rechargeable Fabric Shaver User Manual

iRUNTEK QMQG10

iRUNTEK QMQG10 Rechargeable Fabric Shaver User Manual

Model: QMQG10

INTRODUCTION

Thank you for choosing the iRUNTEK QMQG10 Rechargeable Fabric Shaver. This electric lint remover is designed to effectively remove fuzz, pills, and lint from various fabrics, restoring their appearance. Please read this manual thoroughly before use to ensure safe and optimal operation.

KEY FEATURES

- **LED Digital Display:** Clearly shows battery power and selected speed setting.
- **Three Speed Settings:** Adjustable speeds (M1, M2, M3) for different fabric types and lint severity.
- **Efficient Blades:** Equipped with sharp and durable 6-leaf blades for effective lint removal.
- **Rechargeable Battery:** Built-in 2000mAh lithium-ion battery provides 120-180 minutes of use on a full charge.
- **Type-C Fast Charging:** Fully charges in approximately 3 hours.
- **Large Lint Collector:** Spacious trash bin to collect removed lint, preventing frequent emptying.
- **Safety Protection:** Device automatically stops if the blade net cover is loose or opened.
- **Versatile Use:** Suitable for winter clothes, sweaters, scarves, gloves, plush toys, blankets, car cushions, sofas, leggings, and bedding.



Figure 1: Overview of the iRUNTEK Fabric Shaver's components and features.

WHAT'S IN THE BOX

- 1 x iRUNTEK Fabric Shaver
- 3 x Extra Blades
- 1 x Cleaning Brush
- 1 x Type-C Charging Cable
- 1 x User Manual



Figure 2: All items included with your iRUNTEK Fabric Shaver.

SETUP

Initial Charging

1. Before first use, fully charge the fabric shaver.
2. Connect the provided Type-C charging cable to the charging port on the device.
3. Plug the USB end of the cable into a 5V/1A adapter (not included), laptop, power bank, or car charger.
4. The LED digital display will show the battery percentage. A full charge takes approximately 3 hours.

THREE-SPEED REGULATION TECHNOLOGY

any clothes can be handled calmly

M1

The M1 gear is suitable for socks, scarves, knitwear.



M2

The M2 gear is suitable for thick sweaters, cotton-padded clothes, and cotton-padded jackets.



M3

The M3 gear is suitable for woolen coat/blanket/sofa/bedding



Figure 3: Charging the iRUNTEK Fabric Shaver using the Type-C port.

Blade Installation/Replacement

1. Ensure the device is turned off.
2. Gently twist the blade net cover counter-clockwise to remove it.
3. Carefully remove the old blade assembly. The blades are sharp; handle with caution.
4. Place a new blade assembly onto the spindle.
5. Align the blade net cover and twist clockwise to secure it firmly. Ensure it is properly locked to activate the safety switch.

Your browser does not support the video tag.

Video 1: This video demonstrates the process of disassembling the fabric shaver to access and replace the blades, as well as how to empty the lint collector.

OPERATING INSTRUCTIONS

Preparation for Use

- Place the garment or fabric on a flat, firm surface.
- Ensure the fabric is smooth and free of wrinkles to prevent damage.

Power On and Speed Selection

1. Press the power button to turn on the device. The LED display will illuminate.
2. Press the power button repeatedly to cycle through the three speed settings:
 - **M1 (Low Speed):** Suitable for delicate fabrics like socks, scarves, and knitwear.
 - **M2 (Medium Speed):** Ideal for thick sweaters, cotton-padded clothes, and jackets.
 - **M3 (High Speed):** Best for heavy-duty fabrics such as wool coats, blankets, sofas, and bedding.
3. Select the appropriate speed for your fabric type.



Figure 4: Guide to selecting the correct speed setting for various fabric types.

Lint Removal

1. Gently glide the shaver head over the fabric surface, applying light pressure.
2. Move the shaver in small, circular motions or straight strokes, ensuring even coverage.
3. Avoid pressing too hard or holding the shaver in one spot for too long, as this may damage the fabric.
4. Continue until all unwanted fuzz and pills are removed.



Figure 5: Demonstrates the effectiveness of the fabric shaver on a coat, showing a clear before and after.

Your browser does not support the video tag.

Video 2: This video shows the iRUNTEK Fabric Shaver in action on a sweater, demonstrating its effectiveness in removing pills and lint.

Your browser does not support the video tag.

Video 3: This video illustrates the use of the fabric shaver on a silk pillow, effectively removing snags and pills.

MAINTENANCE

Cleaning the Lint Collector


1. Ensure the device is turned off.
2. Slide down the transparent lint collector to detach it from the main body.
3. Empty the collected lint into a trash bin.
4. Reattach the lint collector by sliding it back into place until it clicks securely.

Technology Sense Design


TYPE-C CHARGING PORT



Charge with
computer

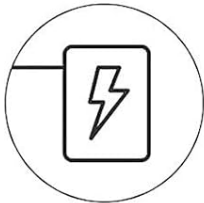

Charge with
mobile power

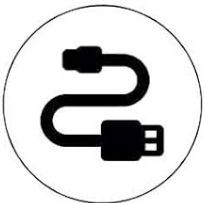 

Free USB cable



Charge with
laptop



Figure 6: Steps for cleaning the lint collector and blades.

Cleaning the Blades and Net Cover

1. Turn off the device and remove the lint collector.
2. Twist the blade net cover counter-clockwise to remove it.
3. Use the provided cleaning brush to carefully remove any lint or debris from the blades and the inside of the net cover.
4. Reattach the blade net cover by twisting it clockwise until it is secure.

Your browser does not support the video tag.

Video 4: This video demonstrates the process of disassembling the fabric shaver to access and replace the blades, as well as how to empty the lint collector.

SAFETY PRECAUTIONS

- Keep out of reach of children.
- The blades are very sharp. Exercise extreme caution when handling or replacing them.
- Always ensure the blade net cover is securely fastened before operating the device. The safety protection switch will prevent operation if the cover is loose.
- Do not use on wet fabrics.
- Do not press excessively hard on the fabric to avoid damage.
- Do not use the device for purposes other than lint removal.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Blade net cover not securely fastened.	Charge the device; Ensure the blade net cover is twisted on tightly.
Poor lint removal performance.	Lint collector is full; Blades are dull or clogged; Incorrect speed setting.	Empty the lint collector; Clean or replace blades; Select a higher speed setting.
Device stops unexpectedly during use.	Blade net cover has become loose; Low battery.	Securely fasten the blade net cover; Charge the device.

SPECIFICATIONS

- **Brand:** iRUNTEK
- **Model Number:** QMQG10
- **Material:** Plastic, Stainless Steel
- **Product Dimensions:** 4.45"D x 2.91"W x 7.17"H
- **Handle Material:** Alloy Steel
- **Battery Capacity:** 2000mAh Lithium-ion
- **Charging Time:** Approximately 3 hours
- **Operating Time:** 120-180 minutes (fully charged)
- **Charging Interface:** Type-C

WARRANTY & SUPPORT

Your iRUNTEK Fabric Shaver comes with a **1-Year Product Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For customer service and support, please contact iRUNTEK directly. Our **7*24 Customer Service** team is available to assist you with any questions or issues you may encounter.

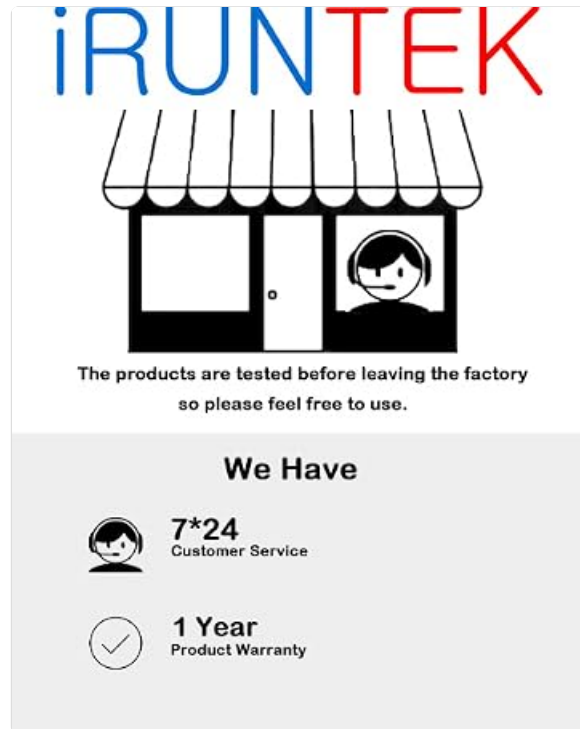 


Figure 7: iRUNTEK Customer Service and Warranty Information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question