

RC-0002, RC-0001, WLFPL-18, LG-3DSTOVE, WL-3DSTOVE20, WL-3DSTOVE21, FP-1215, WLFPL18, ZCFP2008US, FP1052

Generic Replacement Remote Control Instruction Manual

Compatible with Warm Living Electric Infrared Quartz Space Heaters

INTRODUCTION

This manual provides instructions for the Generic replacement infrared remote control designed for use with various Warm Living electric infrared quartz space heaters. This remote is a direct replacement for the original remote controls of the specified models. Please ensure your original remote matches the appearance of this replacement remote for proper functionality.

SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA 1.5V batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the battery compartment cover downwards to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, illustrating the battery compartment.



Image: The remote control body and its battery cover shown separately, ready for battery insertion.



Image: The remote control with the battery cover re-attached, indicating proper installation.

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the infrared receiver on your Warm Living space heater. Point the remote directly at the heater when pressing buttons.

The functions of the buttons on this replacement remote control correspond directly to the functions of your original heater remote. Refer to your specific Warm Living heater's instruction manual for detailed information on each button's operation (e.g., Power, Temperature Up/Down, Timer, Mode, Fan Speed).



Image: Front view of the remote control, displaying its button layout.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents, as these may damage the surface or internal components.

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are installed correctly with the correct polarity. Replace old batteries with new ones. Check for any obstructions between the remote and the heater's IR receiver. Ensure you are within the effective range and pointing the remote directly at the heater.

- **Intermittent operation:** This may indicate low battery power. Replace batteries.
- **Remote does not control all functions:** This replacement remote is designed to mimic the original. If certain functions are not working, verify that your heater model is listed as compatible and that the function was present on your original remote. Some advanced features might be specific to certain heater models or require direct interaction with the heater's control panel.

SPECIFICATIONS

Brand	Generic
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA 1.5V Batteries (not included)
Compatible Devices	Warm Living Electric Infrared Quartz Space Heaters (Models: RC-0002, RC-0001, WLFPL-18, LG-3DSTOVE, WL-3DSTOVE20, WL-3DSTOVE21, FP-1215, WLFPL18, ZCFP2008US, FP1052)
Color	Black

WARRANTY AND SUPPORT

This remote control is a generic replacement part. Warranty coverage, if any, is typically provided by the seller at the time of purchase. Please refer to your purchase documentation for specific warranty terms and conditions. For operational issues related to your Warm Living space heater, please consult the original heater's instruction manual or contact the heater manufacturer's customer support.