



Manuals.plus /

› Karinear /

› Karinear Portable Electric Cooktop 2 Burners Instruction Manual

## Karinear KNC-D22058-UL-LH06

# Karinear Portable Electric Cooktop 2 Burners Instruction Manual

Model: KNC-D22058-UL-LH06

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Karinear Portable Electric Cooktop 2 Burners. Please read all instructions carefully before use and retain this manual for future reference. This 12-inch ceramic cooktop features a unique wooden pattern glass surface, offering both aesthetic appeal and practical functionality for your kitchen.

## IMPORTANT SAFETY PRECAUTIONS

To ensure safe operation, always follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Ensure proper ventilation around the cooktop. Do not block air intake or exhaust vents.
- If the surface is cracked, switch off the appliance and contact qualified personnel.

- The power cord must be replaced by qualified technicians if damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## PRODUCT FEATURES

- **Unique Wooden Pattern Glass Cooktop:** Features a distinctive wood-grain-like pattern, enhancing kitchen aesthetics.
- **Dual Burners:** Equipped with two radiant burners for versatile cooking.
- **Power Output:** Large burner (1400W) with 1-9 adjustable heat levels; Small burner (600W) with "L" (low) and "HI" (high) settings.
- **110-120V Plug-in Operation:** Designed for standard household outlets, no special wiring required.
- **Installation Flexibility:** Can be used as a portable countertop unit or installed built-in.
- **Safety Functions:** Includes a 99-minute timer, automatic shut-off, child safety lock, pause function, high-temperature warning ('H' indicator), and overheat protection.
- **Cookware Compatibility:** Suitable for all types of flat-bottom cookware, including iron, stainless steel, ceramic, glass, and copper.
- **Easy to Clean:** Smooth glass surface allows for simple cleaning with a damp cloth. A cleaning scraper is included.

## WHAT'S IN THE BOX

- Karinear Portable Electric Cooktop 2 Burners
- Power Cord (110-120V plug)
- Cleaning Scraper
- Fixing Brackets (for built-in installation)
- Rubber Feet (for countertop use)
- Instruction Manual

## SETUP AND INSTALLATION

### Countertop Use

For countertop use, simply attach the provided rubber feet to the bottom of the cooktop. These feet elevate the unit, preventing direct contact with your counter surface and allowing for proper ventilation. Place the cooktop on a stable, flat surface away from flammable materials.

**Built-in Install** ▶



◀ **Countertop Use**

Image: Karinear cooktop showing rubber feet for countertop placement.

## Built-in Installation

If you prefer a built-in installation, ensure you have a countertop opening of the correct dimensions. The required cutout dimensions are approximately 19.3 inches (length) x 10.63 inches (width). Use the provided fixing brackets to secure the cooktop into the countertop. Ensure adequate air intake and exhaust (at least 10mm clearance) as specified in the manual to prevent overheating.

## 9 Power levels, suitable for all kinds of food cooking



Image: Karinear cooktop seamlessly integrated into a kitchen counter, demonstrating built-in design.

**Power Connection:** Plug the cooktop's 110-120V power cord into a standard household outlet. No specialized electrical wiring is needed for this model.

Your browser does not support the video tag.

Video: This video demonstrates the physical features of the Karinear 110V electric cooktop, including its wooden pattern surface, the plug, and how to attach the rubber feet for countertop use. It also highlights the option for built-in installation.

## OPERATING INSTRUCTIONS

The Karinear cooktop features intuitive touch controls for easy operation.

# Multifunction Electric Ceramic Cooktop



Image: Close-up of the Karinear cooktop's touch control panel, showing buttons for power, heat adjustment, timer, pause, and lock functions.

## Power On/Off

- To turn on, press the **ON/OFF** button. The display will light up.
- To turn off, press the **ON/OFF** button again.

## Adjusting Heat Levels

- **Large Burner:** Use the '+' and '-' buttons to select heat levels from 1 to 9.
- **Small Burner:** Offers two settings: 'L' for low heat (suitable for keeping warm, heating milk/coffee) and 'HI' for high heat.

## Timer Function

- Press the **TIMER** button to activate the timer.
- Use the '+' and '-' buttons to set the desired cooking time, up to 99 minutes.
- The cooktop will automatically shut off once the timer expires.

## Child Safety Lock

- To activate the child lock, press and hold the '+' and '-' buttons simultaneously for a few seconds until the lock indicator

appears.

- To deactivate, repeat the process. This prevents accidental operation.

## Pause Function

- Press the **PAUSE** button to temporarily stop cooking. The cooktop will maintain its current settings.
- Press **PAUSE** again to resume cooking.

## Keep Warm Function

- The small burner has a dedicated "Keep Warm" setting, ideal for maintaining food temperature without overcooking.

## Hot Surface Indicator ('H')

After turning off a burner, an **'H'** will appear on the display, indicating that the surface is still hot. Do not touch the cooktop until the 'H' disappears, signifying that the surface has cooled to a safe temperature.

Your browser does not support the video tag.

Video: This video provides a quick review of the 2-burner cooktop, demonstrating how to turn it on, adjust heat settings, and highlighting the 'H' hot surface indicator for safety.

## COOKWARE COMPATIBILITY

This electric cooktop is compatible with all types of flat-bottom cookware. Ensure the base of your cookware is smooth and makes full contact with the heating zone for optimal performance.

- Cast Iron
- Stainless Steel
- Ceramic
- Glass
- Copper
- Enameled Iron
- Aluminum (with flat bottom)



Image: Illustration showing different types of flat-bottom cookware compatible with the electric cooktop.

## CARE AND MAINTENANCE

The glass ceramic surface of your Karinear cooktop is designed for easy cleaning.

- Always ensure the cooktop has cooled down completely (the 'H' indicator has disappeared) before cleaning to prevent burns.
- Wipe the surface with a damp cloth and mild detergent.
- For stubborn stains or burnt-on food, use the provided cleaning scraper carefully.
- Avoid abrasive cleaners or scouring pads that could scratch the glass surface.
- Do not immerse the cooktop in water or spray water directly onto it.



**Come with  
a scraper**

**Glass cooktop with beautiful wooden  
pattern, revealing your extraordinary  
personality, easy to clean**

Image: A hand cleaning the smooth glass surface of the cooktop with a cloth, demonstrating ease of maintenance. A cleaning scraper is also shown.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooktop does not turn on.	Not plugged in; Power outage; Child lock activated.	Ensure the cooktop is properly plugged into a working outlet. Check circuit breaker. Deactivate child lock by pressing '+' and '-' simultaneously.
'H' indicator remains on.	Surface is still hot.	This is a safety feature. Wait for the surface to cool down completely; the 'H' will disappear automatically.
Cooktop automatically shuts off during use.	Overheat protection activated; Timer expired; Automatic shut-off feature.	Allow the unit to cool down. Check if the timer was set. Note that the cooktop has an automatic shut-off after 2, 4, or 8 hours depending on the heat level.
Controls are unresponsive.	Child lock activated; Moisture on control panel.	Deactivate child lock. Wipe the control panel dry with a clean cloth.

## SPECIFICATIONS

- **Brand:** Karinear
- **Model Number:** KNC-D22058-UL-LH06
- **Item Weight:** 11.8 pounds
- **Product Dimensions:** 20.47 x 11.42 x 1.73 inches
- **Installation Type:** Built-in, Countertop
- **Special Features:** Hot Surface Indicator, Portable, Safety Lock, Timer, Warm Setting
- **Burner Type:** Radiant
- **Heating Elements:** 2
- **Color:** Wooden Pattern
- **Control Console:** Push Button
- **Voltage:** 110 Volts
- **Wattage:** 2000 watts (Total)
- **Fuel Type:** Electric
- **Material Type:** Vitroceramic glass

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or contact Karinear customer service directly. Keep your purchase receipt as proof of purchase.