

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EISL](#) /

› **EISL DX5082CSB STORM Shower Rail Set Instruction Manual**

## EISL DX5082CSB

# EISL DX5082CSB STORM Shower Rail Set Instruction Manual

Model: DX5082CSB | Brand: EISL

## 1. SAFETY INFORMATION

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- Ensure all connections are watertight to prevent leaks.
- Do not use abrasive cleaners or scouring pads, as these can damage the chrome finish.
- Installation should be performed by a qualified professional if you are unsure.
- Ensure the wall structure can support the weight of the shower rail set.

## 2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Shower rail
- Hand shower
- Shower hose
- Wall mounts and fixings (screws, dowels)
- Instruction manual



Image 2.1: All components included in the EISL DX5082CSB shower rail set package, including the shower rail, hand shower, hose, and mounting hardware.

### 3. SETUP AND INSTALLATION

This section provides step-by-step instructions for installing your EISL DX5082CSB shower rail set.

- 1. Prepare the Installation Area:** Ensure the wall surface is clean, dry, and suitable for drilling. Mark the desired positions for the wall mounts.
- 2. Drill Holes:** Using an appropriate drill bit for your wall type, drill holes at the marked positions. Insert the provided dowels.
- 3. Attach Wall Mounts:** Secure the wall mounts to the wall using the screws.
- 4. Install Shower Rail:** Slide the shower rail into the secured wall mounts. Ensure it is level and tighten any securing screws on the mounts.
- 5. Connect Shower Hose:** Attach one end of the shower hose to your existing shower mixer or wall outlet (standard 1/2 inch connection). Attach the other end to the hand shower. Ensure all connections are hand-tightened.

tightened and then gently tightened with a wrench if necessary, using a protective cloth to prevent scratches.

6. **Mount Hand Shower Holder:** The hand shower holder is integrated into the shower rail and is height-adjustable.



Image 3.1: The EISL DX5082CSB shower rail set fully installed, showing the shower rail, hand shower, and hose in a typical bathroom setting.



Image 3.2: Detailed dimensions of the EISL DX5082CSB shower rail set, including rail length (660-700mm), shower head diameter (approx. 115mm), and hose length (approx. 1500mm).

## 4. OPERATING INSTRUCTIONS

### 4.1 Adjusting the Hand Shower Height

The hand shower holder can be easily adjusted along the shower rail to your desired height. Simply press the release button or lever on the holder and slide it up or down. Release to secure its position.



**eisl**  
since 1980

Image 4.1: The hand shower holder can be moved up and down the rail for height adjustment, indicated by arrows.

## 4.2 Selecting Spray Functions

The hand shower features 8 different spray functions. To change the spray pattern, rotate the spray plate on the shower head. Available functions include:

- Rain
- Massage
- Sauna
- Soft
- Water Stop
- Combinations of the above



Image 4.2: Visual representation of the 8 different spray functions available on the EISL DX5082CSB hand shower, including Rain, Massage, Sauna, Soft, and Water Stop.

### 4.3 Water-Saving Function

The included water-saving seal can reduce water consumption by up to 50%. Ensure this seal is correctly installed between the shower hose and the hand shower or mixer connection.

## 5. MAINTENANCE

### 5.1 Cleaning the Shower Set

To maintain the chrome finish, clean the shower rail set regularly with a soft cloth and mild soap solution. Rinse thoroughly with clean water and dry immediately to prevent water spots.

**Do not use:**

- Abrasive cleaners
- Scouring pads

- Acidic or solvent-based cleaning agents

## 5.2 Anti-Limescale Nubs

The hand shower is equipped with anti-limescale nubs on the spray plate. To remove limescale deposits, gently rub these nubs with your finger or a soft brush. This helps maintain optimal spray performance.



Image 5.1: A close-up view of the anti-limescale nubs on the shower head, designed for easy cleaning and maintenance.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water pressure or uneven spray	Limescale buildup in shower head nozzles.	Clean the anti-limescale nubs on the shower head (refer to Section 5.2).

Problem	Possible Cause	Solution
Water leaking from connections	Loose connections or worn seals.	Check all connections and tighten them. Replace seals if necessary.
Shower head holder slides down	Holder mechanism not fully engaged or worn.	Ensure the holder is properly locked in place after adjustment. If issue persists, contact support.

## 7. SPECIFICATIONS

**Brand:** EISL

**Model Number:** DX5082CSB

**Product Dimensions (L x W x H):** 70 x 12 x 5 cm

**Weight:** 910 grams

**Color:** Chrome

**Style:** Chrome Shower Kit

**Finish:** Polished

**Material:** Chrome (Metal)

**Number of Handles:** 1

**Mounting Type:** Wall Mount

**Included Components:** Shower rail, Hand shower, Shower hose

**Standard Connection:** 1/2 inch

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This EISL product comes with a **3-year warranty**. The warranty conditions are detailed in the full assembly instructions (if provided separately) or can be obtained from the manufacturer. Your statutory warranty rights remain unaffected.

### 8.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact EISL customer support. Refer to the packaging or the official EISL website for contact details.

**EISL Website:** [www.eisl.de](http://www.eisl.de) (Example link, actual link may vary)