

JONR ED12

JONR ED12 Wet/Dry Vacuum Cleaner

Instruction Manual

Model: **ED12** | Brand: **JONR**

1. INTRODUCTION

Thank you for choosing the JONR ED12 Wet/Dry Vacuum Cleaner. This appliance is designed to simplify your floor cleaning routine by combining vacuuming, washing, and mopping functions. Its cordless, lightweight design and self-cleaning features ensure a thorough and convenient cleaning experience for hard floors, effectively tackling pet hair, food residue, and various wet and dry messes.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Do not handle the plug or appliance with wet hands. Do not immerse the appliance in water. Use only the provided charging adapter.
- **Water Usage:** Use only clean water and recommended cleaning solutions in the clean water tank. Do not use flammable or combustible liquids.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not allow them to play with or operate the vacuum cleaner.
- **Maintenance:** Always unplug the appliance before performing any maintenance or cleaning. Ensure all parts are dry before reassembly.
- **Storage:** Store the appliance in a dry, indoor location when not in use.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- JONR ED12 Wet/Dry Vacuum Cleaner (Main Unit)
- Charging Station
- Dust Brush
- Side Brushes
- Power Adapter
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your JONR ED12 vacuum cleaner:

Reinigen Sie nassen und trockenen Müll mit einem Klick



Image: The JONR ED12 Wet/Dry Vacuum Cleaner in use, effectively cleaning a floor with various types of debris.

- **Handle:** Ergonomic handle for comfortable operation.
- **Clean Water Tank (CWT):** Holds fresh water and cleaning solution (850 ml capacity).
- **Dirty Water Tank (DWT):** Collects dirty water and debris (450 ml capacity).
- **Brush Roll:** Main cleaning component for scrubbing and picking up debris. Features improved edge cleaning.
- **Power Button:** Turns the appliance on/off.

- **Mode Button:** Switches between cleaning modes.
- **Self-Cleaning Button:** Initiates the self-cleaning cycle.
- **Charging Dock:** Base for charging and self-cleaning.

5. SETUP

5.1 Assembly

The JONR ED12 is designed for easy assembly. Simply connect the handle to the main body until it clicks into place. No tools are typically required.

5.2 Initial Charging

1. Place the vacuum cleaner on the charging dock.
2. Connect the power adapter to the charging dock and plug it into a wall outlet.
3. The indicator lights will show the charging status. A full charge takes approximately **3.5 hours**.
4. Ensure the appliance is fully charged before first use for optimal battery life.



Image: The JONR ED12 vacuum cleaner securely placed on its charging dock, ready for charging or self-cleaning.

5.3 Filling the Clean Water Tank (CWT)

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. You may add a small amount of non-foaming cleaning solution suitable for wet/dry vacuums. Do not exceed the MAX fill line.
3. Close the cap securely and reattach the clean water tank to the main unit.



Image: A person detaching and refilling the clean water tank of the JONR ED12, demonstrating easy access for maintenance.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

- To turn on, press the Power Button once.
- To turn off, press the Power Button again.

6.2 Cleaning Modes

The JONR ED12 offers multiple cleaning modes for different needs:

- **Auto Mode (Wet & Dry Cleaning):** This is the default mode for simultaneous vacuuming, washing, and mopping. It's ideal for general cleaning of wet and dry messes.
- **Suction Mode (Dry Vacuuming Only):** Press the Mode Button to switch to suction-only mode. This is suitable for vacuuming dry debris without dispensing water.

Image: A close-up of the JONR ED12 vacuum head on a floor with various types of dirt, illustrating its suction mode for dry debris.

6.3 Edge Cleaning

The JONR ED12 features an improved edge cleaning brush, allowing it to clean precisely along baseboards and into corners, ensuring no spots are missed.

Image: The JONR ED12 vacuum cleaner cleaning very close to a wall, showcasing its narrow edge design for effective corner and edge cleaning.

6.4 Self-Cleaning Function

After each use, it is recommended to run the self-cleaning cycle:

1. Ensure the clean water tank has sufficient water.
2. Place the vacuum cleaner on the charging dock.
3. Press the Self-Cleaning Button. The brush roll will automatically rinse itself thoroughly. This process takes approximately **30 seconds**.
4. Once complete, empty the dirty water tank.

Image: The JONR ED12 vacuum cleaner on its charging dock, with an inset showing the one-button start for the self-cleaning mode, which cleans the brush roll in 30 seconds.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your JONR ED12.

7.1 Emptying the Dirty Water Tank (DWT)

Empty the dirty water tank after every use, especially after self-cleaning, to prevent odors and maintain suction power.

1. Remove the dirty water tank from the main unit.
2. Open the tank and dispose of the dirty water and debris.
3. Rinse the tank and filter thoroughly with clean water.
4. Ensure the tank and filter are completely dry before reattaching.

Image: A woman and child using the JONR ED12 vacuum cleaner in a living room, with an inset showing the transparent dirty water tank containing collected debris, highlighting the need for regular emptying.

7.2 Cleaning the Brush Roll

While the self-cleaning function handles most of the brush roll cleaning, occasional manual inspection and cleaning may be necessary.

1. Turn off the appliance and remove the dirty water tank.
2. Detach the brush roll cover and remove the brush roll.
3. Remove any tangled hair or debris using the provided cleaning tool or scissors.

4. Rinse the brush roll under running water. Allow it to air dry completely before reinserting.



Image: The JONR ED12 vacuum cleaner effectively picking up hair from the floor, illustrating its design to prevent hair tangling around the brush roll.

7.3 Filter Maintenance

The JONR ED12 uses a sponge filter. Regularly clean and replace the filter as needed.

- Remove the sponge filter from the dirty water tank.
- Rinse the filter under running water until clean.
- Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the appliance with a wet filter.

8. TROUBLESHOOTING

If you encounter issues with your JONR ED12, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No power/Does not turn on	Low battery; Not charged	Charge the appliance fully (approx. 3.5 hours).
Poor suction	Dirty water tank full; Clogged brush roll/filter	Empty and clean the dirty water tank. Clean the brush roll and sponge filter.
Water not dispensing	Clean water tank empty; Water outlets clogged	Refill the clean water tank. Check and clean water outlets if necessary.
Appliance stops during operation	Dirty water tank full; Battery low	Empty the dirty water tank. Recharge the appliance.
Unpleasant odor	Dirty water tank not cleaned	Thoroughly clean the dirty water tank, brush roll, and filter after each use.

9. SPECIFICATIONS

Feature	Specification
Brand	JONR
Model Name	JONR ED12
Model Number	ED12

Feature	Specification
Power Source	Battery
Voltage	22.2 Volts DC (VDC)
Wattage	200 watts
Item Weight	3.63 Kilograms
Clean Water Tank Capacity	850 ml
Dirty Water Tank Capacity	450 ml
Charging Time	3.5 Hours
Battery Life / Run Time	30 Minutes
Filter Type	Sponge Filter
Recommended Surface	Hard Floor
Noise Level	75 Decibels
Cleaning Path Width	32 Centimeters
Dimensions (L x W x H)	54.5L x 32W x 34H centimeters

10. WARRANTY AND SUPPORT

JONR is committed to providing high-quality products and excellent customer service.

- **Warranty:** The JONR ED12 comes with a **one-year warranty** for worry-free use. Please retain your proof of purchase.
- **Returns:** Returns are accepted within **30 days** of purchase. Refer to your retailer's return policy for details.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact our Professional After-Sales Service Team. We offer **24/7 E-Mail Support**.

Image: An overview of JONR's customer service, including professional after-sales support, a one-year warranty, and a 30-day return policy.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question