

[Manuals.plus](#) /

› [LEDIARY](#) /

› LEDIARY 23-inch Farmhouse Ceiling Fan with Lights Instruction Manual

LEDIARY B0BZPWP9ZS

LEDIARY 23-inch Farmhouse Ceiling Fan with Lights Instruction Manual

Model: B0BZPWP9ZS

1. INTRODUCTION

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your LEDIARY 23-inch Farmhouse Ceiling Fan with Lights. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or personal injury, always turn off the main power supply at the circuit breaker before beginning installation or performing any maintenance.

CAUTION:

- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electrical Code (NEC).
- Consult a qualified electrician if you are unfamiliar with electrical wiring.
- The fan must be mounted to a ceiling joist or support structure capable of supporting a minimum of 35 lbs (15.9 kg).
- Do not bend the blade holders during installation or cleaning.
- Keep children away from the fan during operation.
- Do not operate the fan if any part is damaged.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Ceiling Fan Motor Assembly
- Fan Blades (3)
- Light Kit with Caged Shade
- Remote Control
- Down-rods (4-inch and 8-inch)

- Mounting Bracket
- Hardware Pack (screws, wire nuts, washers)
- Instruction Manual



Image: LEDIARY 23-inch Farmhouse Ceiling Fan with Lights, showing the fan, light kit, and remote control. Two down-rods (4-inch and 8-inch) are also visible.

4. SPECIFICATIONS

 
Feature	Detail
Brand	LEDIARY
Model	B0BZPWP9ZS
Product Dimensions	16.14"D x 16.14"W x 7.68"H (Fan body: 23" diameter)

Voltage	120 Volts (AC)
Power Source	AC
Number of Power Levels	6 Fan Speeds
Control Method	Remote Control
Indoor/Outdoor Usage	Indoor (Suitable for covered outdoor patios)
Recommended Bulb Type	E26 base, Max 60W (Bulb not included)
Special Features	Remote Controlled, Reversible Motor, Timer Function (1/2/4 hours), Memory Function



Product Specifications

High Quality Small Ceiling Fan with Lights

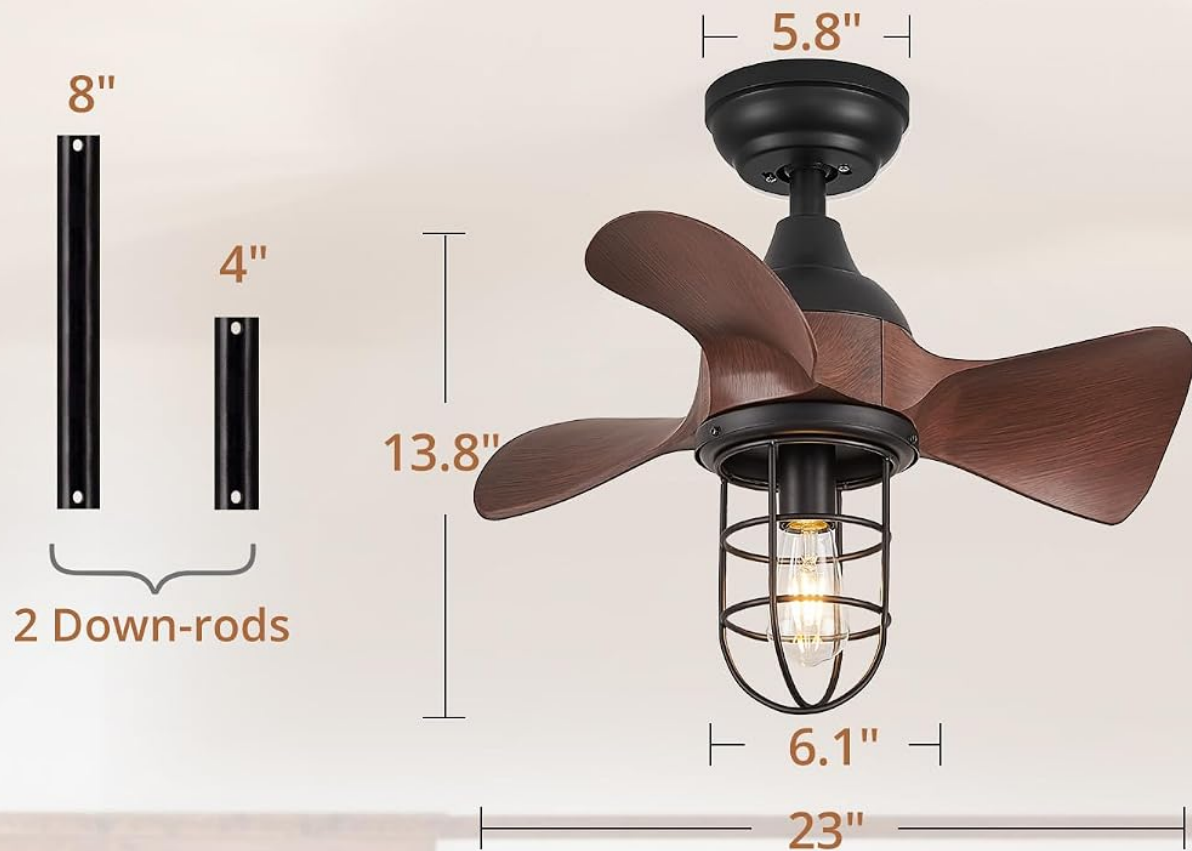

Recommended Bulbs:

Not included



Incandescent
Bulb/A19



Edison Bulb
ST19



LED Bulb
A19

Installation Height:

10ft
9ft
8ft



Image: Diagram showing the dimensions of the LEDIARY ceiling fan (23-inch diameter, 13.8-inch height with 4-inch down-rod) and recommended bulb types (Incandescent A19, Edison ST19, LED A19) with E26 base, max 60W.

5. SETUP AND INSTALLATION

Before You Begin:

- Turn off power at the circuit breaker.
- Ensure the mounting location can support the fan's weight.
- Gather necessary tools: screwdriver, wire strippers, ladder, electrical tape.

5.1 Mounting the Bracket

1. Secure the mounting bracket to the ceiling junction box using the screws provided. Ensure the bracket is firmly attached to a structural beam.

5.2 Assembling the Fan

1. Attach the chosen down-rod (4-inch or 8-inch) to the motor assembly.
2. Feed the electrical wires from the fan through the down-rod.
3. Carefully lift the fan assembly and hang it from the mounting bracket.

5.3 Electrical Wiring

1. Connect the fan's wires to the household wiring according to the diagram in your separate wiring guide (typically black to black, white to white, ground to ground). Use wire nuts to secure connections.
2. Tuck all wires neatly into the junction box.

5.4 Attaching Blades and Light Kit

1. Secure the three ABS fan blades to the motor housing.
2. Connect the light kit wiring to the fan's light wiring.
3. Attach the caged light shade to the light kit.
4. Install an E26 base bulb (not included) into the light socket.

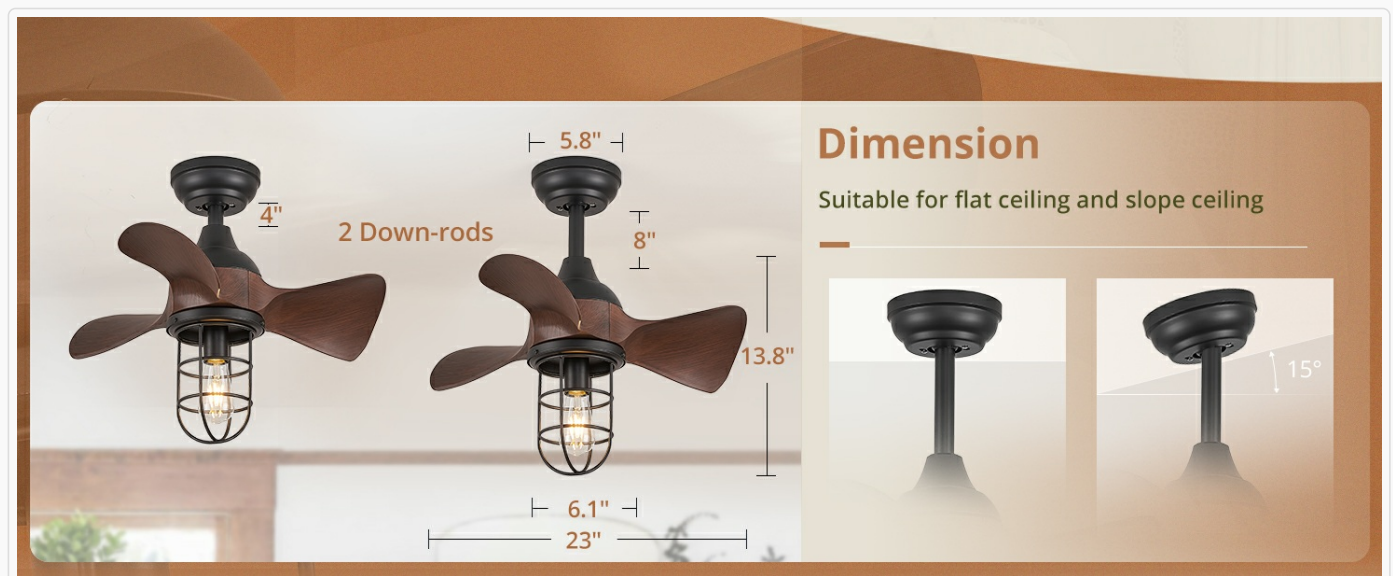 


Image: Diagram illustrating the two down-rod options (4-inch and 8-inch) and how the fan can be installed on both flat and sloped ceilings (up to 15 degrees).

6. OPERATING INSTRUCTIONS

After installation, restore power at the circuit breaker. The fan is operated using the included remote control.

6.1 Remote Control Functions



6 Speeds Setting

Choose the wind speed according to your need



1-2 Speeds
Comfortable wind



3-4 Speeds
Natural wind



5-6 Speeds
Cool Wind

Image: Detailed diagram of the remote control, highlighting buttons for Light ON/OFF, Fan ON/OFF, 6 Speed Settings, Reversible Motor (Forward/Reverse), Timer (1H/2H/4H), and Switch Silence.

- **Light ON/OFF:** Press the light bulb icon button to turn the light on or off.
- **Fan ON/OFF:** Press the fan icon button to turn the fan on or off.
- **Speed Settings (1-6):** Use buttons 1 through 6 to adjust the fan speed. 1-2 for comfortable wind, 3-4 for natural

wind, 5-6 for cool wind.

- **Reversible Motor (F/R):** Press 'F' for forward (summer mode) and 'R' for reverse (winter mode).
- **Timer (1H/2H/4H):** Set the fan to turn off automatically after 1, 2, or 4 hours.
- **Switch Silence:** Mutes the beep sound when operating the remote.
- **Memory Function:** The fan retains the last light and fan speed settings when turned off and on again.

6.2 Reversible Function

The reversible motor allows for multi-seasonal use:

- **Summer Mode (Forward):** The fan blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Reverse):** The fan blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling, distributing heat evenly.

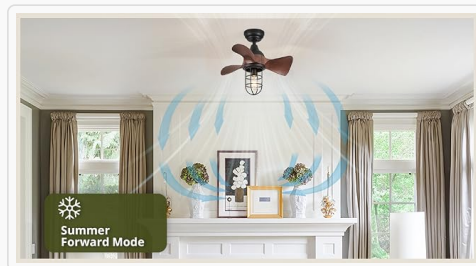 


Image: Diagram illustrating the fan in Summer Forward Mode, where cool air is pushed downwards.

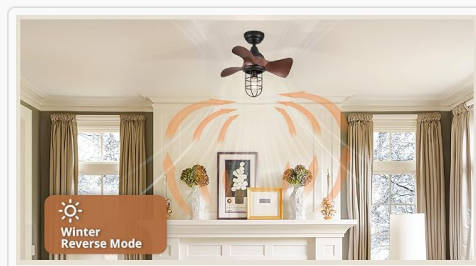 


Image: Diagram illustrating the fan in Winter Reverse Mode, where warm air is drawn upwards and circulated.

6.3 Controlling Multiple Fans with One Remote

If you have multiple LEDIARY fans and wish to control them with a single remote:

1. Ensure the fan is powered off.
2. Turn on the light for the fan you wish to pair.
3. Within 5 seconds of turning on the light, press the "F" button, then "ALL OFF", then "F" again quickly in sequence on the remote.
4. The fan will flash twice, indicating successful pairing.

Detail Display

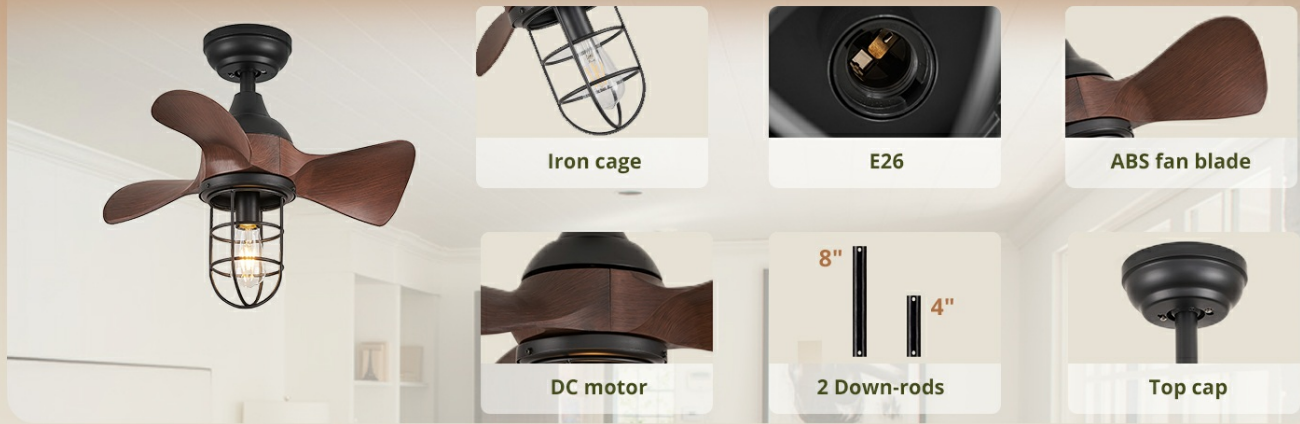 


Image: Visual guide on how to pair one remote control to multiple LEDIARY ceiling fans, showing the sequence of button presses.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Dusting:** Periodically dust the fan and light kit to prevent buildup.
- **Blade Inspection:** Check fan blades for any cracks or damage. Ensure all blade screws are tight.
- **Light Bulb Replacement:** Ensure power is off before replacing the light bulb. Use an E26 base bulb, maximum 60W.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Light does not work	Bulb faulty or loose; Loose wire connections; No power to light kit.	Replace or tighten bulb; Check light kit wiring; Ensure power is supplied to the light.
Fan wobbles	Loose mounting screws; Unbalanced blades; Down-rod not seated correctly.	Tighten all mounting screws; Ensure blades are securely attached; Check down-rod seating.
Remote control not working	Low battery; Remote not paired; Obstruction between remote and receiver.	Replace battery; Re-pair remote (refer to section 6.3); Ensure clear line of sight.
Fan makes excessive noise	Loose screws; Motor issue; Blades hitting an obstruction.	Check and tighten all screws; Contact customer support if motor noise persists; Ensure no obstructions.

9. WARRANTY AND SUPPORT

LEDIARY provides assurance services. If you encounter any problems with your product, please feel free to contact us. We aim to reply and solve your problem within 24 hours. For support, please visit the [LEDIARY Store on Amazon](#) or refer to your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0BZPWP9ZS>
More documents and user manuals: <https://manuals.plus/>