

[Manuals.plus](#) /

› [SHTUMPA](#) /

› SHTUMPA 21V Electric Pruning Shears User Manual

SHTUMPA B01HZJ001-41

SHTUMPA 21V Electric Pruning Shears User Manual

Model: B01HZJ001-41

1. INTRODUCTION

Thank you for choosing the SHTUMPA 21V Electric Pruning Shears. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new tool. Please read this manual thoroughly before first use and retain it for future reference.

The SHTUMPA electric pruning shears are designed for efficient and effortless cutting of branches up to 1.6 inches (40mm) in diameter, making gardening tasks easier and reducing hand fatigue compared to traditional manual shears.



Image 1: User demonstrating the lightweight and easy operation of the SHTUMPA electric pruning shears.

2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury or property damage.

- **Read All Instructions:** Familiarize yourself with the tool's operation and safety features before use.
- **Keep Hands Clear:** The blades are extremely sharp and powerful. Keep hands and fingers away from the cutting blades at all times.
- **Double Trigger Activation:** The shears require a double trigger press to activate, minimizing accidental starts.
- **Long-Press Shut-Off:** Use the long-press shut-off function to safely power down the tool when not in use or during maintenance.
- **Wear Protective Gear:** Always wear safety glasses, gloves, and appropriate clothing to protect against flying debris and potential cuts.
- **Avoid Overload:** The tool and batteries feature overload and temperature protection. Do not force the shears

through branches thicker than the specified cutting diameter.

- **Secure Work Area:** Ensure your work area is clear of obstacles and bystanders.
- **Battery Safety:** Use only the provided 21V 2000mAh rechargeable batteries and charger. Do not expose batteries to extreme temperatures or moisture.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x Electric Pruning Shears
- 2x 21V 2000mAh Lithium-Ion Batteries
- 1x Battery Charger
- 1x Replacement Blade Set
- 1x Hexagon Wrench Set
- 1x Toolbox/Carrying Case



Image 2: Complete package contents of the SHTUMPA electric pruning shears kit.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your electric pruning shears:



Image 3: Labeled diagram of the electric pruning shears components.

- **Fixed Blade:** The stationary cutting edge.
- **Movable Blade:** The active cutting edge that moves to perform the cut.
- **Lubricant Oil Port:** Point for applying lubrication to the blades.
- **Trigger:** Activates the cutting action.
- **Non-Slip Handle:** Ergonomically designed for secure grip.
- **Power Switch:** Turns the tool on/off.
- **21V 2Ah Lithium Battery:** Provides power to the shears.

5. SETUP

Follow these steps to prepare your electric pruning shears for use:

1. **Charge Batteries:** Fully charge both 21V lithium-ion batteries using the provided charger before first use. Each battery typically lasts 3-4 hours.
2. **Insert Battery:** Push the button on the battery and slide it firmly into the base of the pruning shears until it clicks into place.

3. **Turn On Power:** Locate the power switch on the battery unit and slide it to the "ON" position.
4. **Activate Blades:** Press the trigger twice quickly. The tool will beep once, and the blades will open, indicating it is ready to cut.

SCHTUMPA Electric Pruning Shear for Easier Pruning!



Image 4: Quick setup guide for the electric pruning shears.

6. OPERATING INSTRUCTIONS

Once the shears are set up and activated, follow these guidelines for effective pruning:

1. **Positioning:** Place the branch to be cut between the open blades. Ensure the branch is within the maximum cutting diameter of 1.6 inches (40mm).
2. **Cutting:** Press the trigger to close the blades and cut the branch. The powerful motor will make a clean cut.
3. **Continuous Use:** For continuous pruning, simply release and press the trigger for each cut.
4. **Safety Pause:** If the tool is idle for a few minutes, the blades may close automatically as a safety feature. To reactivate, press the trigger twice quickly.
5. **Optimal Cutting:** For best results and to prolong blade life, aim for clean, straight cuts. Avoid twisting the tool during a cut.



SK5 Strength Blades
High-strength carbon steel



Efficient Pruning
130/min



cutting Diameter
0-40mm(1.57")



Lithium battery
Lithium battery

Image 5: Demonstrating the 40mm cutting capacity of the shears.

The electric pruning shears are suitable for various gardening tasks, including pruning fruit trees, shrubs, and general garden maintenance.

Your browser does not support the video tag.

Video 1: Official demonstration of the SCHATUMPA Electric Pruning Shear in action, highlighting its ease of use and cutting power for various branches.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pruning shears:

- **Clean Blades:** After each use, clean the blades with a damp cloth to remove sap and debris.
- **Lubricate Blades:** Apply a few drops of lubricating oil to the lubricant oil port and along the blades regularly to ensure smooth operation and prevent rust.
- **Blade Sharpening:** If the blades become dull, they can be sharpened using a suitable sharpening tool or replaced with the included replacement blade set. Refer to the replacement blade instructions for proper installation.

- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for extended periods.
- **Storage:** When not in use, store the shears and accessories in the provided carrying case in a dry, secure location, out of reach of children.

Your browser does not support the video tag.

Video 2: Official video demonstrating the maintenance and storage of the SCHATUMPA Electric Pruning Shear, including blade lubrication.

8. TROUBLESHOOTING

If you encounter issues with your SCHATUMPA Electric Pruning Shears, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shears do not turn on.	Battery not inserted correctly or discharged. Power switch off.	Ensure battery is fully charged and properly inserted. Turn the power switch to "ON".
Blades do not open after turning on.	Safety activation not performed.	Press the trigger twice quickly to activate the blades.
Blades cut slowly or get stuck.	Dull blades. Insufficient lubrication. Cutting branches too thick.	Sharpen or replace blades. Apply lubricating oil. Do not attempt to cut branches exceeding 1.6 inches (40mm).
Tool stops during operation.	Battery low or tool overloaded.	Recharge battery. Reduce the size of branches being cut. Allow tool to cool if overheated.

9. SPECIFICATIONS

- **Brand:** SCHATUMPA
- **Model Number:** B01HZJ001-41
- **Power Source:** Battery Powered
- **Battery Type:** 21V 2000mAh Lithium Ion
- **Cutting Diameter:** Up to 40mm (1.6 inches)
- **Blade Material:** SK5 High Carbon Steel
- **Item Weight:** 1.6 Pounds
- **Handle Material:** Alloy Steel
- **Blade Type:** Bypass
- **Hand Orientation:** Ambidextrous

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official SCHATUMPA website. Keep your purchase receipt as proof of purchase.

