

Tibuta TID15.6

Tibuta 15.6 Inch WiFi Digital Photo Frame User Manual

Model: TID15.6

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Tibuta 15.6 Inch WiFi Digital Photo Frame. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.



Image 1.1: Tibuta 15.6 Inch WiFi Digital Photo Frame in use, showing its touchscreen capabilities and companion app integration.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the device or personal injury:

- Do not expose the device to water or excessive moisture.
- Avoid placing the device near heat sources or in direct sunlight for extended periods.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep the device away from children and pets.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Tibuta 15.6 Inch WiFi Digital Photo Frame
- Power Adapter
- User Manual (this document)
- Stand

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your digital photo frame.

4.1 Front View



Image 4.1: Front view and key features of the Tibuta 15.6 Inch Digital Photo Frame.

- **15.6 Inch HD Touch Screen:** High-definition display with 1280x800 resolution and IPS technology for wide viewing angles.
- **Touchscreen Interface:** Allows for direct interaction with the frame's menus and settings.

4.2 Rear View and Ports

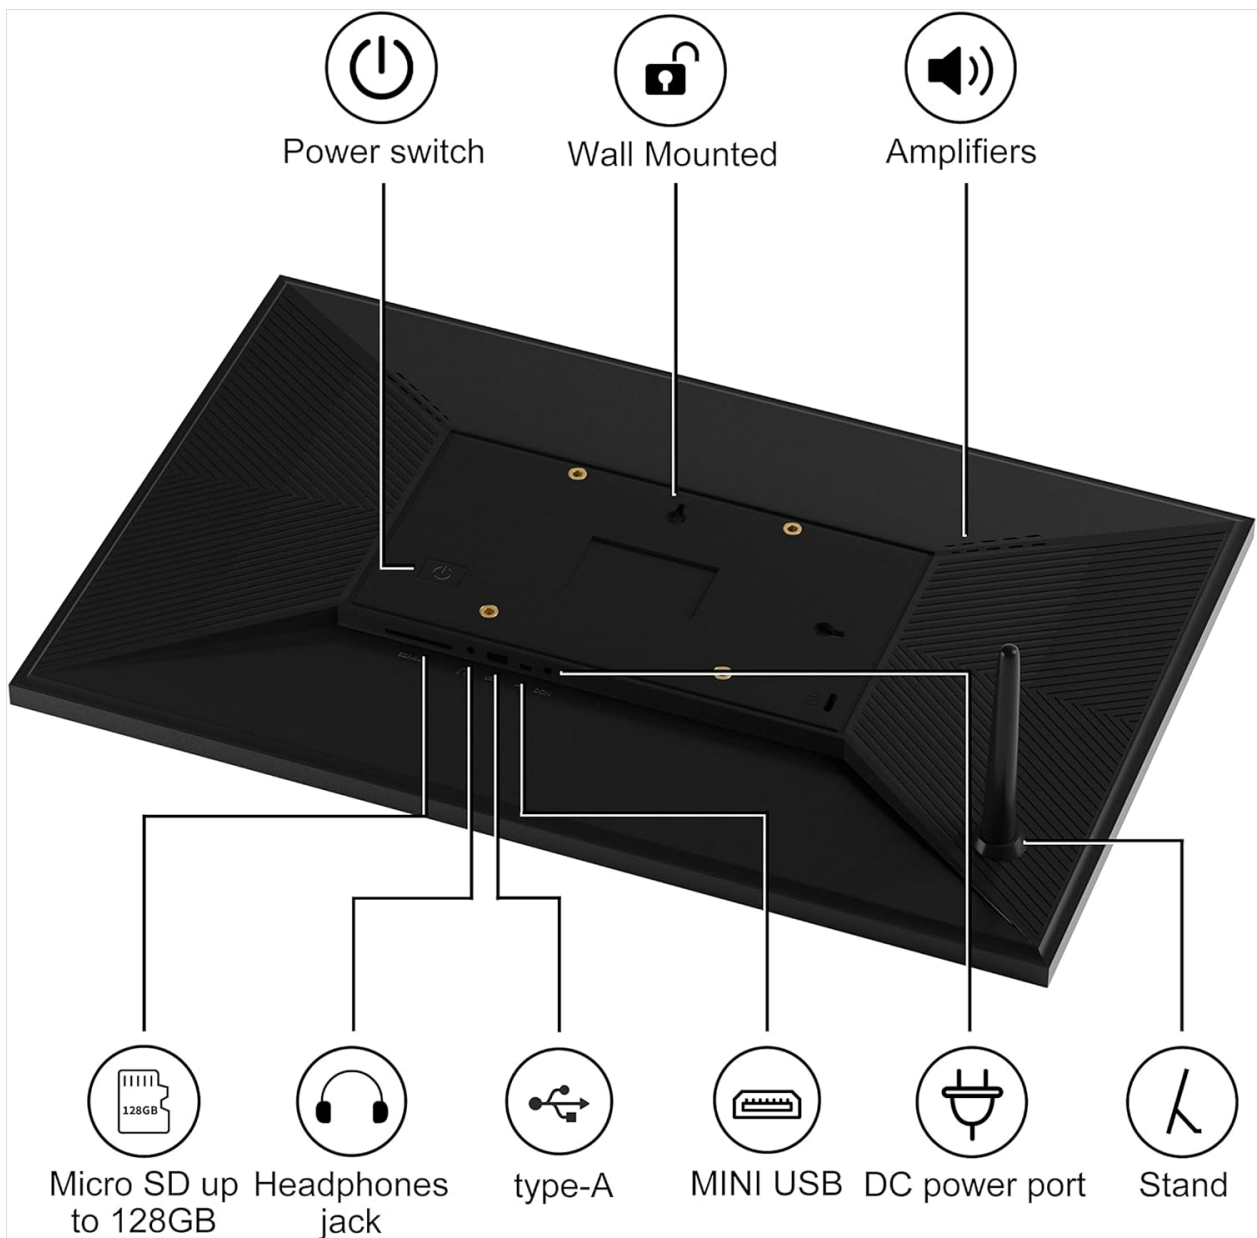


Image 4.2: Rear view of the Tibuta Digital Photo Frame with labeled ports and features.

- **Power Switch:** Turns the device on or off.
- **Wall Mounted:** Mounting points for wall installation.
- **Amplifiers:** Integrated speakers for audio playback.
- **Micro SD Card Slot:** Supports Micro SD cards up to 128GB for expanded storage.
- **Headphones Jack:** For connecting external audio devices.
- **Type-A USB Port:** For connecting USB drives or other peripherals.
- **Mini USB Port:** For data transfer (if applicable).
- **DC Power Port:** Connects to the power adapter.
- **Stand:** Attachable stand for desktop placement.

5. SETUP

5.1 Initial Power On

1. Attach the stand to the back of the photo frame for stable placement on a flat surface.
2. Connect the power adapter to the DC Power Port on the back of the frame.
3. Plug the power adapter into a wall outlet.

4. Press the Power Switch to turn on the device.
5. Follow the on-screen prompts to select your language, time zone, and connect to a Wi-Fi network.

5.2 Connecting to Wi-Fi

1. From the main menu, navigate to "Settings" and then "Wi-Fi".
2. Select your desired Wi-Fi network from the list.
3. Enter the Wi-Fi password using the on-screen keyboard.
4. Tap "Connect". Once connected, a Wi-Fi icon will appear on the screen.

5.3 Installing the Companion App

To share photos and videos remotely, download the dedicated companion app.



Image 5.1: Download the Uhale App from Google Play or the App Store.

1. On your smartphone or tablet, open the [Google Play Store](#) (for Android devices) or the [Apple App Store](#) (for iOS devices).
2. Search for "Uhale App" (or the specified app name in your frame's instructions).
3. Download and install the app.

4. Follow the in-app instructions to pair your device with the digital photo frame. This typically involves entering a unique code displayed on your photo frame.

6. OPERATING INSTRUCTIONS

6.1 Sharing Photos and Videos via App

Once the frame is connected to Wi-Fi and paired with the app:

1. Open the companion app on your smartphone.
2. Select the photos or videos you wish to share.
3. Tap the "Send" or "Share" button within the app.
4. The selected media will be transferred to your digital photo frame and displayed.

The frame supports various display modes, including timing, zooming, and cropping, which can often be adjusted via the app or directly on the frame's settings.

6.2 Using External Storage (Micro SD Card)


The frame has 16GB of built-in storage and supports Micro SD cards up to 128GB.

1. Insert a Micro SD card into the designated slot on the back of the frame.
2. The frame will automatically detect the card.
3. Navigate to the "Gallery" or "Files" section on the frame to access content from the Micro SD card.
4. You can copy files from the Micro SD card to the internal storage or play them directly.

6.3 Automatic Rotation (Gravity Sensing)

The frame features gravity sensing for automatic rotation, adjusting the display orientation based on how the frame is positioned (landscape or portrait).

Auto-Drehung

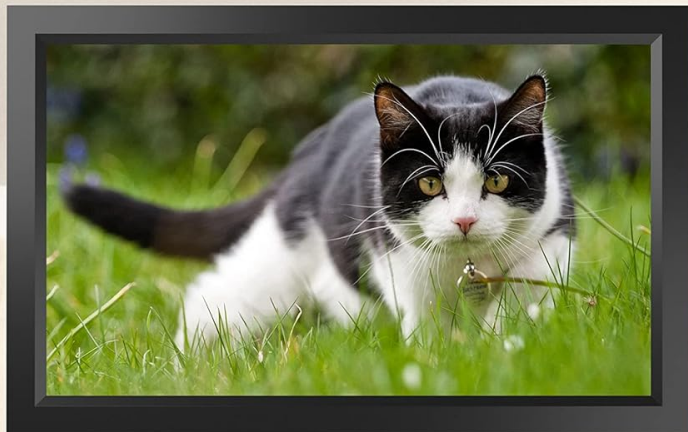

Photos



Audio



Video

Image 6.1: Automatic display rotation based on frame orientation.

Ensure the gravity sensing feature is enabled in the frame's settings if you wish to utilize this functionality.

6.4 Display Settings

Customize your viewing experience through the frame's settings menu:

- **Slideshow Interval:** Adjust how long each photo is displayed.
- **Transition Effects:** Choose different effects between photos.
- **Brightness:** Adjust screen brightness.
- **Sleep Mode/Timer:** Set schedules for the frame to turn on/off automatically.
- **Zoom/Crop:** Options to adjust how photos fit the screen.

7. MAINTENANCE

7.1 Cleaning the Screen

To clean the touchscreen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

7.2 General Care

- Keep the frame in a dry environment.
- Protect it from dust by occasionally wiping the frame's body with a soft cloth.
- Avoid dropping the device or subjecting it to strong impacts.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to both the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Incorrect password, out of range, or network issue.	Verify the Wi-Fi password. Move the frame closer to the router. Restart your router.
Photos/videos not appearing.	App not paired, incorrect file format, or storage issue.	Ensure the app is correctly paired. Check if the media files are in a supported format. Verify sufficient storage space on the frame or SD card.
Touchscreen is unresponsive.	Temporary software glitch.	Restart the frame by holding the power button or unplugging and replugging the power adapter.
Automatic rotation not working.	Feature disabled or sensor issue.	Check the frame's settings to ensure gravity sensing/auto-rotation is enabled.

9. SPECIFICATIONS

Feature	Detail
Model Number	TID15.6
Screen Size	15.6 Inches
Display Type	IPS Touch Screen
Resolution	1280x800
Internal Storage	16GB (approx. 20,000 photos)
External Storage	Micro SD card up to 128GB
Connectivity	Wi-Fi
Special Features	Gravity Sensing Automatic Rotation, Touchscreen
Dimensions (L x W x H)	39.12 x 24.64 x 2.51 cm
Weight	1.48 kg
Power Source	Battery Powered (includes 1 Lithium Ion battery)

Note: Specifications are subject to change without prior notice.

10. WARRANTY AND SUPPORT


10.1 Product Warranty

The Tibuta Digital Photo Frame comes with a one-year product warranty. This warranty covers manufacturing defects and operational issues arising from normal use. If any issues arise during this period, please contact our after-sales support team for assistance.

10.2 Customer Support

For technical support, warranty claims, or any other inquiries, please refer to the contact information provided on the Tibuta official website or your purchase documentation. When contacting support, please have your model number (TID15.6) and purchase date available.

Related Documents - TID15.6

90*135mm 风琴折	Tibuta MasterPad E100 Tablet User Manual and Warranty Information This document provides important safety instructions, legal notices, FCC compliance information, package contents, device presentation, and warranty details for the Tibuta MasterPad E100 tablet.
90*135mm 风琴折	Tibuta MasterPad T100 User Manual and Warranty Information Comprehensive user manual and warranty card for the Tibuta MasterPad T100 tablet, including important safety instructions, getting started guide, and product specifications.
	TIBUTA MasterPad W200 Tablet User Manual and Safety Guide Official user manual and safety guide for the TIBUTA MasterPad W200 tablet, covering package contents, getting started, safety instructions, legal notices, and FCC compliance. Includes detailed information on battery safety, general usage precautions, and regulatory compliance.



[Tibuta W120 Quick Start Guide - Setup and Features](#)

Get started with your Tibuta W120 tablet PC. This guide provides essential information on setup, device features, ports, safety guidelines, and keyboard usage.



[Aluratek 11.6" WiFi Digital Photo Frame: Instructional Manual & Setup Guide](#)

Comprehensive instructional manual for the Aluratek 11.6-inch WiFi Digital Photo Frame with Live Video Chat. Learn setup, app configuration, photo transfer, social media linking, and troubleshooting.



[Uhale Wifi Cloud Photo Frame 15.6 Inch User Manual](#)

User manual for the Uhale Wifi Cloud Photo Frame 15.6 inch, covering setup, features, app usage, settings, and troubleshooting.