

- › [Bmax](#) /
- › [Bmax 14-inch Laptop User Manual \(Model: BMAX S14A\)](#)

Bmax BMAX S14A

Bmax 14-inch Laptop User Manual

Model: BMAX S14A

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Bmax 14-inch Laptop, Model BMAX S14A. Please read this guide thoroughly before operating your device to ensure optimal performance and longevity. Keep this manual for future reference.

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your Bmax laptop.

Laptop Components



Front-Left View: Displays the laptop open, showcasing the screen, keyboard, and touchpad from an angled perspective.



Left Side View: Illustrates the left side of the laptop, highlighting available ports such as USB and HDMI connections.



Right Side View: Shows the right side of the laptop, detailing the power input and additional USB ports.



Keyboard and Touchpad: A direct overhead view of the laptop's keyboard layout and integrated touchpad.



Closed Back View: The laptop in a closed position, displaying the Bmax logo on the lid.

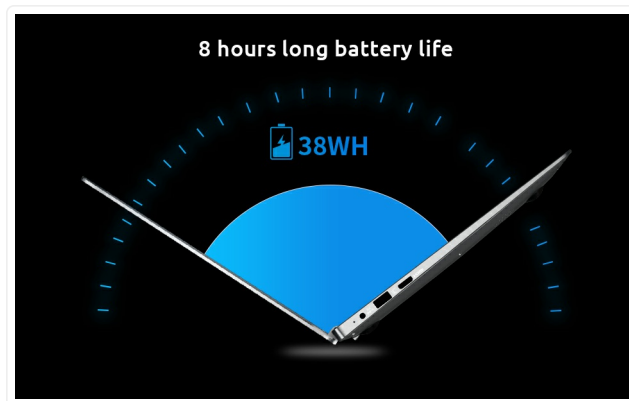
SETUP

Initial Power On

1. **Unpack:** Carefully remove the laptop and all accessories from the packaging.
2. **Connect Power:** Plug the power adapter into the laptop's charging port and then into a wall outlet.
3. **Power On:** Open the laptop lid and press the power button located on the keyboard. The laptop will boot up and guide you through the initial Windows setup process.

Charging the Battery

For first-time use, it is recommended to fully charge the laptop battery. The charging indicator light will typically show orange or red while charging and turn white or off when fully charged. A full charge provides approximately 8 hours of battery life.



Battery Life Illustration: A graphic indicating the laptop's 38WH battery capacity and approximately 8 hours of usage time.

Connecting Peripherals

Use the available ports to connect external devices:

- **USB Ports:** For mice, keyboards, external hard drives, and other USB devices.
- **HDMI Port:** To connect to an external monitor or TV.
- **Audio Jack:** For headphones or external speakers.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press the power button.
- **To Shut Down:** Click the Start button, then Power, and select 'Shut down'.
- **To Restart:** Click the Start button, then Power, and select 'Restart'.
- **To Sleep:** Close the lid or click the Start button, then Power, and select 'Sleep'.

Using the Touchpad

The laptop features a precision touchpad supporting multi-touch gestures for enhanced navigation:



Two-finger swipe: Scroll through documents or web pages.



Pinch with two fingers: Zoom in or out on content.



Three-finger tap: Preview task tray or browse all tasks.



Four-finger tap: Open Action Center.

Keyboard Functions

The keyboard includes standard keys and function keys (F1-F12) that can be activated with the 'Fn' key for special functions like adjusting brightness, volume, or toggling Wi-Fi.

Connecting to Wi-Fi

1. Click the Wi-Fi icon in the system tray (usually bottom-right of the screen).
2. Select your desired network from the list.
3. Enter the network password if prompted and click 'Connect'.

Using External Displays (HDMI)

Connect an HDMI cable from your laptop's HDMI port to an external monitor or TV. The display settings can be adjusted in your operating system to extend, duplicate, or use only the external display.

MAINTENANCE

Cleaning

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Keyboard and Casing:** Use a soft cloth. For dust, a can of compressed air can be used.

Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the laptop to extreme temperatures.
- If storing the laptop for an extended period, charge the battery to about 50-60%.

Storage

Store the laptop in a cool, dry place away from direct sunlight and extreme temperatures. Use a protective sleeve or bag when transporting.

Software Updates

Regularly check for and install operating system and driver updates to ensure optimal performance and security.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Bmax laptop.

- **Laptop does not power on:** Ensure the power adapter is securely connected and the battery has sufficient charge. Try a different power outlet.
- **Screen is blank or flickering:** Restart the laptop. If connected to an external monitor, try disconnecting it. Check display settings.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled. Restart your router and modem. Check if other devices can connect to the network.
- **Slow performance:** Close unnecessary applications. Check for background updates. Ensure sufficient free storage space.
- **Touchpad not responding:** Ensure the touchpad is not disabled (check function keys). Restart the laptop.
- **Battery not charging:** Verify the power adapter is working correctly. Check the charging port for debris.

If problems persist, refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Detailed technical specifications for the Bmax 14-inch Laptop (Model BMAX S14A).

Feature	Specification
Screen Size	15.6 Inches (Note: Product title states 14", specifications indicate 15.6")
Screen Resolution	1920 x 1080 pixels (Full HD)
Processor	1.1 GHz (Intel Celeron, 4 Processors)
RAM	16 GB (DDR4 SDRAM)
Hard Drive	256 GB SSD (Expandable up to 1TB)
Item Weight	2.64 pounds (1.2 Kilograms)

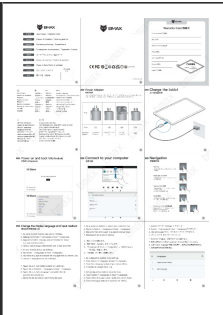

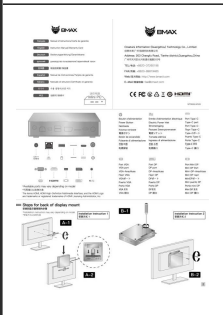

Feature	Specification
Product Dimensions	12.9 x 8.5 x 0.9 inches
Connectivity	Bluetooth, HDMI, USB (3 Total), Wi-Fi (2.4G/5G)
Power Source	Battery Powered (38WH)
Human Interface Input	Touch Pad



WARRANTY AND SUPPORT

Your Bmax laptop comes with a **12-month repair period** from the date of purchase. Additionally, a **30-day return policy** is available. For any technical assistance or inquiries, Bmax offers **24-hour online support**.

For further support or to access the Bmax brand store, please visit the official Bmax store on Amazon:[Bmax Amazon Store](#).

Related Documents - BMAX S14A

	<p>BMAX Kids Tablet I9 Plus User Manual - Features and Operation</p> <p>Official user manual for the BMAX Kids Tablet I9 Plus, featuring Android 15, 8GB RAM, 64GB ROM, a 10.1-inch screen, and Allwinner RK3562 processor. Learn about setup, features, and safety.</p>
	<p>BMAX Mini PC User Manual and Installation Guide</p> <p>Comprehensive user manual for BMAX Mini PC, covering initial setup, language settings, hardware installation (M.2 SSD, 2.5" HDD/SSD, memory modules), and recovery environment. Includes FCC compliance information and safety warnings.</p>
	<p>BMAX B2 PLUS Mini PC User Manual and Warranty Information</p> <p>Comprehensive guide for the BMAX B2 PLUS Mini PC, covering setup, features, and warranty details. Includes multilingual instructions and technical specifications.</p>
	<p>BMAX MB01 Tablet PC User Manual</p> <p>User manual for the BMAX MB01 Tablet PC, covering appearance, features, settings, and FCC compliance information.</p>

 <p>The image shows a product brochure for the BMAX Merchandising Refrigerator KXG-750. It features a large image of the refrigerator on the left. To the right, there's a section titled 'CORE TECHNOLOGY' with icons for energy efficiency, noise reduction, and other features. Below that, a section titled 'FLEXIBLE USE OF VARIOUS OCCASIONS' shows four small images of the refrigerator in different settings: a kitchen, a bar, a retail store, and a home. The BMAX logo is at the top left, and 'C E 4B CB' is at the bottom left.</p>	<p>BMAX Merchandising Refrigerator KXG-750 Product Specifications and Features</p> <p>Detailed overview of the BMAX Merchandising Refrigerator KXG-750, including core technology, flexible use applications, and comprehensive product specifications for various models.</p>
 <p>The image shows a product brochure for BMAX phone cases. It features a large image of several phone cases in different colors (pink, orange, black, red) on the left. To the right, there's a section titled 'Perfectly protects' with icons for scratch protection, drop protection, and dust protection. Below that, a section titled 'How to play safely?' shows four small images of people using their phones. The BMAX logo is at the top left, and 'CUSTOMER SERVICE' is at the bottom left.</p>	<p>BMAX Phone Cases: Perfect Fit & Optimal Protection Guide</p> <p>Explore BMAX phone cases, including silicone hard, carbon soft, booktype, and bookcase styles, all designed for a perfect fit. Learn installation tips and discover how BMAX cases provide optimal protection against scratches and drops, complementing BMAX screen protectors.</p>