



Manuals.plus /

- › Michael Kors /
- › Michael Kors Runway Men's Watch Instruction Manual

## Michael Kors MK9105

# Michael Kors Runway Men's Watch Instruction Manual

MODEL: MK9105

## Introduction

Welcome to your new Michael Kors Runway Men's Watch, Model MK9105. This timepiece is crafted from sleek stainless steel, featuring a chronograph movement and a striking blue dial. Designed for the modern individual, this watch combines sophisticated style with robust functionality, including water resistance up to 100 meters. This manual provides essential information for the proper setup, operation, maintenance, and care of your watch to ensure its longevity and optimal performance.

## Product Overview

The Michael Kors Runway watch is a sporty and bold statement piece. It features a round 45mm stainless steel case with a blue dial and a mineral crystal face designed to resist scratches. The silver stainless steel bracelet band is 24mm wide, with removable links for a customized fit. The watch is equipped with a quartz movement, offering a chronograph analog display with a date window and three sub-dials for tracking minutes, seconds, and 24-hour time, along with stopwatch functionality.



Front view of the Michael Kors Runway Men's Watch, showcasing its blue dial and silver-tone stainless steel band.



Side view of the watch, highlighting the crown and chronograph pushers.



Rear view of the watch, showing the engraved clasp.



Close-up of the watch dial, detailing the chronograph sub-dials and date window.



The Michael Kors Runway watch as worn on a male wrist, illustrating its fit and presence.



The white Michael Kors branded box in which the watch is packaged.



A visual guide comparing various watch case sizes on a wrist, including the 45mm size of this model.

## Setup

### Setting the Time

1. Pull the crown (middle button on the right side) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into position 0 (normal position) to start the watch.

### Setting the Date

1. Pull the crown out to position 1.
2. Turn the crown clockwise to advance the date. If the date changes during the day, advance it by 12 hours.
3. Push the crown back into position 0.

### Adjusting the Bracelet

The stainless steel bracelet can be adjusted by adding or removing links. It is recommended to have this procedure performed by a qualified jeweler or watch repair professional to avoid damaging the watch or bracelet.

## Operating Instructions

### Using the Chronograph (Stopwatch)

Your watch features a chronograph function with three sub-dials to measure elapsed time.

1. **Start:** Press the top pusher (button above the crown) to start the chronograph. The large second hand will begin to move, along with the sub-dials tracking minutes and 24-hour time.
2. **Stop:** Press the top pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the bottom pusher (button below the crown) to reset the chronograph hands to their zero positions.

### Understanding Sub-Dials

- One sub-dial tracks the chronograph minutes.
- Another sub-dial tracks the chronograph seconds.
- The third sub-dial displays 24-hour time, often synchronized with the main time display.

## Maintenance

### Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and bracelet with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by a dry one. Avoid using harsh chemicals or abrasive materials.

### Water Resistance

This watch is water-resistant up to 100 meters (330 feet) or 10 ATM. This means it can be worn while bathing, swimming, snorkeling, and during shallow diving. However, it is not suitable for high-impact water sports or deep-sea diving. Always ensure the crown is fully pushed in before any contact with water.

### Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running, it indicates the battery needs replacement. It is highly recommended to have the battery replaced by an authorized Michael Kors service center or a professional watchmaker to ensure proper sealing and maintain water resistance.

## Troubleshooting

- **Watch Not Running:** If the watch stops, the battery may need to be replaced. Refer to the 'Battery Replacement' section.
- **Time/Date Incorrect:** Ensure the crown is fully pushed in after setting the time and date. If the issue persists, the watch may require professional inspection.
- **Condensation Under Crystal:** If condensation appears under the crystal, it indicates a potential issue with the watch's seal. Seek immediate professional service to prevent further damage.
- **Chronograph Hands Not Resetting to Zero:** If the chronograph hands do not return to their zero position after pressing the reset pusher, consult the Michael Kors service center for adjustment.

## Specifications

Feature	Detail
Model Number	MK9105
Case Diameter	45mm
Case Material	Stainless Steel
Band Material	Stainless Steel
Band Width	24mm
Movement	Quartz Chronograph
Water Resistance	100m (330ft) / 10 ATM
Crystal Type	Mineral
Weight	Approximately 11.68 ounces

## Warranty and Support

Your Michael Kors watch is covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Michael Kors website. For service, repairs, or any inquiries, please contact Michael Kors customer support or visit an authorized service center. Always ensure that any repairs or battery replacements are performed by qualified professionals to maintain the integrity of your watch and its warranty.

For further assistance, please visit the official Michael Kors website: [www.michaelkors.com](http://www.michaelkors.com)