

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 16.5" Portable DVD Player with 14.1" Large HD Swivel Screen, 6 Hours Rechargeable Battery, High Clear Volume Speaker, Support USB/SD Card/Sync TV, Last Memory and Multiple Disc Formats

WONNIE W-1468

WONNIE 16.5" Portable DVD Player User Manual

Model: W-1468

1. INTRODUCTION

Thank you for purchasing the WONNIE 16.5" Portable DVD Player. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure proper operation and to extend the lifespan of your player.



Figure 1: WONNIE 16.5" Portable DVD Player and included remote control.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 Portable DVD Player
- 1 AC Charger
- 1 Car Charger
- 1 RCA Cable
- 1 Remote Control
- 1 User Manual



Figure 2: All items included in the WONNIE Portable DVD Player package.

3. PRODUCT OVERVIEW

3.1 Key Features

- **14.1" Large HD Swivel Screen:** Provides clear and realistic visuals with 270° rotation and 180° flip for adjustable viewing angles.
- **Long Lasting Battery Life:** Built-in rechargeable battery offers up to 6 hours of playback on a single charge. Includes AC and car chargers.
- **Dual Stereo Speakers:** Integrated speakers and headphone jack for clear audio.
- **Multi-format Support:** Compatible with DVD, DVD+R/-R, DVD+RW/-RW, CD, CD+R/-R, CD+RW/-RW, VCD to SVCD. Supports USB/SD card (max 32GB FAT32, 720x576 pixels) for pictures (JPG, JPEG), audio (MP3/WMA), and videos (VOB, AVI, MPEG 1, MPEG 2, XVID).
- **Sync TV & Last Memory Function:** Connect to TV or projector via RCA cable. Resumes playback from where you left off.

3.2 Controls and Ports

Familiarize yourself with the player's controls and connection ports.

Louder and Clearer Sound Quality



Figure 3: Top view of the player showing control buttons for playback, volume, and setup.

The control panel includes buttons for MODE, USB/SD, SETUP, navigation (up, down, left, right, OK), volume control (VOL+, VOL-), and playback controls (play/pause, stop, fast forward, rewind, next/previous track).

Last Memory Function

Start From Where You Left Off



270°&180°Swivel Screen

Multi-Angle Adjustment For Comfortable Viewing



Figure 4: Side view of the player with various input/output ports.

Ports include USB, SD/MMC card slot, headphone jack, AV IN, AV OUT, DC IN, and a power ON/OFF switch.

4. SETUP

4.1 Initial Charge

Before first use, fully charge the portable DVD player. Connect the AC adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. A full charge provides approximately 6 hours of playback.

Sync Screen to TV

Share Video, Happy Time Together



Figure 5: The player's built-in 5000mAh rechargeable battery provides up to 6 hours of viewing. It can be charged via AC adapter or car charger.

4.2 Powering On/Off

Slide the ON/OFF switch located on the side of the player to the 'ON' position to power on the device. To power off, slide the switch to the 'OFF' position.

5. OPERATING INSTRUCTIONS

5.1 Playing a DVD

1. Open the disc tray cover by sliding the 'OPEN' latch.
2. Gently place a DVD disc onto the spindle with the label side facing up.
3. Close the disc tray cover firmly until it clicks.
4. The player will automatically begin loading and playing the disc. If not, press the 'PLAY' button on the player or remote.

Video 1: Overview of the WONNIE 16.5" Large Portable DVD Player, highlighting its features and ease of use.

Video 2: Demonstrates unboxing and basic operation of the WONNIE Portable DVD Player, including disc insertion and menu navigation.

5.2 Using USB/SD Card

Insert a USB drive into the USB port or an SD/MMC card into the SD card slot. Press the 'USB/SD' button on the player or remote to switch to USB/SD mode. Use the navigation buttons to browse and select your media files.



Figure 6: The player supports multiple formats including DVD, CD, VOB, AVI, MP3, WMA, JPG, and JPEG, and is region-free.

5.3 Swivel Screen Adjustment

The 14.1" screen can swivel 270° horizontally and flip 180° vertically. Adjust the screen to your preferred viewing angle for optimal comfort.



Figure 7: The screen can be rotated 270 degrees and flipped 180 degrees for multi-angle adjustment.

5.4 Syncing to TV/Projector

Connect the provided RCA cable from the AV OUT port on the DVD player to the corresponding AV IN ports on your TV or projector. Switch your TV/projector's input source to AV to display the player's content on the larger screen.

Louder and Clearer Sound Quality



Figure 8: Syncing the portable DVD player screen to a TV for a larger viewing experience.



Video 3: Demonstrates the portable DVD player providing entertainment, including its TV sync feature.

5.5 Last Memory Function

The player features a built-in Last Memory function. To enable this, navigate to the SETUP page and set the "Last Memory" function to "ON". This allows the player to resume playback from where it was last stopped.



**Easy to take
Anywhere**



Figure 9: The Last Memory function allows you to pick up playback from where you left off.

6. MAINTENANCE

To ensure optimal performance and longevity of your WONNIE Portable DVD Player, follow these maintenance guidelines:

- Keep the player clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Handle discs carefully, holding them by the edges to prevent scratches.
- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the player to strong impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Battery drained; Power switch off; AC adapter not connected properly.	Charge the battery; Slide power switch to ON; Ensure AC adapter is securely connected.
No Disc / Disc Read Error	Disc is dirty, scratched, or incompatible format; Disc tray not closed properly.	Clean the disc; Try a different disc; Ensure disc tray is fully closed.
No sound / Low volume	Volume too low; Mute function enabled; External speakers/headphones not connected properly.	Increase volume using VOL+; Disable mute; Check external audio connections.
Screen is blank or distorted when connected to TV	Incorrect TV input selected; RCA cable not connected properly.	Select correct AV input on TV; Ensure RCA cable is securely connected to both devices.



Video 4: A customer video showing a defect in the screen. If you experience similar issues, please refer to the troubleshooting table or contact customer service.

8. SPECIFICATIONS

Feature	Detail
Model Number	W-1468
Screen Size	14.1 Inches (visible diagonal 15" / 36 cm)
Display Type	LCD
Battery Life	Up to 6 hours (5000mAh Lithium Polymer)
Supported Disc Formats	DVD, DVD+R/-R, DVD+RW/-RW, CD, CD+R/-R, CD+RW/-RW, VCD, SVCD
Supported Media Formats (USB/SD)	Videos: VOB, AVI, MPEG 1, MPEG 2, XVID; Audio: MP3, WMA; Pictures: JPG, JPEG
Max USB/SD Capacity	32GB (FAT32, 720x576 pixels)
Product Dimensions	13.7 x 9.7 x 1.4 inches
Item Weight	4.55 pounds

9. WARRANTY AND SUPPORT

WONNIE provides a new replacement/full-refund for 1 year from the date of purchase. If you have any questions, encounter issues, or if any parts are missing or broken upon receipt, please contact WONNIE customer service for assistance. For further support, visit the official WONNIE store: [WONNIE Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BZS56999>

More documents and user manuals: <https://manuals.plus/>