

LOKITHOR J402

LOKITHOR J402 Jump Starter User Manual

Model: J402 | Brand: LOKITHOR

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your LOKITHOR J402 Jump Starter. Please read this manual thoroughly before operating the device and retain it for future reference. The LOKITHOR J402 is a powerful and versatile portable lithium car battery booster pack designed to jump-start vehicles with up to 9.0L gasoline and 7.0L diesel engines. It also functions as a power bank with 100W two-way fast charging capabilities and features a smart digital screen for real-time monitoring.



Figure 1.1: LOKITHOR J402 Jump Starter Unit and Accessories

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the device and vehicle:

- Do not short-circuit the jumper clamps. Ensure positive (+) and negative (-) terminals do not touch.
- Do not expose the device to extreme temperatures outside the operating range (-4°F to 140°F).
- Keep the device away from moisture and water, although it is IP65 water-resistant, prolonged submersion should be avoided.
- Do not attempt to disassemble or modify the device. Refer all servicing to qualified personnel.
- Ensure proper ventilation during use and charging.

- Keep out of reach of children.
- Always connect the positive (red) clamp to the positive (+) battery terminal and the negative (black) clamp to the negative (-) battery terminal or a suitable ground point on the vehicle chassis.
- Disconnect the clamps in reverse order: negative first, then positive.



Figure 2.1: Integrated Safety Protection Technologies

3. PRODUCT OVERVIEW

3.1 Package Contents

Verify that all items are present in the package:

- J402 Portable Lithium Car Battery Jump Starter
- LO-CLAMP-Pro (Jump start clamps)
- 12V adapter
- User Manual
- USB-C to USB-C cable
- USB-A to USB-C cable

WHAT'S IN THE BOX

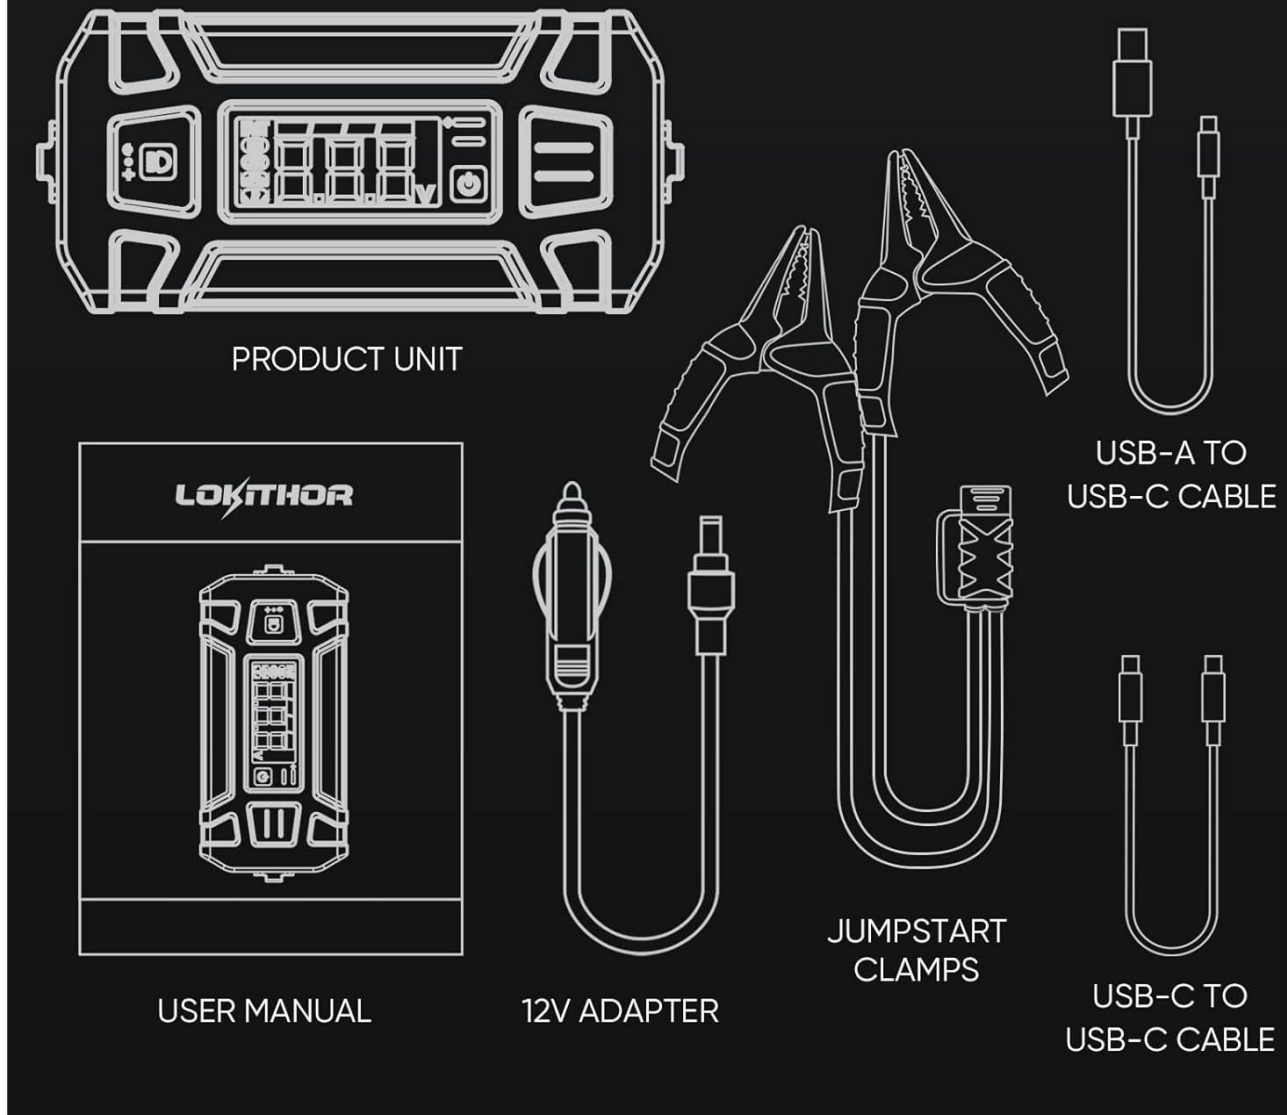


Figure 3.1: What's in the Box

3.2 Key Features

- **Powerful Performance:** 3000A peak current, capable of up to 60 jump-starts on a full charge. Suitable for 9.0L gas and 7.0L diesel engines.
- **Intelligent Multi-Protection:** Real-time battery voltage detection, Spark-Proof, Reverse-Charge, Over-Charge, Over-Current, Short-Circuit, Reverse-Polarity, Low-Temp, High-Temp, Over-Voltage, and Over-Load Protection.
- **100W Two-way Fast Charging:** Fully recharges in approximately 54 minutes. Can provide enough charge to start a car in just 3 minutes.
- **Extended Standby:** Up to 48-month standby time due to ultra-low self-discharge rate.
- **Durable Design:** IP65 water-resistant and 94V0 flame retardant enclosure, designed to withstand harsh environments (-4°F to 140°F).
- **Multi-functional:** Functions as a jump starter, power bank for USB-C devices, and features a 300 lumen LED flashlight with multiple modes (lighting, SOS, strobe).



Figure 3.2: Key Performance Indicators

3.3 Control Panel and Indicators

The J402 features a 3.75-inch digital display interface that provides real-time information about the device's status.

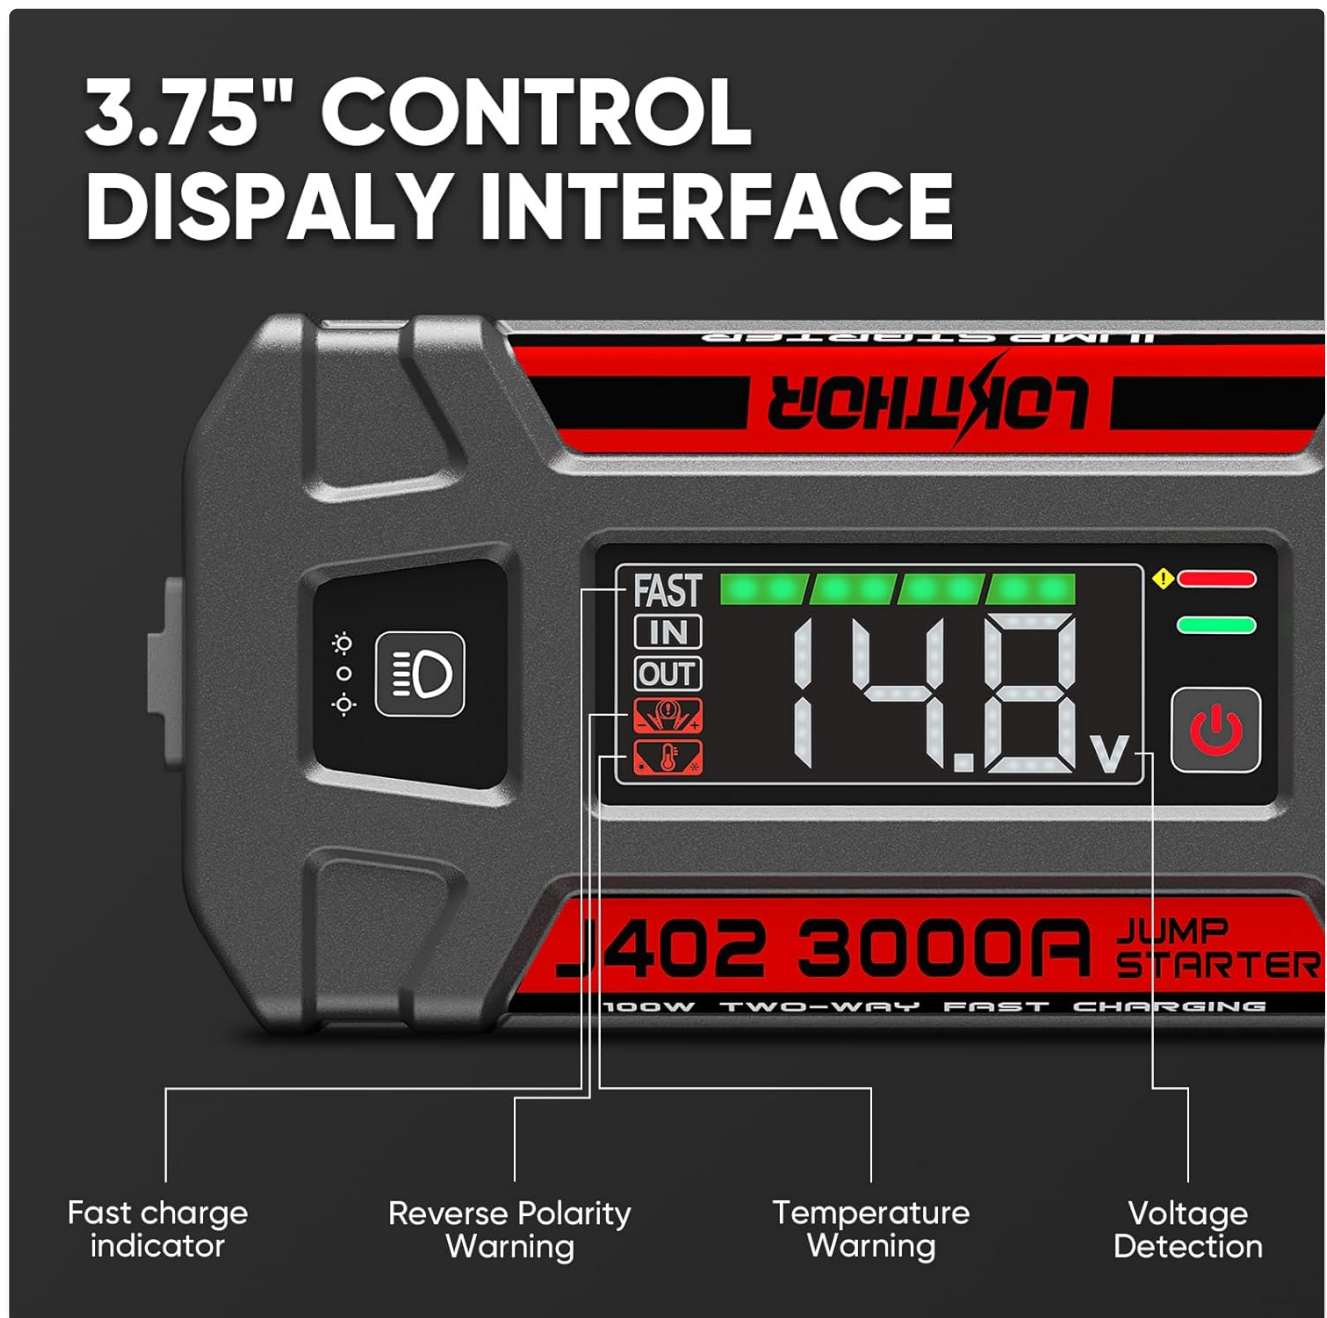


Figure 3.3: Control Display Interface

- **Fast Charge Indicator:** Indicates when fast charging is active.
- **IN/OUT Indicators:** Shows whether the device is charging (IN) or discharging (OUT).

- **Reverse Polarity Warning:** Alerts if clamps are connected incorrectly.
- **Temperature Warning:** Indicates if the device temperature is outside safe operating limits.
- **Voltage Detection:** Displays the real-time voltage of the connected battery.
- **Battery Indicator:** Shows the internal battery level of the jump starter.
- **LED Light Power Button:** Activates the built-in flashlight.
- **Power Button:** Turns the unit on/off.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your LOKITHOR J402. Use the provided USB-C to USB-C cable and a compatible 100W USB-C power adapter (not included) for fastest charging. The digital display will show the charging status.

4.2 Connecting Clamps

Ensure the jump starter is turned off before connecting the clamps. Insert the jumper cable connector firmly into the jump starter's output port. The unit is designed with an integrated spark-proof system for safety.



Figure 4.1: Integrated Spark-Proof Design

5. OPERATING INSTRUCTIONS

5.1 Jump Starting a Vehicle

Follow these steps to jump-start your vehicle:

1. Ensure the LOKITHOR J402 is sufficiently charged.
2. Connect the red (positive, +) clamp to the positive terminal of the vehicle's battery.
3. Connect the black (negative, -) clamp to the negative terminal of the vehicle's battery or a solid, unpainted metal part of the engine block/chassis.
4. Turn on the LOKITHOR J402. The display will show the battery voltage.
5. Start your vehicle.
6. Once the vehicle starts, immediately disconnect the black (negative) clamp first, then the red (positive) clamp.
7. Turn off the LOKITHOR J402.

Force Start Function (for batteries below 8V)

If the vehicle battery voltage is extremely low (below 8V), the normal jump-start procedure may not work. In this case, use the force start function:

1. Connect the clamps as described above.
2. Long press the 'Power' button and the 'LED Light' button simultaneously until the green indicator flashes.
3. Start your vehicle within 30 seconds.
4. Immediately disconnect the clamps after the vehicle starts.



Figure 5.1: Jump Start Procedures

5.2 Using as a Power Bank

The LOKITHOR J402 can charge various electronic devices via its USB-C (100W max) and USB-A (18W max) output ports.

- Connect your device to the appropriate USB port using a compatible cable.
- The device will automatically begin charging.

SUPPORT MULTI-DEVICE 100W FAST CHARGING



Figure 5.2: Multi-Device Charging Capability

5.3 Using the LED Flashlight

The built-in 300 lumen LED flashlight offers multiple modes for various situations:

- **To turn on/off:** Long press the LED light power button.
- **To cycle modes:** Short press the LED light power button. Modes include: Continuous Lighting, SOS (Morse code), and Strobe.



Figure 5.3: LED Flashlight Modes and Uses

6. CHARGING THE DEVICE

The LOKITHOR J402 supports 100W two-way fast charging, allowing for quick recharges.

6.1 Fast Charging via USB-C

For optimal charging speed, use the provided USB-C to USB-C cable with a 100W compatible power adapter.

- Connect the USB-C cable to the J402's USB-C port and to a power adapter.
- A full charge takes approximately 54 minutes.
- A 3-minute charge can provide enough power for a single jump start.

100W TWO-WAY FAST CHARGING



Figure 6.1: 100W Two-Way Fast Charging

6.2 Charging via 12V Adapter

You can also charge the J402 using the provided 12V adapter in your vehicle's cigarette lighter socket.

- Connect the 12V adapter to the J402's input port and then to your vehicle's 12V accessory socket.
- This method is convenient for charging on the go.

INTEGRATED SPARK-PROOF DESIGN

Integrated design of the battery protection and prevents short circuits, ensuring double safety in storage and use.



Figure 6.2: Charging Anytime, Anywhere

7. MAINTENANCE

- **Storage:** Store the LOKITHOR J402 in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain optimal battery health, recharge the unit every 3-6 months, even if not in use. The device boasts an ultra-low self-discharge rate, allowing for up to 48 months of standby time.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use harsh chemicals or abrasive materials.
- **Inspection:** Regularly inspect the jumper clamps and cables for any signs of damage or wear. Replace if necessary.

30 MONTHS STAND-BY

Low Standby Power Only 0.21mAh



Figure 7.1: Extended Standby Time

IP65 WATERPROOF LEVEL ASSEMBLY DESIGN

IP65 water and dust-resistant rating, it is capable of handling the toughest conditions and environments. Additionally, the advanced sealing provides drop resistance, dustproof, and waterproof.

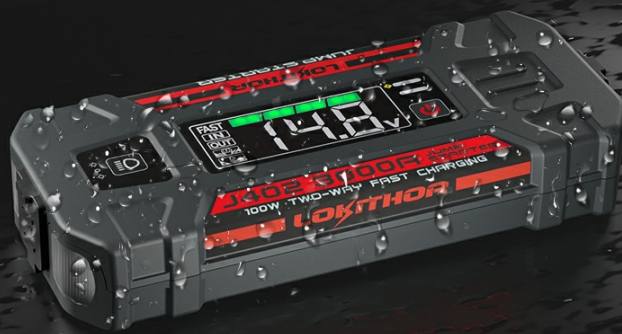


Figure 7.2: IP65 Waterproof Level Assembly Design

8. TROUBLESHOOTING

The LOKITHOR J402 is equipped with a self-inspection system that displays error codes for various conditions. Refer to the table below for common issues and their solutions.



Figure 8.1: Error Code Display

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device malfunction	Charge the device; Contact customer support
Vehicle does not start	Incorrect clamp connection; Vehicle battery too low; Engine issue	Check clamp polarity; Use force start function; Consult a mechanic
Error code displayed	Specific fault detected (e.g., reverse polarity, over-temperature)	Refer to the device's display for the specific error code and consult the full manual for detailed resolution steps. Generally, disconnect and reconnect clamps, allow device to cool, or recharge.
Device not charging	Faulty cable/adapter; Charging port issue	Try a different cable/adapter; Ensure connections are secure; Contact customer support

9. SPECIFICATIONS

Feature	Specification
Model	J402
Peak Current	3000 Amps

Feature	Specification
Battery Capacity	24000mAh (Lithium Polymer)
Engine Compatibility	Up to 9.0L Gas, 7.0L Diesel
Charging Input	USB-C (100W Max)
Charging Output	USB-C (100W Max), USB-A (18W Max)
Dimensions (D x W x H)	4.19" x 9.45" x 2.36"
Item Weight	3.86 pounds (1750 Grams)
Operating Temperature	-4°F to 140°F
Water Resistance	IP65
Flashlight Luminosity	300 Lumens

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The LOKITHOR J402 Jump Starter comes with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

If you encounter any issues or have questions regarding your LOKITHOR J402 Jump Starter, please do not hesitate to contact LOKITHOR customer service. Our team is available to provide lifetime service support.

For contact information, please refer to the official LOKITHOR website or the contact details provided on your product packaging.

[LOKITHOR JA400 Safety Information and User Guidelines](#)

Comprehensive safety information and user guidelines for the LOKITHOR JA400 multi-function vehicle emergency starter, including operating instructions, warnings, and warranty policy.

[Lokithor J402 Jump Starter Troubleshooting Guide](#)

Lokithor J402 jump starter troubleshooting guide. Find solutions for error codes 100-480, including charging, voltage, temperature, and connection issues.

[LOKITHOR J401X Car Jump Starter User Manual: Operation, Jumpstart, Voltmeter, Charging, and LED Guide](#)

Official user manual for the LOKITHOR J401X car jump starter. Provides detailed instructions on its operation process, including jumpstarting a car (normal and force start methods), using the voltmeter function, charging the device via USB-C or cigarette lighter, charging mobile phones, and operating the LED light. Features interface descriptions and safety guidelines.

[Lokithor J3250 PRO 12V Jump Starter User Manual](#)

Comprehensive guide to the Lokithor J3250 PRO 12V jump starter, covering safety instructions, features, specifications, operation, error codes, warnings, recycling, and warranty information.

[LOKITHOR JA300 Jump Starter and Air Compressor User Manual](#)

Comprehensive user manual for the LOKITHOR JA300, a 1500Amp car battery booster and 150 PSI tire inflator. Learn how to jump-start vehicles, use the air compressor, voltmeter, and LED light functions.

LOKITHOR

User Manual

J2250

OPERATION PROCESS

1. Display Interface Description

NO.	Icon	Function
1		Car Jump Start
2		Charge the device
3		Charge your phone
4		LED Light
5		Voltage Measurement

2. Display Interface Description

What you see when you turn on the device is the screen.

3. How to Use the Car Jumpstart Function

1. Connect the red and black cables to the car's battery terminals. The red cable goes to the positive terminal (+) and the black cable goes to the negative terminal (-).

2. Turn on the device. The screen will show the car icon and the voltage reading.

3. Press the "Car Jump Start" button. The device will attempt to start the car.

4. If the car starts, turn off the device and disconnect the cables.

5. If the car does not start, check the connections and the voltage reading. If the voltage is low, charge the device.

4. Safety Instructions

1. Do not touch the metal parts of the device or the cables while it is operating.

2. Do not use the device in a flammable or explosive environment.

3. Do not use the device to start a car with a damaged battery.

4. Do not use the device to start a car with a dead battery.

5. Do not use the device to start a car with a faulty ignition system.

6. Do not use the device to start a car with a faulty fuel system.

7. Do not use the device to start a car with a faulty timing belt.

8. Do not use the device to start a car with a faulty water pump.


9. Do not use the device to start a car with a faulty alternator.

10. Do not use the device to start a car with a faulty starter motor.

[LOKITHOR J2250 User Manual: Car Jump Starter Operation and Charging Guide](#)

Comprehensive user manual for the LOKITHOR J2250 car jump starter. Learn how to jumpstart a vehicle, use the voltmeter function, charge the device, charge your phone, and operate the LED light. Includes detailed operational processes and safety instructions.

Documents - LOKITHOR – J402

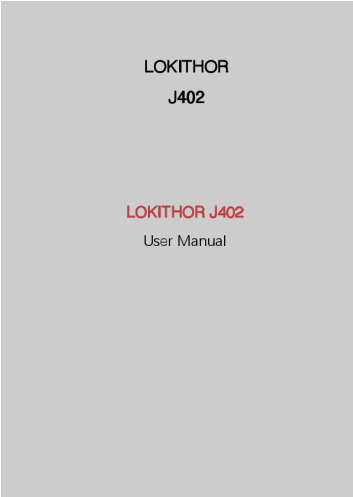

[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications
Microsoft Word J401 20220302 docx LOKITHOR J402 MANUAL Lithium booster Lokithor 12V 3000A
ENG auviras lt img cms Atsisiuntimai |||
LOKITHOR **J402** LOKITHOR **J402** User Manual Contents 1. Product Overview
.....3 2. What is includ
.....3 3. Operation Process
.....
lang:en score:44 filesize: 3.29 M page_count: 12 document date: 2023-02-15




[\[pdf\]](#) User Manual
Microsoft Word J401 20220302 docx LOKITHOR NAUDOTOJO INSTRUKCIJA Lithium booster Lokithor
12V 2500A J402 User Manual LT auviras lt img cms Atsisiuntimai |||
LOKITHOR J401 **J402** LOKITHOR J401 **J402** NAUDOTOJO VADOVAS TURINYS 1.
Produkto azvalga3 2. Pakuotje
.....3 3. Veikimo principas
.....
lang:pt score:43 filesize: 4.28 M page_count: 12 document date: 2023-11-08




The Force of Thunder in Hand

[pdf] User Manual Instructions Specifications Warranty
20240701 J402 PRO 110x160mm User ManualLokithor Jump Starter 100W 12V 3500A Two Way Fast Charging Ne FactoryPureLokithor 1737392973340cdn shopify s files 1 1163 1976 Lokithor 1737392973340 v 1737392974 Download manualUser ManualLOKITHOR Booster Powerbank CEPELO A SLokithor FactoryPureLOKJ402 1737392973340files plytix api v1 file public pim assets f5 35 36 60 603635f55fcbfc83f4324ab9 texts e3 45 fe 67 67fe45e311076fd9e98bbda6 LOKJ402 Manualcdn ||| ||| J402 PRO The Force of Thunder in Hand Contents 04 Inhalt 12 Contenu 20 ndice 28 36 03 Contents Safety Instructions 05 Specifications 06 Packing List 06 Product Overview 07 1. Key Instructions 07 2. Screen Instructions 07 3. Input/Output Ins
J402 PRO The Force of Thunder in Hand Contents 04 Inhalt 12 Contenu 20 ndice 28 36 03 Contents Safety Instructions 05 Specifications 06 Packing List 06 Product Overview 07 1. Key Instructions 07 2. Screen Instructions 07 3. Input/Output Instructions 08 Operation Proces...
lang:en score:39 filesize: 3.86 M page_count: 44 document date: 2024-09-30

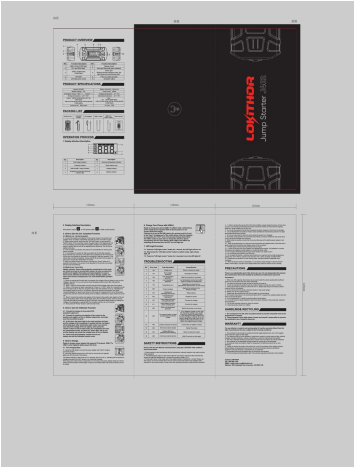

[pdf] User Manual Quick Start Guide Instructions
20220519 J401 User ManualLOKITHOR J402 Jump Starter 100W Two way Fast ChargingJ402 Manualcdn shopify s files 1 0551 0912 4272 Manual v 1691482058 ChargingLOKITHOR Lokithor Manuals Instructions Setup Guides Help AustraliaJ402 ManualJ402 1691482058cdn 0726 5343 9200 1731716943 ||| |||
...
lang:en score:37 filesize: 2.4 M page_count: 1 document date: 2022-09-02

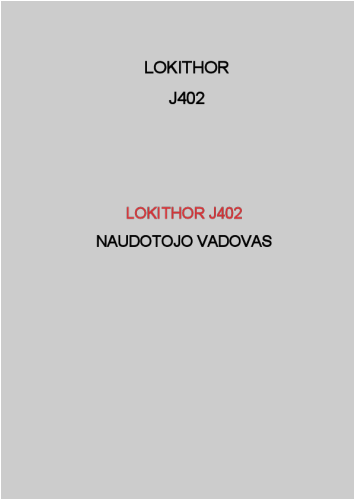

[pdf]
Microsoft Word J401 20220302 docx LOKITHOR J402 Lokithor LT auviras lt img cms Atsisiuntimai ||| LOKITHOR J402 LOKITHOR J402 NAUDOTOJO VADOVAS TURINYS 1. Produkto azvalga3 2. Pakuotje3 3. Veikimo principas
lang:it score:36 filesize: 4.15 M page_count: 12 document date: 2023-02-15

LOKITHOR
J402

LOKITHOR J402
User Manual

[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications

Microsoft Word J401 20220302 docx LOKITHOR J402 Voltimax3 1 Method one Normal jumpstart 3 2
Connect the positive and negative of product clamps to car battery respectively v1voltimax de media 80
59 c5 1707994009 j402 srsItid AfmBOoWI0om0kblRveCW 7NGLlSr gxaS6rvqiHlueX2jPGZbb7F5Z6 |||
LOKITHOR **J402** LOKITHOR **J402** User Manual Contents 1. Product Overview
.....3 2. What is includ
.....3 3. Operation Process
.....

lang:en score:32 filesize: 3.29 M page_count: 12 document date: 2023-02-15

LOKITHOR
Jump Starter J402

Οδηγίες λειτουργίας

[\[pdf\]](#)

J402 PL docId 133A5FCD53780E828558C850F5F6DF84 Οδηγίες λειτουργίας gre Lokithor indító
akkumulátor 3000A 12V 88 8Wh 39890 37015 716b7018c3282c5c820f906a17390f22 puputeve hu media
wysiwyg attachments |||
. USB-A max. 18 W DC max. 60 W / USB-C max. 100 W LED LED , . . 30
jumpstarter LOKITHOR **J402**, . 1. , . 2. Jumpstarter 12V 12V . 3. ,
lang:i-klngon score:31 filesize: 655.82 K page_count: 10 document date: 2023-12-29

LOKITHOR
Jump Starter J402

Instrukcja obsługi

[\[pdf\]](#)

J402 PL Instrukcja obsługi pol Lokithor indító akkumulátor 3000A 12V 88 8Wh 39887 37015
c27c132e1fe27532eeb1bac66ad06f84 puputeve hu media wysiwyg attachments |||
Instrukcja obsługi Opis produktu Nr. Opis funkcji Nr. Opis funkcji Wyjcie USB-A maks.
18 W ... rozpoczn ponownie Instrukcje bezpieczeŃstwa Przed przystąpieniem do
użytkowania jumpstartera LOKITHOR **J402** naley dokładnie zapozna si z instrukcj
obsługi 1. Naley cile przestrzega instrukcji obsługi, po...
lang:pl score:28 filesize: 2.66 M page_count: 11 document date: 2023-12-29

Návod na obsluhu

[\[pdf\]](#)

J402 PL docId 5D1A5E8C10A97AD559F1230F8865E9CA Návod na obsluhu slo Lokithor indító
akkumulátor 3000A 12V 88 8Wh 39893 37015 abc3707de7a874431320c25b536b5de2 puputeve hu
media wysiwyg attachments |||

Nvod na obsluhu Popis produktu Nie. Popis funkcji Nie. Popis funkcji Vstup USB-A
max. 18 W Z ... pravu Pockajte 30 seknd na optovn spustenie Bezpecnostn pokyny
Pred použitím jumpstartera LOKITHOR **J402** si pozorne prečítajte nvod na použitie. 1.
Nvod na obsluhu sa mus prsne dodržiava, pretože nespr...

lang:id score:27 filesize: 921 K page_count: 11 document date: 2023-12-29

Návod k obsluze

[\[pdf\]](#)

J402 PL docId 54E82512DE715F6B676EECF74255EEB9 Návod k obsluze cze Lokithor indító
akkumulátor 3000A 12V 88 8Wh 39888 37015 2871e8225f2db88a82404a2ec79da04e puputeve hu
media wysiwyg attachments |||

Nvod k obsluze Popis produktu Ne. Popis funkcji Ne. Vstup USB-A max. 18 W
Stejnosem vstup m ... oprav Vyčkajte 30 sekund, než se znovu spust Bezpecnostn
pokyny Ped použitím jumpstarteru LOKITHOR **J402** si pečlivě přečtěte nvod k použití. 1.
Nvod k obsluze je třeba důsledně dodržovat, protože nesprvné pou...

lang:id score:27 filesize: 1.26 M page_count: 11 document date: 2023-12-29

LOKITHOR Troubleshooting Guide J402			
TROUBLESHOOTING			
NO.	Error code	Description	Cause / Solution
1	100	Excessive differential pressure	/
2	110	Charging overvoltage protection	Disconnect the charger
3	140	Discharge undervoltage protection	Connect the charger
4	150	Discharge over-temperature protection	Waiting for the device to cool down
5	160	Discharge under-temperature protection	Place the product at the right temperature
6	170	Temperature error	Rebooting the device
7	200	Communication abnormalities	Rebooting the device
8	201	Charging communication abnormal	Restart the device
9	410	Undervoltage protection before start-up	Connect the charger
10	411	Under-voltage protection before start-up	Connect the charger
11	420	Activation of over-temperature protection	Waiting for the device to cool down
12	430	External battery voltage is greater than the device voltage	① If the displayed voltage is lower than 12V, please connect the charger for charging. ② If the display voltage is higher than 12V, it means that the car battery voltage is too high and not suitable for this product, please use a starter power supply that supports higher voltage
13	440	Ignition clip reverse connection	Correct connection of the battery
14	450	Auto-start failure	After confirming the correct connection, please refer to the instruction manual and use manual start
15	470	Pre-start differential pressure abnormality protection	/
16	480	Wait 30 seconds for the next start-up	Wait 30 seconds and start again

[pdf] Troubleshooting Guide Guide

J402 Troubleshooting Guide LOKITHOR Jump Starter 100W Two way Fast Chargingcdn shopify s files 10551 0912 4272 v 1691986636 |||

...

lang:id score:26 filesize: 1.88 M page_count: 1 document date: 2023-06-20




[pdf]

J402 PL docId E12C6DF309215C7EFD1A979800EFF01C Instrucțiuni de utilizare rum Lokithor indító akkumulátor 3000A 12V 88 8Wh 39892 37015 68d595d94dddea21b40539f68365273a puputeve hu media wysiwyg attachments |||

Instruciuni de utilizare Descrierea produsului Nu. Descrierea funciilor Ieire USB-A max. 18 W ... a ncepe din nou Instruciuni de siguran nainte de a utiliza dispozitivul de pornire rapid LOKITHOR **J402**, v rugm s citii cu atenie manualul de instruciuni. 1. Instruciunile de utilizare trebuie respec...

lang:it score:26 filesize: 1.16 M page_count: 11 document date: 2023-12-29

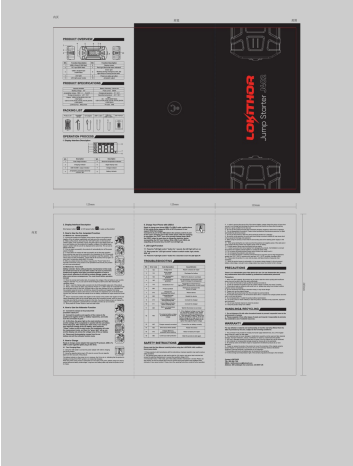

[pdf] User Manual

20220519 J401 LOKITHOR J402 USER MANUAL Lithium booster Lokithor 12V 3000A Jump Starter Manual auviras lt img cms Atsisiuntimai |||

...

lang:it score:25 filesize: 2.4 M page_count: 1 document date: 2022-09-02



[pdf]

J402 PL docId 942666B8F9A1F0601EB664208A684862 Használati utasítás hun Lokithor indító
akkumulátor 3000A 12V 88 8Wh 39891 37015 8636663731d40f898171d5b73e2b26fe puputeve hu media
wysiwyg attachments |||

Használati utasts Termklers Ne A funkcik lersa Ne m. m. USB-A kimenet max. 18 W
DC bemenet ... vdelem Vissza a gyrba javtsra Vrjon 30 msodpercet az jblí indtshoz
Biztonsgi utastsok A LOKITHOR **J402** ugrindt hasznlata eltt krjk, olvassa el
figyelmesen a használati tmutatt. 1. A kezelsi tmutatt s...


lang:no score:25 filesize: 1.32 M page_count: 14 document date: 2023-12-29

TROUBLESHOOTING		
NO.	Error code	Cause / Solution
1	100	Excessive differential pressure /
2	110	Charging overvoltage protection Disconnect the charger
3	140	Discharge undervoltage protection Connect the charger
4	150	Discharge over-temperature protection Waiting for the device to cool down
5	160	Discharge under-temperature protection Place the product at the right temperature
6	170	Temperature error Rebooting the device
7	200	Communication abnormalities Rebooting the device
8	201	Charging communication abnormal Restart the device
9	410	Undervoltage protection at start-up Connect the charger
10	411	Under-voltage protection before start-up Connect the charger
11	420	Activation of over-temperature protection Waiting for the device to cool down
12	430	External battery voltage is greater than the device voltage ① If the displayed voltage is lower than 12V, please connect the charger for charging. ② If the display voltage is higher than 12V, it means that the car battery voltage is too high and not suitable for this product, please use a starter power supply that supports higher voltage.
13	440	Ignition clip reverse connection Correct connection of the battery
14	450	Auto-start failure After confirming the correct connection, please refer to the instruction manual and use manual start
15	470	Pre-start differential pressure abnormality protection /
16	480	Wait 30 seconds for the next start-up Wait 30 seconds and start again

[Lokithor J402 Jump Starter Troubleshooting Guide](#)

Lokithor J402 jump starter troubleshooting guide. Find solutions for error codes 100-480, including charging, voltage, temperature, and connection issues.

lang:no score:24 filesize: 1.82 M page_count: 1 document date: 2023-06-20

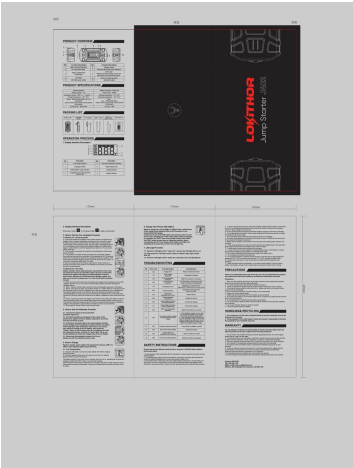


[pdf] User Manual

User Manual Lokithor J402 Jump Starter 100W 12V 3000A Two Way Fast Charging New FactoryPure IM
1723733659352 v 1723733661 cdn shopify s files 1 1163 1976 |||

...

lang:no score:20 filesize: 2.34 M page_count: 1 document date: 2024-08-14

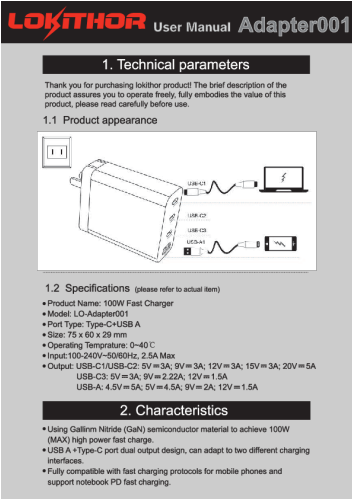

[\[pdf\]](#) User Manual Accessories

AD001 User Manual LOKITHOR 100W Multiport USB C Charger 4 Port PD Power Adapter Fast Charging for J401 J401X J402 J1000 J1500 JA400 JA401 AW401 J2250 J3250 JA3000 Jump Starter Cell Phones Accessories C1VZR1OxshL m media amazon images I |||

...

lang:no score:16 filesize: 7.94 M page_count: 4 document date: 2022-10-20



[\[pdf\]](#)

lokithor Pil Kapasitesi FrezeJA2500 Torque 20 1Torque 1 Takviye Türü Anlık Gücü Aralığı Aydınlatma 12V Kurşun Asit Aküler 23800mAh LOKITHORfreze tr Upload Dokumanlar Buyuk LOKITHOR ||| 12V 1350Amp LiFePO4 Akilli Ak Takviye Powerbank Led Lamba J1350PRO Takviye Tr: Pil Kapasitesi ... 1.15Kg LSTE FYATı: 195,00 171 12V 3000Amp Li-Polimer Akilli Ak Takviye Powerbank Led Lamba **J402** Takviye Tr: Pil Kapasitesi: Anlık Takviye Gc: Takviye Aralii: Aydınlatma Gc: USB ikii: Type-C ...

lang:id score:14 filesize: 3.04 M page_count: 7 document date: 2025-04-08