

TECKNET B0BZVDJHCS

TECKNET Wireless Doorbell (Model B0BZVDJHCS) Instruction Manual

Your guide to setting up and using your TECKNET Wireless Doorbell.

1. INTRODUCTION

Thank you for choosing the TECKNET Wireless Doorbell. This manual provides detailed instructions for the installation, operation, and maintenance of your new doorbell system. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

2. PACKAGE CONTENTS


Please check the package contents carefully. If any items are missing or damaged, please contact TECKNET customer support.

- 1 x Wireless Doorbell Receiver
- 1 x Wireless Doorbell Transmitter (Push Button)
- Mounting Hardware (Screws, Wall Anchors, Adhesive Tape)
- 1 x User Manual (This document)

3. PRODUCT FEATURES

The TECKNET Wireless Doorbell offers a range of features designed for convenience and reliability:

- **60 Selectable Melodies:** Choose from a wide variety of chimes.
- **5 Adjustable Volume Levels:** Ranging from 0dB (silent with LED flash) to 90dB.
- **IP65 Waterproof Transmitter:** Designed to withstand various outdoor weather conditions.
- **400M (1300ft) Operating Range:** Ensures reliable signal transmission across large homes or properties.
- **LED Flash Indicator:** Visual alert for visitors, especially useful in noisy environments or for hearing-impaired individuals.

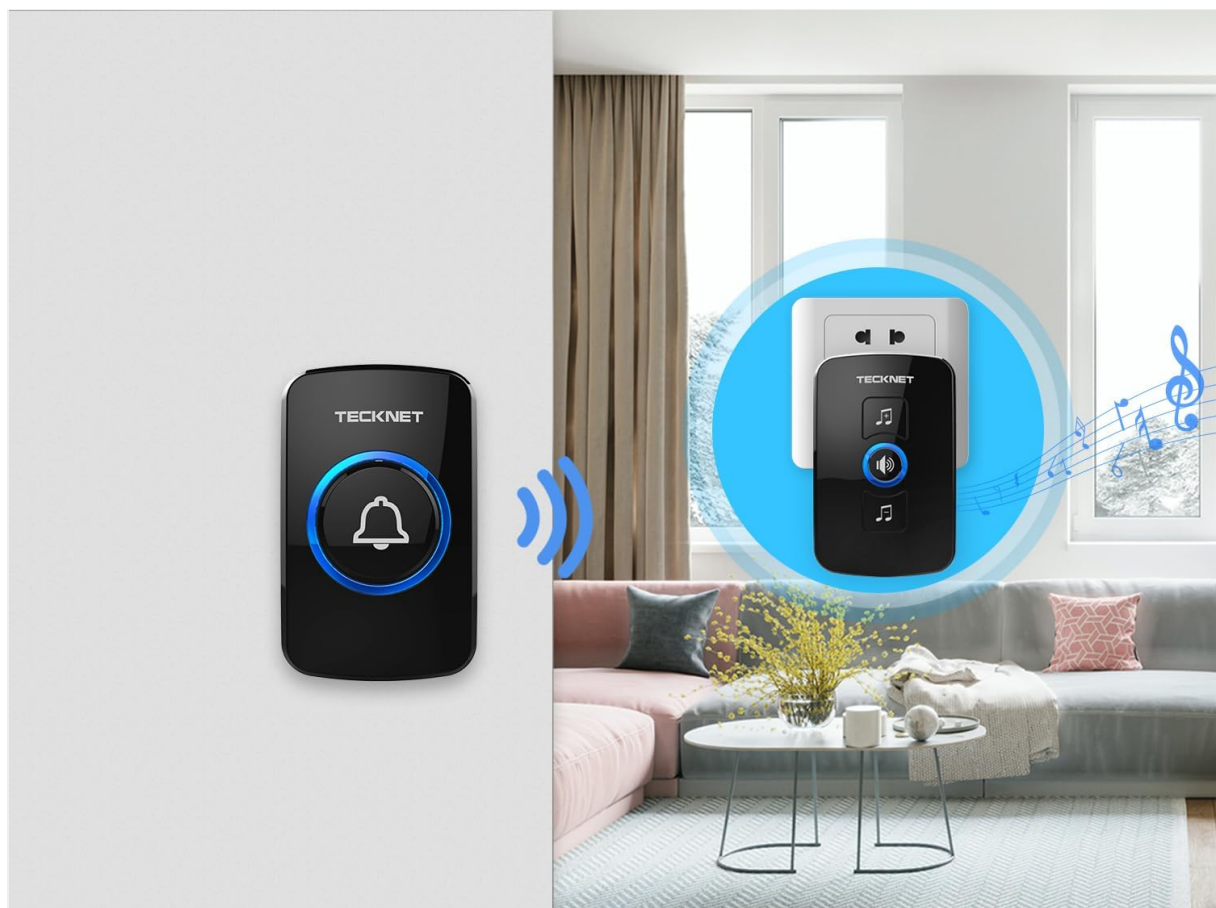

Taste LED-Licht

Leuchtet auf, wenn gedrückt



Batteriebetrieben

Geringer Stromverbrauch



Lange Funkreichweite

Bis zu 400M



Wetterfest

Wasserdicht nach IP65

Image: Features of the TECKNET Wireless Doorbell receiver, highlighting melody and volume options.



The image shows a black, rectangular TECKNET Wireless Doorbell Transmitter. It features three buttons: a top button with a musical note and a plus sign, a central circular button with a speaker icon, and a bottom button with a musical note and a minus sign. To the right of the transmitter are three circular callouts: the top one says '60 Melodien' with a musical note icon; the middle one says '5 Lautstärkestufen 0-90dB' with a speaker icon; and the bottom one says '0dB Nur LED Modus' with a speaker icon and a crossed-out 'x'.



Below the transmitter are four small images illustrating different sound levels: a sleeping baby (30dB), a person drinking coffee (50dB), a family watching TV (70dB), and a family dining (90dB).

Image: The doorbell transmitter's IP65 waterproof rating and wide operating temperature range.

4. SETUP AND INSTALLATION

Follow these steps to set up your TECKNET Wireless Doorbell system.

4.1 Transmitter Battery Installation

1. Locate the small notch on the side or bottom of the transmitter.
2. Use a small flat-head screwdriver to gently pry open the back cover of the transmitter.
3. Insert the CR2032 lithium coin cell battery (included or purchased separately) into the battery compartment, ensuring the positive (+) side faces up.
4. Close the back cover securely.

Note: The transmitter typically uses a CR2032 battery. Please refer to the packaging for specific battery requirements.

4.2 Receiver Placement

Plug the receiver into a standard electrical outlet in a central location within your home. Ensure it is within the operating range of the transmitter and not obstructed by large metal objects or thick walls, which can reduce signal strength.

4.3 Transmitter Mounting

There are two primary methods for mounting the transmitter:

Verwenden Sie unsere Türklingel überall



Haus



Klassenzimmer



Büro



Läden

Image: Steps for battery installation and two mounting methods for the transmitter.

Method 1: Screw Mounting

1. Mark the desired mounting location on your wall or door frame.
2. Drill two small holes at the marked spots.
3. Insert the wall anchors (if necessary for your surface).
4. Align the transmitter's back plate with the holes and secure it with the provided screws.
5. Attach the transmitter unit to the back plate.

Method 2: Adhesive Mounting

1. Clean the mounting surface thoroughly to ensure it is dry and free of dust or grease.
2. Peel off one side of the protective film from the adhesive tape.
3. Attach the adhesive tape to the back of the transmitter.
4. Peel off the other side of the protective film.
5. Firmly press the transmitter onto the desired mounting surface for at least 30 seconds.

Recommendation: For best results and long-term stability, screw mounting is recommended, especially for

outdoor use.

5. OPERATING INSTRUCTIONS

5.1 Changing Melodies

To change the melody on your receiver:

1. Press the "Melody Selection" button (often indicated by a music note icon) on the receiver.
2. Each press will cycle through the available 60 melodies.
3. Stop pressing when you hear your desired melody. The receiver will automatically save the selection.

5.2 Adjusting Volume

To adjust the volume level:

1. Press the "Volume Control" button (often indicated by a speaker icon) on the receiver.
2. Each press will cycle through the 5 available volume levels (including silent mode).
3. Select the volume level that suits your preference.

5.3 Pairing (If Needed)

Your doorbell system usually comes pre-paired. If the transmitter and receiver lose connection or if you add additional transmitters/receivers, follow these steps to pair them:

1. Plug in the receiver.
2. Press and hold the "Volume Control" button on the receiver for approximately 5 seconds until you hear a "ding" sound or the LED indicator flashes rapidly. This indicates pairing mode.
3. Immediately press the transmitter (push button) once.
4. You should hear the selected melody, confirming successful pairing.
5. If pairing fails, unplug the receiver and repeat the process.

6. MAINTENANCE

- **Cleaning:** Wipe the doorbell units with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the transmitter's LED indicator no longer lights up or the range decreases significantly, it's time to replace the CR2032 battery. Follow the battery installation steps in Section 4.1.
- **Environmental Conditions:** While the transmitter is IP65 waterproof, extreme temperatures or prolonged direct exposure to harsh weather conditions may affect its lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Doorbell does not ring.	• Transmitter battery is dead or incorrectly installed. • Receiver is unplugged or not powered. • Transmitter and receiver are not paired. • Distance is too far or signal interference.	• Replace transmitter battery (CR2032) and ensure correct polarity. • Ensure receiver is plugged into a working outlet. • Re-pair the transmitter and receiver (see Section 5.3). • Move receiver closer to transmitter; avoid metal obstructions.
Short operating range.	• Low transmitter battery. • Signal interference from other devices or metal objects. • Thick walls or multiple obstacles between units.	• Replace transmitter battery. • Relocate receiver or transmitter away from potential interference sources (e.g., microwaves, large electronics). • Try different placement for optimal signal path.
Receiver LED flashes but no sound.	Volume is set to 0dB (silent mode).	Increase the volume using the "Volume Control" button (see Section 5.2).

8. SPECIFICATIONS

Feature	Detail
Brand	TECKNET
Model Number	B0BZVDJHCS
Manufacturer	TECKNET
Item Weight	3.87 ounces (approx. 110 grams)
Product Dimensions	2.36 x 2.32 x 3.62 inches (Receiver)
Power Source (Receiver)	Corded Electric
Power Source (Transmitter)	Battery (CR2032, typically not included as per specifications, but required for operation)
Waterproof Rating (Transmitter)	IP65
Operating Range	Up to 400 meters (1300 feet) in open air
Melodies	60 selectable
Volume Levels	5 (0dB to 90dB)
Included Components	Manual (and doorbell units, mounting hardware)
Date First Available	May 18, 2024

9. WARRANTY AND SUPPORT

TECKNET products come with a standard warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official TECKNET website. If you encounter any issues or have questions regarding your doorbell, please contact TECKNET customer support:

- **Website:** www.tecknet.co.uk (or relevant regional website)
- **Email:** Refer to your product packaging or website for contact email.

Please have your model number (B0BZVDJHCS) and purchase date ready when contacting support.