

[Manuals.plus](#) /

› [Wildgame Innovations](#) /

› Wildgame Innovations Scrapeline 18MP Trail Camera User Manual

Wildgame Innovations WGI-WGICM0745

Wildgame Innovations Scrapeline 18MP Trail Camera User Manual

Model: WGI-WGICM0745

INTRODUCTION

This user manual provides detailed instructions for the setup, operation, and maintenance of your Wildgame Innovations Scrapeline 18MP Trail Camera. Designed for reliability and ease of use, this camera is an essential tool for monitoring wildlife. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.

PRODUCT OVERVIEW

Key Features

- **High Resolution Imaging:** Captures 18 Megapixel still images and 720p HD video.
- **Extended Illumination:** Features 40 high-intensity invisible IR LEDs with a 75-foot illumination range for clear night vision.
- **Fast Trigger Speed:** Less than 3/4 second trigger speed ensures minimal missed activity.
- **Silent Shield Technology:** Designed to operate quietly, minimizing disturbance to wildlife.
- **Complete Bundle:** Includes 8 AA batteries and a 16GB SD card for immediate use.
- **Durable Design:** Built for outdoor use with a robust, multi-color casing.

Included Components

- Wildgame Innovations Scrapeline 18MP Trail Camera
- Tree Strap
- 8 AA Batteries
- 16GB SD Card

Product Views



The Wildgame Innovations Scrapeline 18MP Trail Camera shown with all included accessories: the camera unit, 8 AA batteries, a 16GB SD card, and a tree strap for mounting.



A detailed front view of the trail camera, highlighting the lens, IR LEDs, and motion sensor.



The camera's interior, with the side panel open, revealing the battery compartments and the SD card slot.

SETUP

1. Battery Installation

1. Open the camera's side latch to access the battery compartment.
2. Insert the 8 included AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment securely to maintain weather resistance.

2. SD Card Installation

1. Locate the SD card slot, typically near the battery compartment.
2. Insert the included 16GB SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the SD card in until it springs out.

3. Mounting the Camera

1. Select a suitable location for your camera, such as a tree or post, ensuring a clear view of the desired monitoring area.
2. Thread the included tree strap through the mounting slots on the back of the camera.
3. Securely fasten the strap around the mounting surface, adjusting the camera's angle as needed. Ensure the camera is stable and will not shift.

OPERATING INSTRUCTIONS

Powering On and Basic Settings

1. After installing batteries and SD card, locate the power switch inside the camera.
2. Switch the camera to the "ON" position. The display screen will illuminate.

3. Use the navigation buttons (typically labeled UP, DOWN, ENTER, MENU) to set the current date, time, and desired operating mode (e.g., Photo, Video, or Photo+Video).
4. Adjust other settings such as photo resolution (18MP), video resolution (720p), trigger delay, and number of photos per trigger as per your requirements.

Capturing Images and Videos

Once configured and mounted, the camera will automatically begin capturing images or videos when motion is detected within its sensor range. The camera's fast trigger speed (less than 3/4 second) ensures quick capture of moving subjects. The 40 high-intensity invisible IR LEDs provide clear night vision up to 75 feet without alerting wildlife.

Viewing Captured Media

To view captured images and videos, remove the SD card from the camera and insert it into a compatible SD card reader connected to a computer or other viewing device. The files will be stored in standard image (JPEG) and video (AVI/MOV) formats.



Example of a daytime image captured by the trail camera, showing a deer in its natural habitat.



Example of a nighttime image captured by the trail camera, demonstrating the invisible IR LED illumination.



Another example of a clear nighttime image, showing a deer in motion.



A daytime capture showing wild turkeys in an open field, demonstrating the camera's wide field of view.



An action shot captured during the day, showing ducks taking flight from a body of water.



A daytime image of a coyote traversing an open field, showcasing the camera's ability to capture various wildlife.

MAINTENANCE

- **Cleaning:** Periodically wipe the camera lens and IR LED array with a soft, clean cloth to ensure clear images. Avoid abrasive materials or harsh chemicals.
- **Battery Replacement:** Replace all 8 AA batteries when the low battery indicator appears or when performance degrades. Always use fresh, high-quality alkaline batteries.
- **SD Card Management:** Regularly format your SD card (after backing up important data) to maintain optimal performance and prevent data corruption.
- **Storage:** When not in use for extended periods, remove batteries and the SD card, and store the camera in a cool, dry place away from direct sunlight.
- **Weather Protection:** Ensure all latches and seals are properly closed when the camera is deployed outdoors to protect against moisture and dust.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera not powering on	Ensure batteries are inserted correctly with proper polarity. Check if batteries are fully charged. Replace with new ones if necessary. Verify the power switch is in the "ON" position.
No images/videos captured	Check if the SD card is properly inserted and not full. Ensure the SD card is formatted correctly (FAT32). Verify motion sensor sensitivity settings. Confirm the camera is in the correct operating mode (Photo/Video). Ensure there is sufficient movement within the detection zone.

Problem	Possible Cause / Solution
Poor image/video quality	Clean the camera lens and IR LED array. Check for obstructions in front of the camera. Ensure adequate lighting for daytime captures; for night, verify IR LEDs are functioning. Adjust camera placement to avoid direct sunlight or strong backlighting.
Short battery life	Use high-quality alkaline batteries. Reduce the frequency of captures or video length settings. Avoid extreme temperatures, which can affect battery performance.

SPECIFICATIONS

Feature	Detail
Model Name	Scrapeline
Model Number	WGI-WGICM0745
Effective Still Resolution	18 MP
Video Capture Resolution	720p HD
Illumination Type	40 high-intensity invisible IR LEDs
Illumination Range	75 feet
Trigger Speed	Less than 3/4 second
Power Source	8 AA Batteries (included)
Storage	SD Card (16GB included)
Connectivity Protocol	SD Card, Wi-Fi
Mounting Type	Tree Strap
Dimensions (L x W x H)	4 x 2.5 x 6 inches
Item Weight	1.4 pounds (0.64 Kilograms)
Color	Multi
Manufacturer	GSM Outdoors
UPC	616376001994

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please contact Wildgame Innovations customer service. Refer to the product packaging or the official Wildgame Innovations website for the most current

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question