

ICESOMNUS E12

ICESOMNUS Sabbat E12 Marble Series Wireless Earbuds User Manual

Model: E12

INTRODUCTION

Thank you for choosing the ICESOMNUS Sabbat E12 Marble Series Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as high-definition sound quality, intelligent noise cancellation, and extended battery life. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



Image: The Sabbath E12 Marble Series earbuds resting inside their open charging case, showcasing their unique marbled-like finish.

WHAT'S IN THE BOX

- Sabbath E12 Marble Series Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Type-C Charging Cable
- User Manual
- Multiple sizes of ear tips (pre-installed and additional pairs)



Image: A complete view of the product packaging contents, including the earbuds, charging case, charging cable, and documentation.

SETUP

Initial Charging

Before first use, fully charge the charging case and earbuds. Place the earbuds into the charging case. Connect the USB Type-C cable to the charging port on the case and the other end to a USB power source. The indicator light on the case will show charging status. The case also supports wireless charging.



Image: The Sabbath E12 charging case connected to a USB-C cable, illustrating the charging process.

Fitting the Earbuds

For optimal sound quality and comfort, select the ear tips that best fit your ears. Gently insert each earbud into your ear canal and twist slightly to secure them. A proper seal is crucial for effective noise cancellation and bass response.

OPERATION

Power On/Off

- **Power On:** The earbuds automatically power on when removed from the charging case.
- **Power Off:** Place the earbuds back into the charging case to automatically power them off and begin charging.

Bluetooth Pairing

1. Ensure the earbuds are fully charged.
2. Open the charging case and remove both earbuds. They will automatically enter pairing mode.

3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for available Bluetooth devices and select "Sabbat E12" from the list.
5. Once connected, you will hear a confirmation prompt. The earbuds feature memory pairing and will automatically connect to the last paired device when removed from the case.

Touch Controls

The Sabbat E12 earbuds feature intuitive touch controls on each earbud. Refer to the diagram below for specific functions:



Image: A visual guide detailing the touch gestures for controlling music playback, calls, and voice assistant on the earbuds.

- **Single-click (L or R):** Play/Pause music, Answer/Hang up calls.
- **Double-click (L):** Previous song.
- **Double-click (R):** Next song.
- **Triple-click (L or R):** Volume +/- (specific action may vary, typically L for volume down, R for volume up).
- **Long press 2s (L or R):** Summon Voice Assistant (Siri/Google Assistant) or Power On/Off.

CHARGING

Earbuds Charging

Place the earbuds into the charging case. They will automatically begin charging. The indicator lights on the earbuds (if present) or case will confirm charging status. A full charge provides up to 6 hours of playback.

Charging Case

The charging case can be charged via the included USB Type-C cable or wirelessly on a compatible wireless charging pad. A full charge of the case provides approximately 30 hours of additional battery life for the earbuds. Charging time for the case is approximately 1 hour.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use

harsh chemicals or abrasive materials.

- **Ear Tips:** Remove ear tips periodically and clean them with water and mild soap. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** The earbuds are water resistant. Avoid submerging them in water or exposing them to excessive moisture for prolonged periods. Dry them thoroughly if they get wet.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen and remove. Check your device's Bluetooth settings and try re-pairing.
No sound from one earbud	Ensure both earbuds are charged. Try placing both back in the case and removing them again. Re-pair with your device.
Charging issues	Check the USB-C cable and power source. Ensure the earbuds are correctly seated in the charging case. Clean charging contacts if necessary.
Poor sound quality	Ensure ear tips provide a good seal. Check for obstructions in the earbud nozzles. Move closer to your device to avoid interference.
Touch controls unresponsive	Ensure your fingers are clean and dry. Try placing earbuds back in the case and removing them to reset.

SPECIFICATIONS

Feature	Detail
Model Name	E12
Connectivity Technology	Wireless (Bluetooth 5.2)
Noise Control	Active Noise Cancellation (CVC8.1)
Audio Driver Type	Dynamic Driver
Audio Driver Size	10 Millimeters
Frequency Response	20 Hz - 20 kHz
Sensitivity	106 dB
Impedance	32 Ohm
Earbud Battery Life	Up to 6 Hours

Feature	Detail
Charging Case Battery Life	Up to 30 Hours (additional)
Charging Time	Approx. 1 Hour (earbuds & case)
Headphones Jack	USB Type-C (for case charging)
Water Resistance Level	Water Resistant
Control Type	Voice Control, Button (Touch)
Compatible Devices	Cellphones, Laptops, Desktops (Android, iOS compatible)

WARRANTY AND SUPPORT

ICESOMNUS is committed to providing top-quality after-sales service. If you encounter any issues with your Sabbath E12 Marble Series Wireless Earbuds, please do not hesitate to contact the seller or ICESOMNUS customer support directly. We offer unconditional refunds or replacements for product-related issues.

For further assistance, please refer to the contact information provided with your purchase or visit the official ICESOMNUS store page on Amazon.