



Manuals.plus /

› Faroro /

› Faroro 4L Automatic Pet Feeder Instruction Manual

Faroro PF21

Faroro 4L Automatic Pet Feeder

Model: PF21

INTRODUCTION

Thank you for choosing the Faroro 4L Automatic Pet Feeder. This device is designed to provide a convenient and reliable way to feed your pets on a scheduled basis, ensuring they receive appropriate portions even when you are away. Please read this manual thoroughly before use to ensure proper operation and maintenance.

SAFETY INSTRUCTIONS

- Always place the feeder on a stable, level surface to prevent tipping.
- Do not immerse the main unit in water or any other liquid.
- This appliance is intended for indoor use only.
- Use only dry pet food with a kibble size between 2-15 mm. Larger kibble may cause blockages.
- Keep out of reach of children and pets when not in use or during cleaning.
- Unplug the feeder before cleaning or performing any maintenance.
- Ensure the power cord is not chewed by pets. Use the anti-bite cable provided.

WHAT'S IN THE BOX

What's in the box:



Image: Contents of the Faroro 4L Automatic Pet Feeder box.

- Main Feeder Unit (with food hopper and control panel)
- Stainless Steel Food Bowl
- Bowl Holder
- USB Power Cable (anti-bite)
- Desiccant Bag

PRODUCT OVERVIEW






Image: Front view of the Faroro 4L Automatic Pet Feeder.

The Faroro Automatic Pet Feeder consists of a main unit with a transparent food reservoir, a control panel for programming, and a detachable stainless steel bowl for easy cleaning.

Key Components:

- **Food Reservoir:** 4L capacity, transparent for easy monitoring of food levels.
- **Lid:** Sealed lid with desiccant compartment to keep food fresh.
- **Control Panel:** LCD display and buttons for setting time, meals, portions, and voice recording.
- **Food Outlet:** Dispenses kibble into the bowl. Features an anti-clog design.
- **Stainless Steel Bowl:** Removable for cleaning, food-grade material.
- **Battery Compartment:** Located at the bottom, for 3 x D-cell batteries (not included) as backup power.

SETUP

1. Assembly

1. Place the main feeder unit on a flat, stable surface.
2. Attach the bowl holder to the main unit.
3. Insert the stainless steel bowl into the bowl holder.
4. Open the lid of the food reservoir and place the desiccant bag into its designated compartment to maintain food freshness.
5. Fill the food reservoir with dry pet food. Ensure kibble size is between 2-15 mm.
6. Close the lid securely.

2. Power Connection

Dual Power Supply

Ensure uninterrupted feeding, even during a power outage



Image: Dual power supply options for the feeder.

- Connect the USB power cable to the feeder and plug it into a 5V DC power adapter (not included) and then into a wall outlet.
- For backup power during outages, install 3 x D-cell alkaline batteries (not included) into the battery compartment at the bottom of the unit.

OPERATING INSTRUCTIONS

Facile à configurer

Le panneau de paramètres intuitif convient à tous les âges et évite les opérations compliquées.



Image: Control panel for programming the feeder.

Control Panel Buttons:

- **Set Button (Gear icon):** Enter/exit programming mode, confirm settings.
- **Lock Button (Lock icon):** Lock/unlock the control panel.
- **Record Button (Microphone icon):** Record/play voice message.
- **Manual Feed Button (Paw icon):** Dispense one portion manually.
- **+/- Buttons:** Adjust values (time, portions).

1. Setting Current Time

1. Press and hold the **Set** button until the hour digit flashes.
2. Use the +/- buttons to adjust the hour.
3. Press the **Set** button to move to the minute digit, then adjust with +/-.
4. Press the **Set** button again to save and exit.

2. Programming Feeding Schedule

1 à 6 repas par jour

Assurez-vous que votre animal mange régulièrement afin d'avoir une bonne nuit de sommeil et d'éviter les miaulements tôt le matin.

| | | | | | |
|-------------------------|---------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 8:20 | 10:30 | 13:00 | 16:30 | 19:00 | 23:00 |
| First meal 1 Portion | Second meal 2 Portions | Third meal 2 Portions | Fourth meal 1 Portion | Fifth meal 2 Portions | Sixth meal 4 Portions |



Image: Example of a customized feeding schedule.



Image: Portion size adjustment.

The feeder supports 1 to 6 meals per day, with 1 to 50 portions per meal (approx. 10g per portion).

1. Press the **Set** button repeatedly to cycle through meal settings (M1, M2, ..., M6).
2. When a meal number flashes, use +/- to set the desired feeding time (hour then minute).
3. After setting the time, press **Set** again to move to portion setting.
4. Use +/- to select the number of portions for this meal.
5. Repeat for all desired meals. To disable a meal, set its portions to 0.
6. Press and hold the **Set** button to save all settings and exit programming mode.

3. Voice Recording

You can record a 30-second voice message that will play before each scheduled meal.

1. Press and hold the **Record** button until the microphone icon appears and flashes.
2. Speak clearly into the microphone located on the feeder.
3. Release the **Record** button to stop recording.
4. Press the **Record** button once to play back your message.

4. Manual Feeding

To dispense one portion of food immediately, simply press the **Manual Feed** button (Paw icon) once.

MAINTENANCE

1. Cleaning

Easy to Clean

Detachable structure for a hygienic feeding environment



Image: Detachable components for easy cleaning.

- Unplug the feeder from the power source before cleaning.
- Remove the food reservoir, bowl holder, and stainless steel bowl. These parts are washable.
- Wash the removable parts with mild soap and water. Rinse thoroughly and dry completely before reassembling.
- Wipe the main unit with a soft, damp cloth. Do not submerge the main unit in water.
- Ensure all parts are completely dry before refilling with food and reconnecting power.

2. Food Storage

- Regularly check the desiccant bag and replace it every 1-2 months to ensure food freshness.
- Monitor the food level through the transparent reservoir and refill as needed.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|--|---|
| Feeder not dispensing food. | No power; Food hopper empty; Kibble size too large; Food blockage. | Check power connection/batteries; Refill food; Use appropriate kibble size (2-15mm); Clear any blockage in the food outlet. |
| Display not working. | No power; Batteries drained. | Ensure power cable is securely connected; Replace D-cell batteries. |
| Voice message not playing. | No message recorded; Low battery. | Record a voice message; Check battery level. |
| Feeder dispenses too much/too little food. | Incorrect portion settings. | Re-program the desired portion size for each meal. |
| Feeder not dispensing at scheduled times. | Incorrect time setting; Incorrect meal schedule. | Verify and correct the current time; Re-program the meal schedule. |

SPECIFICATIONS

- **Model:** PF21
- **Capacity:** 4 Liters (approx. 1.73 kg / 3.8 lbs of dry food)
- **Material:** ABS plastic, Stainless Steel (bowl)
- **Dimensions:** 17.4 x 34.8 x 33.8 cm (L x W x H)
- **Weight:** 1.73 kg
- **Power Supply:** 5V DC USB power adapter (not included), 3 x D-cell batteries (not included) for backup
- **Feeding Schedule:** 1-6 meals per day
- **Portion Size:** 1-50 portions per meal (approx. 10g per portion)
- **Recommended Kibble Size:** 2-15 mm
- **Voice Recording:** Up to 30 seconds

WARRANTY & SUPPORT

Faroro products come with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the contact information provided on the product packaging or visit the official Faroro website. Please retain your proof of purchase for warranty claims.