

Hatteker RFC-691802

Hatteker Professional Hair Clipper and T-Blade Trimmer Set User Manual

Brand: Hatteker | Model: RFC-691802

1. INTRODUCTION

This user manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your Hatteker Professional Hair Clipper and T-Blade Trimmer Set. Please read this manual thoroughly before first use and retain it for future reference.

2. PRODUCT OVERVIEW

2.1. Package Contents

Your Hatteker Professional Hair Clipper and T-Blade Trimmer Set includes the following items:

- Professional Hair Clipper
- T-Blade Trimmer
- Nose Hair Trimming Head
- Precision Trimmer Head
- 8 Hair Clipper Guide Combs (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm)
- 4 T-Blade Trimmer Guide Combs (1mm, 3mm, 5mm, 7mm)
- Cleaning Brush
- USB Charge Cable
- User Manual

2.2. Key Features

- **Superb Performance:** Self-sharpening precision stainless steel blades for precise trimming and long-lasting performance.
- **Powerful Motor & Large Capacity Battery:** High-tech motor for efficient trimming. Built-in lithium-ion battery with LED digital display. Clipper provides up to 180 minutes run time after 3 hours charge. Trimmer provides up to 180 minutes run time after 1.5 hours charge.
- **Hygienic and Ergonomic Design:** All-metal body design with comfortable texture. Blades are hygienic and designed to prevent irritation.

- **Smart Display:** Both clipper and trimmer feature a digital LED display showing remaining battery percentage (00-100). Flashing '05' indicates low battery.
- **Multiple Guide Combs:** Includes 8 combs for the clipper and 4 for the T-blade trimmer to meet various hair length needs.
- **Fine Adjustment Gear:** Clipper features an adjustable taper lever for varying cutting closeness (0.8mm to 3.6mm).
- **Washable Blade & Easy To Clean:** Detachable and washable blades for easy maintenance.
- **USB Charging:** Conveniently charges via USB.

2.3. Product Components and Visuals



Figure 2.1: Complete Hattaker Professional Hair Clipper and T-Blade Trimmer Set, including the main clipper, T-blade trimmer, various guide combs, nose hair trimming head, cleaning brush, and USB charging cable.



Figure 2.2: Detailed view of the Hatteker Hair Clipper, highlighting key components such as the sharp blade, carbon steel cutter head, adjustable taper lever, ON/OFF button, LCD display, and charging port. Dimensions are also indicated.

Multiple Guide Combs For Hair Cutting

8 Guide Combs



4 Guide Combs

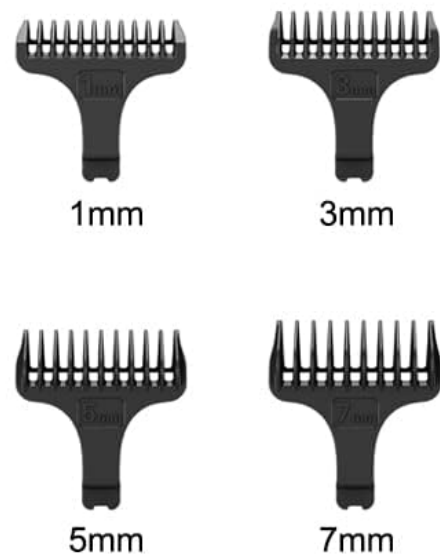


Figure 2.3: Illustration of the multiple guide combs included for both the hair clipper (8 combs: 1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm) and the T-blade trimmer (4 combs: 1mm, 3mm, 5mm, 7mm).



T- BLADE TRIMMER

Suitable for close trimming, crisp lining, beard and sideburns.
Excellent for lining and artwork

FINE ADJUSTMENT GEAR

Easily cuts all hair types and lengths from 0.8mm to 3.6mm

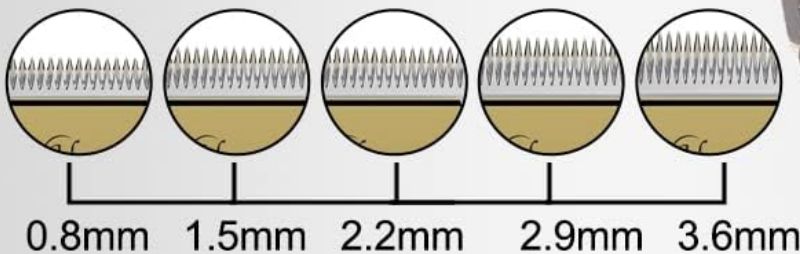


Figure 2.4: Close-up of the T-Blade Trimmer, suitable for close trimming, crisp lining, beard, and sideburns. Also shows the clipper's fine adjustment gear, allowing cuts from 0.8mm to 3.6mm.

Upgrade Clippers Set



3 In 1 Trimmer



Washable Blade & Easy To Clean



LED Display



Stainless Blade



USB Charging



All Metal Body Design

Figure 2.5: Battery specifications for the Hattaker Clipper (2000mAh, 3 hours full charge, 180 minutes working time) and Trimmer (1000mAh, 1.5 hours full charge, 180 minutes working time).

6500 PRM

- Heavy-duty Powerful Rotary Motor
- For Quick and Quiet Cutting Saving 20% Cutting Time



Low Noise < 60dB



Figure 2.6: Depiction of the 6500 RPM heavy-duty powerful rotary motor, emphasizing quick and quiet cutting with low noise levels (below 60dB).

Multi-purpose



Figure 2.7: Examples of the multi-purpose use of the Hattaker grooming kit, including hair cutting, precision trimming, beard trimming, and nose hair trimming.

3. SETUP

3.1. Initial Charging

Before first use, fully charge both the hair clipper and the T-blade trimmer. Connect the USB charge cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., computer, power bank, USB charger, car charger). The LED display will show the charging progress. The clipper requires approximately 3 hours for a full charge, and the trimmer requires approximately 1.5 hours.

3.2. Attaching Guide Combs and Heads

To attach a guide comb, align the comb with the blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade. For the trimmer, align the desired head (T-blade, nose trimmer, precision trimmer) with the main body and twist to secure or remove.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press the ON/OFF button located on the front of the device to turn it on. The LED display will illuminate, showing the current battery percentage. Press the button again to turn the device off.

4.2. Using the Hair Clipper

1. Ensure the clipper is fully charged.
2. Select the desired guide comb and attach it securely.
3. For precise length adjustment, use the adjustable taper lever on the side of the clipper. Move the lever up for a shorter cut (0.8mm) and down for a longer cut (3.6mm).
4. Turn on the clipper.
5. Begin cutting hair against the direction of hair growth for an even trim.
6. Regularly clear hair from the blades during use to maintain performance.

4.3. Using the T-Blade Trimmer

1. Ensure the trimmer is fully charged.
2. Attach the T-blade head. For specific lengths, attach one of the 4 T-blade guide combs.
3. Turn on the trimmer.
4. Use for crisp lining, beard trimming, sideburns, or detailed artwork.

4.4. Using the Nose Hair Trimmer

1. Ensure the trimmer is fully charged.
2. Attach the nose hair trimming head.
3. Turn on the trimmer.
4. Carefully insert the trimming head into the nostril or ear canal to remove unwanted hair.

5. MAINTENANCE

5.1. Cleaning the Blades

After each use, turn off the device and detach the blade head. Use the provided cleaning brush to remove any loose hairs from the blades and the inside of the device. The blades are washable; rinse them under running water. Ensure the blades are completely dry before reattaching or storing the device.

5.2. Oiling the Blades

For optimal performance and longevity, apply a few drops of clipper oil (not included) to the blades after every few uses, especially after rinsing. Turn on the device for a few seconds to allow the oil to distribute evenly.

5.3. Charging and Storage

Recharge the device when the LED display shows '05' flashing to prevent complete battery depletion. Store the clipper and trimmer in a cool, dry place, away from direct sunlight and moisture. Keep all accessories organized in the provided case.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully. Refer to Section 3.1.

Problem	Possible Cause	Solution
Poor cutting performance.	Blades are dull or clogged with hair. Blades need oiling.	Clean the blades thoroughly. Apply clipper oil. Consider professional sharpening or replacement if blades are excessively dull.
Device makes unusual noise.	Blades are not properly aligned or need oiling.	Ensure blades are correctly attached and aligned. Apply clipper oil.
LED display shows '05' and flashes.	Low battery.	Recharge the device immediately.

7. SPECIFICATIONS

- **Brand:** Hatteker
- **Model Number:** RFC-691802
- **Product Dimensions:** 2.4 x 6.93 x 8.7 inches; 1.76 Pounds
- **Item Weight:** 800 Grams
- **Power Source:** Rechargeable Lithium-ion Battery
- **Clipper Battery:** 2000mAh Lithium-ion (approx. 3 hours charge for 180 mins run time)
- **Trimmer Battery:** 1000mAh Lithium-ion (approx. 1.5 hours charge for 180 mins run time)
- **Motor Speed:** 6500 RPM (Rotary Motor)
- **Blade Material:** Stainless Steel / Carbon Steel
- **Color:** Vintage Gold
- **Recommended Uses:** Trimming, Shaving, Grooming
- **Hair Type:** All
- **First Available:** March 30, 2023
- **Manufacturer:** Hatteker

8. SAFETY INFORMATION

Important: Avoid contact with eyes, skin, and water. Unplug when not in use. Do not immerse the main body of the clipper/trimmer in water. Only the detachable blades are washable. Keep out of reach of children. Do not use if the device or blades are damaged.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Hatteker customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question