

MOKOQI Unicorn Star Projector Night Light Projection Lamps

MOKOQI Unicorn Star Projector Night Light User Manual

INTRODUCTION

The MOKOQI Unicorn Star Projector Night Light is designed to create a magical and soothing atmosphere in any room. It projects vivid unicorn, star, and moon themes onto ceilings and walls, stimulating imagination and providing a comforting night light for children.

SAFETY INFORMATION

- Keep the device away from water and moisture to prevent electric shock.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified personnel for service.
- Use only a 5V 1A power adapter with the provided USB cable. Using an incorrect power source may damage the device.
- If using batteries, ensure they are inserted with correct polarity. Remove batteries if the device will not be used for an extended period.
- This product is not a toy. Adult supervision is recommended for young children.

PACKAGE CONTENTS

- 1 x MOKOQI Unicorn Star Projector Night Light Unit
- 1 x USB Power Cable
- Multiple Projection Films (e.g., Unicorn, Star, Snowflake themes)
- 1 x User Manual (this document)

SETUP

1. Power Connection:

The projector can be powered in two ways:

- **Battery Power:** Open the battery compartment at the bottom of the unit and insert 4 x AAA batteries (not included). Ensure correct polarity (+/-).
- **USB Power:** Connect the provided USB cable to the DC 5V port on the projector and to a 5V 1A power adapter (not included) or a computer's USB port.



This diagram shows the three ways to power your projector: using 4 AAA batteries, connecting to a 5V 1A power adapter via USB, or plugging into a computer's USB port.

2. Installing Projection Films:

- Gently remove the outer dome cover from the projector.
- Carefully remove the inner transparent projection film cylinder.
- Select your desired projection film and place it inside the cylinder, ensuring it fits snugly.
- Reattach the inner cylinder and then the outer dome cover.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button (often labeled 'A' or with a power symbol) to turn the projector on or off.
2. **Night Light Mode:** To use the device as a diffused night light, ensure the outer dome cover is securely in place. This will soften the light output.
3. **Projection Mode:** For clear projections onto walls and ceilings, remove the outer dome cover. The internal projection film will then cast its images.
4. **Changing Projection Films:** Follow the steps outlined in the 'Setup' section to swap between different projection films.
5. **Light Color and Effect Control:** Use the control buttons on the unit (typically labeled 'B', 'C', 'D') to:
 - Change light colors (e.g., single color, multi-color).
 - Activate or deactivate rotation of the projection.
 - Adjust brightness or set a timer (if available on your model).



TIMING OFF

- Timing off
- Star sky projection film
- Automatic Rotation
- USB Charging
- 8 Kinds Of Lights
- Three-button Control



► NIGHT LIGHT MODE

Removing the projection film and turn on the night light mode, the warm light will accompany the children to sleep.



► PROJECTION MODE

Removing the transparent cover will create a snowfall / Unicorn on the ceiling.

SNOWFLAKE NIGHT LIGHT

ORDINARY NIGHT LIGHTVC

UNICORN NIGHT LIGHT

This image illustrates the two main modes: Night Light Mode (with the cover on for diffused light) and Projection Mode (with the cover off for clear projections). It also highlights features like timing, rotation, USB charging, multiple light options, and button controls.

Operation Demonstration Video

Watch this video for a visual guide on how to operate your MOKOQI Unicorn Star Projector Night Light, including steps for changing projection films and utilizing various light settings.

MAINTENANCE

- Clean the projector's exterior with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
- To clean the projection films, gently wipe them with a soft, lint-free cloth. Avoid scratching the film surface.
- Store the projector in a cool, dry place away from direct sunlight when not in use.
- If using batteries, remove them if the device will be stored for an extended period to prevent leakage.

TROUBLESHOOTING

- **No Power:** Check if batteries are correctly inserted and charged, or if the USB cable is securely connected to a working power source (5V 1A adapter or computer USB port).
- **No Projection:** Ensure the outer dome cover is removed for projection mode. Verify that a projection film is correctly installed inside the inner cylinder.
- **Dim Light/Projection:** Replace old batteries with new ones, or ensure the USB power source is providing adequate power.
- **No Rotation:** Press the rotation control button (if available on your model) to activate the rotation function.

SPECIFICATIONS

Feature	Detail
Product Type	Night Light Projector
Brand	MOKOQI
Model Name	Unicorn Star Projector Night Light Projection Lamps
Recommended Use	Bedroom Decoration
Power Input	DC 5V (via USB) or 4 x AAA Batteries (not included)
Control Method	Button Control
Included Components	Projector Unit, USB Cable, Projection Films

WARRANTY AND SUPPORT

No specific warranty information is provided in the product data. For warranty details, technical support, or any inquiries regarding your MOKOQI Unicorn Star Projector Night Light, please refer to the manufacturer's official website or contact their customer service directly.

PRODUCT IN USE



The projector creates a soothing starry sky and moon atmosphere, ideal for a child's bedroom.



Experience a magical unicorn-themed projection, transforming any room into an enchanting space.



Colorful unicorn and star projections fill the room, stimulating imagination.



A child sleeps under a calming projection of stars and a crescent moon, provided by the night light.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question