

[manuals.plus](#) /

› [MI](#) /

› [MI Xiaomi Beard Trimmer 2C User Manual](#)

MI 41917

MI Xiaomi Beard Trimmer 2C User Manual

Model: 41917

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your MI Xiaomi Beard Trimmer 2C. Please read this manual thoroughly before first use and retain it for future reference.



Image 1.1: MI Xiaomi Beard Trimmer 2C, showcasing its sleek black design and integrated dial.

2. SAFETY INFORMATION

To ensure safe operation, observe the following precautions:

- Keep the trimmer out of reach of children.
- Do not immerse the trimmer in water.
- Ensure the charging cable is undamaged before use.
- Do not use the trimmer if the blades are damaged.
- Avoid exposing the trimmer to extreme temperatures.

For further safety details, refer to the included safety leaflet.

3. PRODUCT FEATURES

- **0.5mm Precision:** Achieve fine trimming results with 0.5mm accuracy.
- **40 Length Settings:** Customize your beard style with a wide range of length options.

- **USB Type-C Charging:** Convenient and fast charging with a universal Type-C port.
- **90-Minute Runtime:** Enjoy extended cordless use on a single charge.
- **LED Indicator:** Monitor battery life easily with the integrated LED display.
- **Washable Attachments:** Facilitates easy cleaning and maintenance.
- **Travel Pouch & Safety Lock:** Designed for portability and secure storage.

Your browser does not support the video tag.

Video 3.1: Overview of the MI Xiaomi Beard Trimmer 2C's key features and benefits.

4. GETTING STARTED

4.1. Charging the Trimmer

Before first use, fully charge the trimmer. Connect the USB Type-C charging cable to the trimmer and a compatible power source. The LED indicator will show the charging status.

- A full charge takes approximately 2 hours.
- The trimmer provides up to 90 minutes of cordless runtime.

Quick and Versatile Charging

Experience a convenience and speed of Type-C charging.



Image 4.1: The trimmer connected to a USB Type-C charging cable.

4.2. Attaching and Removing Beard Combs

To attach a beard comb, align the comb with the trimmer head and push it gently until it clicks into place. To remove, pull the comb away from the trimmer head.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press the power button to turn the trimmer on or off.

5.2. Adjusting Length Settings

Rotate the integrated dial to select your desired trimming length. The trimmer offers 40 length settings for various beard styles.

LED Indicator



Image 5.1: Close-up of the dial for adjusting the 40 length settings.

5.3. Trimming

Move the trimmer against the direction of hair growth for an even trim. For precise lines, remove the comb attachment and use the bare blade.

Your browser does not support the video tag.

Video 5.2: Demonstration of the trimmer's 0.5mm precision for detailed styling.

5.4. Battery Indicator

The LED lights on the trimmer indicate the remaining battery charge:

- LED 1 blinks: Less than or equal to 10% charge.
- LED 1 is on: 11% - 30% charge.
- LED 1 & 2 are on: 31% - 59% charge.
- LED 1, 2 & 3 are on: More than or equal to 60% charge.

Travel-friendly trimmer with a safety lock



Image 5.2: The LED indicator lights displaying battery status.

6. MAINTENANCE

6.1. Cleaning the Trimmer

After each use, turn off the trimmer and remove the comb attachment. Use the provided cleaning brush to remove any hair from the blades and the trimmer body. The attachments are washable under running water.

Effortlessly clean your trimmer



Image 6.1: Using the cleaning brush to remove hair from the trimmer blades.

6.2. Blade Care

The trimmer features self-sharpening stainless steel blades. For optimal performance, ensure the blades are kept clean and free of debris.

7. TRAVEL AND SAFETY FEATURES

7.1. Safety Lock

To activate the safety lock, press and hold the power button for 3 seconds. This prevents accidental activation during travel or storage. Repeat the action to deactivate the safety lock.



Image 7.1: Activating the safety lock by pressing the power button for 3 seconds.

7.2. Travel Pouch

The included travel pouch provides convenient and protected storage for your trimmer and accessories, making it ideal for on-the-go grooming.

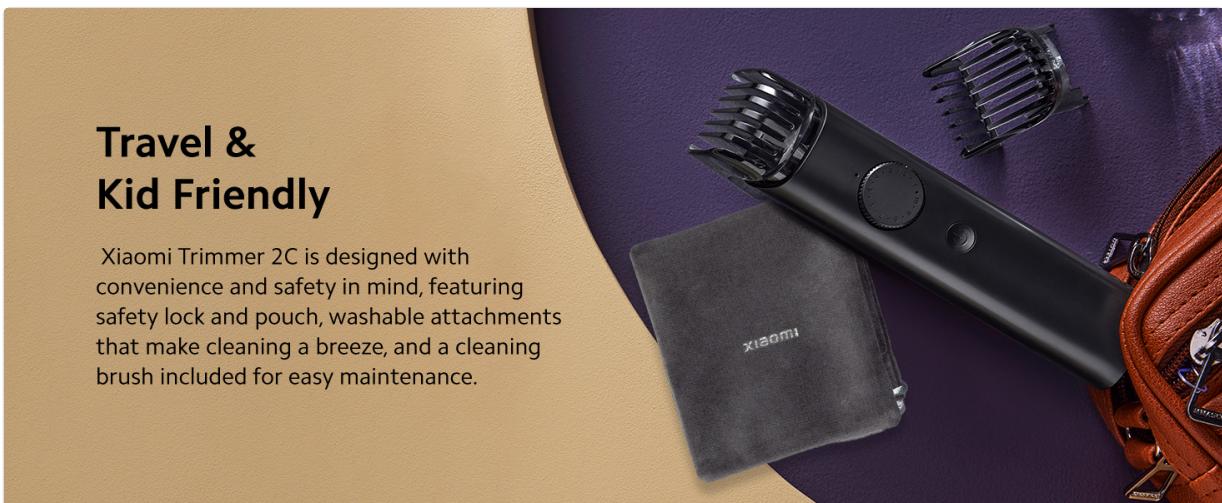


Image 7.2: The MI Xiaomi Beard Trimmer 2C alongside its travel pouch.

8. SPECIFICATIONS

Feature	Detail
Model Number	41917
Precision	0.5 mm
Length Settings	40
Charging Type	USB Type-C
Charging Time	2 hours
Runtime	90 minutes
Battery Type	800mAh Li-ion

Feature	Detail
Blade Material	Stainless Steel
Item Weight	253 g
Dimensions (LxWxH)	37 x 38 x 153 Millimeters
Country of Origin	China

9. WHAT'S IN THE Box

The MI Xiaomi Beard Trimmer 2C package includes:

- MI Xiaomi Beard Trimmer 2C
- Beard Combs (2)
- USB Type-C Charging Cable
- Cleaning Brush
- Travel Pouch
- User Manual (this document)

Beard Style

From 0.5mm- 10mm and
from 10.5mm - 20mm precision



Image 9.1: All components included with the MI Xiaomi Beard Trimmer 2C.

10. WARRANTY AND SUPPORT

This product comes with a standard brand warranty. For warranty claims or technical support, please refer to the contact information provided by the manufacturer or retailer at the time of purchase.

Manufacturer: Ningbo Lofans Home Appliance Co., Ltd.

Importer: Xiaomi Technology India Pvt. Ltd., Orchid (Block-E), Embassy Tech Village, Devarabeesanahalli, Marathahalli-Sarjapur Outer Ring Road, Bangalore-560103, Karnataka

Customer Care (India): Phone No. 18001036286, service.in@xiaomi.com