

[Manuals.plus](#) /

› [MCSYPOAL](#) /

› MCSYPOAL Microcurrent Facial Device JY-186 User Manual

MCSYPOAL JY-186

MCSYPOAL Microcurrent Facial Device JY-186 User Manual

Model: JY-186

1. INTRODUCTION

The MCSYPOAL Microcurrent Facial Device JY-186 is designed to provide a comprehensive facial and body massage experience. Utilizing mild microcurrent and gentle vibration, this device aims to revitalize facial muscles, improve skin elasticity, and reduce the appearance of wrinkles and fine lines. It features 5 different modes to cater to various skincare needs.



Microcurrent Modes

Mild & effective microcurrent can penetrate into the deep layer of skin and promote absorption of the nutrients

Vibration Modes

High-frequency vibration can stimulate facial muscles and tone up saggy skin

What We Fight Against

Wrinkles & fine lines, double chin, Turkey neck, puffy face, eye bag, etc

Image 1.1: The device utilizes microcurrent and vibration to target skin concerns like wrinkles and sagging.

2. SAFETY INFORMATION

- Read all instructions before using the device.
- Do not use the device on broken, irritated, or infected skin.
- Consult a physician before use if you have any medical conditions, including but not limited to epilepsy, heart conditions, pacemakers, or if you are pregnant.
- Keep the device away from water and do not immerse it.
- Keep out of reach of children.

- Discontinue use if you experience any discomfort or adverse reactions.
- Use only the provided charging cable and adapter.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x MCSYPOAL Microcurrent Facial Device JY-186
- 1 x USB-C Charging Cable
- 1 x Device Holder/Base
- 1 x User Manual

What will you get?



Image 3.1: The package includes the device, charging cable, device holder, and user manual.

4. DEVICE OVERVIEW

Familiarize yourself with the different parts of your MCSYPOAL Microcurrent Facial Device:



Image 4.1: Key components include the Massage Roller, Indicator Light, Power Button & Modes Adjustment, USB Charging Port, and Device Base.

- **Massage Roller:** Features a 360° rotating V-shaped design for effective skin contact.
- **Indicator Light:** Displays device status (e.g., charging, operating mode).
- **Power Button & Modes Adjustment:** Used to turn the device on/off and cycle through the 5 microcurrent and vibration modes.
- **USB Charging Port:** USB-C port for charging the device.
- **Device Base:** Provides a stable resting and charging position for the device.

5. SETUP

5.1 Charging the Device

1. Place the device onto its base.
2. Connect the provided USB-C charging cable to the device's charging port and a suitable USB power adapter (not included).
3. Charge the device completely for approximately 1.5 hours. The indicator light will typically turn blue when fully charged (or change from red to blue).



Image 5.1: The device charging on its base.

HOW TO USE

Microcurrent Facial Device



Place the device on the base and fully charge the device via the USB-C cable included in the package for about 1.5 hours until the red indicator light turns blue.

After facial cleansing, get your skin moist enough with serums or a sheet mask so that you can better feel the effects of microcurrent.

Use the roller along your jawline, cheeks, neck etc from bottom to top. The microcurrent is taking effect so it's normal to have a stinging feeling. You can start from the lowest level.

Image 5.2: Visual guide for charging the device and preparing your skin.

6. OPERATING INSTRUCTIONS

6.1 Preparing Your Skin

Before each use, ensure your skin is clean and adequately moisturized. Apply your preferred lotion, cream, or serum to the areas you intend to treat. This helps conduct the microcurrent effectively and allows for better nutrient absorption.

6.2 Using the Device

1. Press and hold the Power Button to turn on the device.

2. The device will start at the lowest intensity setting. You can cycle through the 5 available modes by pressing the Power Button briefly.
3. Gently roll the device along your jawline, cheeks, neck, and other desired areas. Move the rollers from bottom to top, following the natural contours of your face and body.
4. A mild tingling sensation is normal as the microcurrent takes effect. If the sensation is too strong, reduce the intensity.
5. Use the device for approximately 10 minutes per day for optimal results.
6. After use, press and hold the Power Button to turn off the device.

HOW TO USE

Microcurrent Facial Device



Place the device on the base and fully charge the device via the USB-C cable included in the package for about 1.5 hours until the red indicator light turns blue.



After facial cleansing, get your skin moist enough with serums or a sheet mask so that you can better feel the effects of microcurrent.



Use the roller along your jawline, cheeks, neck etc from bottom to top. The microcurrent is taking effect so it's normal to have a stinging feeling. You can start from the lowest level.

Image 6.1: Step-by-step guide on how to apply the device to your face after skin preparation.

7. MAINTENANCE

7.1 Cleaning

- After each use, wipe the massage rollers with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals.
- Ensure the device is completely dry before storing.

7.2 Storage

- Store the device in a cool, dry place, away from direct sunlight.
- Keep the device on its holder when not in use to protect the rollers.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	Low battery or not charged	Charge the device fully for 1.5 hours.
No microcurrent sensation	Skin is too dry or intensity is too low	Apply more conductive lotion/serum. Increase the intensity setting.
Device stops working during use	Low battery	Recharge the device.

9. SPECIFICATIONS

- **Model Number:** JY-186
- **Dimensions:** 14.1 x 9.3 x 8.41 cm
- **Weight:** Approximately 340 grams
- **Material:** Metal
- **Power Source:** Battery Powered
- **Charging Time:** Approximately 1.5 hours for a full charge
- **UPC:** 704771653396

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The MCSYPOAL Microcurrent Facial Device JY-186 comes with a one-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

10.2 Customer Support

For any questions, concerns, or warranty claims, please contact MCSYPOAL customer service. We aim to respond to all inquiries within 24 hours.

Please refer to your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question