



Manuals.plus /

› Amiroko /

› Amiroko Universal TV Remote Control Instruction Manual

## Amiroko 606829831261

# Amiroko Universal TV Remote Control Instruction Manual

Model: 606829831261

## 1. INTRODUCTION

This manual provides detailed instructions for setting up and operating your Amiroko Universal TV Remote Control. This remote is designed to be compatible with a wide range of television brands, offering a convenient replacement for your original TV remote.

**Compatible TV Brands:** LG, Samsung, Sony, Philips, Panasonic, Sharp, Toshiba, Hitachi, Vizio, TCL, JVC, Hisense, Vestel, Seiki, Sanyo, Insignia, Magnavox, RCA, Haier, Westinghouse HDTVs. Please note that other TV brands are not supported.



Work with the following Brand TVs:

for Samsung, LG, Sony, Panasonic, Philips, Sharp, Toshiba, Vizio, TCL, JVC, Hisense, Vestel, Hitachi, Seiki, Sanyo, Insignia, Magnavox, Haier, RCA, Westinghouse.

Image 1.1: The remote control highlighting its compatibility with various TV brands.

## 2. SETUP AND PROGRAMMING

### 2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Ensure correct polarity when inserting the batteries.

- Open the battery compartment cover on the back of the remote.
- Insert two AAA batteries, matching the (+) and (-) terminals correctly.
- Close the battery compartment cover.

**Note on batteries:** Do not mix old batteries with new ones or different types of batteries together. If the remote does not function correctly, please reinstall the batteries. If the remote remains unresponsive, replace the batteries.

### 2.2 Programming Methods

There are two methods to program your Amiroko Universal TV Remote Control:

## Method A: Code Setting

1. Press and hold the **MUTE** button and the **POWER** button simultaneously for 3 seconds until the LED indicator light illuminates. Release both buttons.
2. Refer to the provided code list (see Image 2.1) and input the 3-digit TV code corresponding to your television brand.
3. If the code is correct, the LED light will turn off, indicating successful programming. If the code is incorrect, the LED light will remain on, prompting you to try another code.

## Method B: Brand Setting

1. Turn on your television.
2. Press and hold the corresponding brand button on the remote (e.g., LG, Samsung, Sony) for 5 seconds.
3. The LED indicator light will flash three times, confirming that the setting is complete.

### Universal TV Remote Control Operating Instruction

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.


**Note on batteries**

- ! Do not mix old batteries with ones or mix different types of batteries together.
- ! If the remote doesn't work in using process, please reinstall the batteries.
- ! When the remote control is not sensitive, please renew the batteries.

### How TO SET UP YOUR REMOTE:

#### A. SET UP BY CODE

**Step.1** Press [ MUTE ] + [ POWER ] buttons together for 3 sec until led light is lit, then release it.



**Step.2** Input your 3 digit TV CODE from code list. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time. (If the TV not

BRAND	CODE LIST	TV
LG	023,001,024,025,026,027	
SAMSUNG	028,002,030,029,031,032	
SONY	033,003,034	
PHILIPS	005,004,038,039,040,041,035,038,037	
Panasonic	006,042,043,044	
SHARP	045,007,046,047,048,049,050,058,057,056,055,054,053,052,051	
TOSHIBA	059,008,060,061,062,063,064,065,066	
HITACHI	009,067	
VIZIO	068,010,069,070,071,072	
TCL	011,073,075,074,076	


BRAND	CODE LIST	TV
JVC	012,077,079,078,080,081	
HISENSE	013,014,049,050,058,057,056,055,054,053,052,051	
VESTEL	015	
SEIKI	016	
SANYO	017	
INSIGNIA	018	
MAGNAVOX	021,035,036,037	
RCA	019	
Haier	020	
WESTINGHOUSE	022	

**Step.3** Please check the function of Remote . If it doesn't work well, please you can try one of the other codes and repeat the process from step 1.


NOTE: During setting process, if no key is pressed in 10 seconds it will exit automatically.

#### B. Brand Search

1). Turn on TV. Press the button of the corresponding brand for 5 sec, the LED flashes three times, then the setting is completed



**Brand key Table**



**Default Mode:**

- Under the default setting, RC-G008 can directly control many brands, include LG/SAMSUNG/SONY/PHILIPS/PANASONIC/SHARP TV.
- Restore to the initial setting, please and hold the [ OK ] + [ 0 ] buttons about 3sec, the LED light will be blink four times, now it is in initial setting.

Image 2.1: Detailed instructions for both code setting and brand setting methods, including a code list for various TV brands.

## 3. OPERATING INSTRUCTIONS

Once programmed, your Amiroko Universal TV Remote Control functions similarly to your original TV remote. The buttons are clearly labeled for intuitive use.



Image 3.1: Front view of the remote control, showing button layout.

- **Power Button:** Turns the TV on or off.
- **Input Button:** Selects video input sources (HDMI, AV, etc.).
- **Volume (+/-) Buttons:** Adjusts the volume level.
- **Channel (CH +/-) Buttons:** Changes TV channels.
- **Mute Button:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Smart/Netflix/3D Buttons:** Direct access to smart TV features or specific applications (functionality may vary by TV model).

- **Numeric Keypad (0-9):** For direct channel input.

The remote utilizes infrared technology for long-distance and precise control, allowing for multi-angle induction.



Image 3.2: The remote control being used in a living room setting, illustrating its long-distance infrared capability.

## 4. MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- Replace batteries when the remote becomes unresponsive or the LED indicator light does not function as expected.
- Clean the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Store the remote in a dry place, away from extreme temperatures and direct sunlight.

## 5. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and have sufficient charge. Try replacing with new AAA batteries.
- **LED light stays on after code input:** This indicates an incorrect 3-digit code. Please re-enter the

code or try another code from the list for your TV brand.

- **Remote not controlling TV after programming:** Ensure there are no obstructions between the remote and the TV's infrared receiver. Verify that the correct programming method was followed for your TV brand. Try reprogramming using a different code if available, or the brand setting method.
- **Specific buttons not working:** Some advanced functions may not be fully supported by all TV models. Ensure the remote is pointed directly at the TV.

## 6. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.92 x 1.77 x 0.71 inches
Item Weight	1.76 ounces
Model Number	606829831261
Batteries Required	2 AAA batteries (not included)
Manufacturer	Amiroko
Special Feature	Universal
Color	Black
Max Number of Supported Devices	20 (TV brands)
Compatible Devices	Television

6.92 inch



1.77inch



Image 6.1: The remote control with its physical dimensions indicated.

## 7. WARRANTY AND SUPPORT

This product comes with a 24-month warranty, ensuring long-term satisfaction. For any questions or assistance with your remote control replacement, please contact customer service. All customer service inquiries receive a reply within 12 hours.