



Manuals.plus /

- › HCDZ /
- › HCDZ Interactive Touch Display Pen (CleverTouch Plus) - User Manual

## HCDZ CleverTouch Plus

# HCDZ Interactive Touch Display Pen (CleverTouch Plus) - User Manual

Model: CleverTouch Plus | Brand: HCDZ

## INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your HCDZ Interactive Touch Display Pen. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 2 x HCDZ Interactive Touch Display Pens

## SPECIFICATIONS

---

Feature	Detail
Model	CleverTouch Plus (GLSW013X2)
Brand	HCDZ
Color	Black
Material	Aluminum
Compatible Devices	Touch screen (electronic whiteboards, touch screen presentations, multimedia classrooms)
Batteries Included	No
Batteries Required	No
Unit Count	2.0 Count
Magnetic	No

## SETUP

---

### Powering On/Off

To power on the pen, gently tap its end twice. The indicator lights will illuminate to show the battery level. To power off, tap the end twice again.

### Charging

The pen features a charging port. Connect a compatible charging cable (not included) to this port to recharge the pen. The indicator lights will show charging progress.

## OPERATION

---

### General Use

The HCDZ Interactive Touch Display Pen is designed for precise interaction with compatible touch screens. It allows for writing, drawing, and navigating interfaces with accuracy.

This pen is ideal for electronic whiteboard presentations, touch screen presentations, and multimedia classroom environments.



A single HCDZ Interactive Touch Display Pen, black in color, showcasing its sleek design.



Two HCDZ Interactive Touch Display Pens, highlighting that the product comes as a set.

## Compatibility

This pen is compatible with various touch screen devices.

**Important Note:**

This pen is **not** designed for use with smartphones, tablets, and other capacitive screen devices that

require a different type of stylus technology. It is specifically for interactive flat panel displays.

## MAINTENANCE

---

Proper maintenance will extend the life of your touch display pen:

- Keep the pen clean by wiping it with a soft, dry cloth.
- Avoid exposing the pen to extreme temperatures or moisture.
- Store the pen in a safe place to prevent damage to the tip.

## TROUBLESHOOTING

---

### Pen Not Responding

- Ensure the pen is powered on (tap the end twice and check indicator lights).
- Check the battery level and charge the pen if necessary.
- Verify that the device you are using is a compatible touch screen (e.g., interactive flat panel display), not a smartphone or tablet.

### Inaccurate Input

- Ensure the screen is clean and free of smudges or debris.
- Recalibrate your touch screen display if it supports this function.

## WARRANTY & SUPPORT

---

This HCDZ product comes with a 3-month warranty. For support or warranty claims, please contact HCDZ customer service through the retailer where the product was purchased.