

Manuals.plus /

- › Aiwa /
- › Aiwa MI-X330 Meteor Bluetooth Speaker User Manual

Aiwa MI-X330 Meteor

Aiwa MI-X330 Meteor Bluetooth Speaker User Manual

Model: MI-X330 Meteor

1. INTRODUCTION

Thank you for choosing the Aiwa MI-X330 Meteor Bluetooth Speaker. This portable speaker is designed to deliver powerful audio with deep bass and clear sound, offering versatile connectivity and a long-lasting battery. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience.



Figure 1: Front view of the Aiwa MI-X330 Meteor Bluetooth Speaker.

2. PRODUCT OVERVIEW

Key Features:

- **Powerful Sound Output:** 60W high-quality audio with deep bass and crystal-clear sound.
- **Multiple Connectivity Options:** Supports Bluetooth, AUX, USB, and Mic input.
- **Long-Lasting Battery:** 5000mAh heavy-duty Li-Ion battery with Type-C fast charging, providing 6 to 10 hours of playtime.
- **Digital Display:** Easily view battery status, mode selection, and playback details.
- **TWS Dual-Link Technology:** Wirelessly pair two speakers for a powerful stereo sound experience.
- **Premium Metallic Finish:** Designed with a sleek and durable metallic build.

Speaker Dimensions:



Figure 2: Aiwa MI-X330 Meteor Bluetooth Speaker with indicated dimensions.

3. SETUP

3.1 Initial Charging

1. Before first use, fully charge the speaker using the provided Type-C charging cable.
2. Connect the Type-C cable to the speaker's charging port and the other end to a compatible USB power adapter (not included).

3. The digital display will indicate charging status. Charging is complete when the battery indicator shows full.

3.2 Powering On/Off

- To power on, press and hold the Power button until the digital display illuminates.
- To power off, press and hold the Power button again until the display turns off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated on the digital display). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "AIWA MI-X330 Meteor" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the display will show a stable Bluetooth icon.

4.2 TWS Dual-Link Technology (Pairing Two Speakers)

For a true stereo experience, you can pair two Aiwa MI-X330 Meteor speakers together.

1. Ensure both speakers are powered on and in Bluetooth mode, but not yet paired with any device.
2. On one of the speakers (this will be your primary speaker), press and hold the TWS button (refer to button layout on speaker).
3. The primary speaker will search for the secondary speaker. Once connected, both speakers will emit an audible confirmation.
4. Now, pair your mobile device with the primary speaker as described in Section 4.1. Audio will play in stereo through both speakers.

4.3 Other Connectivity Options

- **AUX Input:** Connect an external audio device using the provided AUX line cable to the speaker's AUX port. Press the 'M' button to switch to AUX mode.
- **USB Input:** Insert a USB flash drive containing audio files into the USB port. The speaker will automatically switch to USB mode and begin playback.
- **Mic Input:** Connect a microphone to the Mic input port for karaoke or public address functions.

4.4 Controls

The speaker features intuitive controls for managing your audio.

- **Power Button:** Press and hold to power on/off.
- **Mode ('M') Button:** Short press to cycle through input modes (Bluetooth, AUX, USB).
- **Play/Pause Button:** Press to play or pause audio.
- **Previous/Next Track Buttons:** Press to skip to the previous or next track.
- **Volume Knob:** Rotate to adjust the overall volume level.
- **Bass Knob:** Rotate to adjust the bass intensity.

5. CHARGING AND BATTERY

The Aiwa MI-X330 Meteor is equipped with a 5000mAh Li-Ion battery, offering extended playtime.

- **Battery Life:** Provides approximately 6 to 10 hours of playtime, depending on volume level and audio content.

- **Charging Time:** Varies based on the power adapter used. Use a compatible Type-C charger for optimal charging speed.
- **Battery Indicator:** The digital display shows the current battery level. Charge the speaker when the indicator is low to prevent interruption.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Water Resistance:** The product is not water resistant. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
No sound.	Volume too low; incorrect input mode; device not paired.	Increase volume; switch to correct input mode (Bluetooth, AUX, USB); re-pair Bluetooth device.
Bluetooth pairing fails.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in Bluetooth mode; move device closer; clear other Bluetooth devices.
TWS pairing fails.	Speakers not in TWS pairing mode; too far apart.	Ensure both speakers are in TWS pairing mode and close to each other.

8. SPECIFICATIONS

Feature	Detail
Brand	Aiwa
Model Name	MI-X330 Meteor
Model Number	LA
Speaker Maximum Output Power	60 Watts
Frequency Response	70 Hz
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Mounting Type	Floor Standing
Speaker Type	Woofer
Colour	Black
Battery Average Life	7 Hours
Is Waterproof	False (Not Water Resistant)
Control Method	Touch
Speaker Size	303 Millimetres (approx. 30.3 cm)
Tweeter Driver Diameter	1 Inches
Item Dimensions (D x W x H)	34.3D x 44.5W x 35.6H Centimeters
Item Weight	3.5 Kilograms
Compatible Devices	Smartphone, Tablet
Audio Driver Type	Dynamic Driver
Power Source	Battery Powered
Number of Batteries	1 Lithium Metal (included)

9. WHAT'S IN THE BOX

Upon opening your Aiwa MI-X330 Meteor package, you should find the following items:

- Aiwa MI-X330 Meteor Bluetooth Speaker (1)
- Type-C Charging Cable (1)
- AUX Line Cable (1)
- User Manual (1)
- Warranty Card (1)

10. WARRANTY AND SUPPORT

Warranty Information:

This product comes with a **1 Year Warranty** from the date of purchase. Please refer to the included Warranty Card for detailed terms and conditions.

Customer Support:

For any support, queries, or service requests, please contact Aiwa customer service:

- **Importer:** AIWA INDIA SALES & SERVICES PRIVATE LIMITED
- **Address:** 2E/26, Jhandewalan Extn, New Delhi -110055
- **Contact Number:** 1800-120-5619
- **Email:** getintouch@aiwaindia.com