Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Interphone /
- > Interphone Cellularline U-Com 6R Motorcycle Bluetooth Intercom User Manual

Interphone U-Com 6R

Interphone Cellularline U-Com 6R Motorcycle Bluetooth Intercom User Manual

Model: U-Com 6R

1. Introduction

This manual provides essential instructions for the proper installation, operation, and maintenance of your Interphone Cellularline U-Com 6R Motorcycle Bluetooth Intercom. Please read this manual thoroughly before using the device to ensure optimal performance and safety.

The U-Com 6R is designed to enhance your riding experience with reliable Bluetooth 5.2 communication, allowing connection with up to two riders over a distance of 1 kilometer. It offers compatibility with various OEM and GPS systems and features a long-lasting, replaceable battery.

2. Safety Information

Always prioritize safety while riding. Operating the intercom should not distract you from road conditions or traffic. Ensure the device is securely mounted and all cables are properly routed to avoid interference with helmet functionality or rider movement.

- Do not attempt to disassemble or modify the device.
- Keep the device away from extreme temperatures and direct sunlight.
- Ensure the charging port cover is securely closed when not charging to maintain water resistance.
- Adjust volume to a safe level that allows you to hear ambient traffic sounds.

3. Package Contents

Verify that all items listed below are included in your package:

- U-Com 6R Main Unit
- Helmet Mounting Bracket (Clip and Adhesive options)
- · Speaker Set

- Boom Microphone
- Wired Microphone
- USB-C Charging Cable
- Velcro Pads for Speakers and Microphones
- Microphone Sponges



Figure 3.1: All components included in the Interphone U-Com 6R package. This image displays the main intercom unit, mounting accessories, speakers, two types of microphones (boom and wired), and the USB-C charging cable.

4. Device Overview

4.1. MAIN UNIT CONTROLS



Figure 4.1: Front view of the Interphone U-Com 6R main unit. This image highlights the primary control buttons for music, call management, and intercom functions, along with the LED indicator.

- Music Button: Controls music playback (play/pause, skip tracks).
- Call Button: Manages phone calls (answer/end, voice assistant).
- Intercom Button: Initiates and manages intercom conversations.
- **LED Indicator:** Displays device status (pairing, charging, power).

4.2. PORTS AND CONNECTORS



Figure 4.2: Side view of the Interphone U-Com 6R unit. This image clearly shows the USB-C charging port and the speaker/microphone connector.

- USB-C Port: Used for charging the device.
- Speaker/Microphone Connector: Connects the speaker and microphone assembly to the main unit.

5. Installation

5.1. MOUNTING THE MAIN UNIT

The U-Com 6R can be mounted to your helmet using either the clip mount or the adhesive mount.

1. Clip Mount: Slide the clip between the helmet shell and the inner padding on the left side. Ensure it is

securely fastened.

2. **Adhesive Mount:** Clean the desired mounting area on the left side of your helmet. Peel off the protective film from the 3M adhesive on the bracket and firmly press it onto the helmet for at least 30 seconds. Allow 24 hours for the adhesive to fully cure before use.



Figure 5.1: Adhesive mounting bracket for the Interphone U-Com 6R. This image shows the bracket with the 3M adhesive backing, ready for attachment to a helmet.

5.2. INSTALLING SPEAKERS AND MICROPHONE

Position the speakers inside the helmet's ear pockets. The microphone should be placed in front of your mouth, ensuring clear voice pickup.

- 1. Attach the speakers to the helmet's interior using the provided Velcro pads. Ensure the speaker with the shorter wire is for the left ear and the longer wire for the right.
- 2. Choose the appropriate microphone for your helmet type:
 - **Boom Microphone:** Ideal for open-face or modular helmets. Attach it to the inside of the helmet near your mouth.

- **Wired Microphone:** Suitable for full-face helmets. Attach it to the inside of the chin bar, close to your mouth.
- 3. Connect the speaker and microphone assembly to the main U-Com 6R unit.
- 4. Tuck all wires neatly under the helmet padding to prevent discomfort or entanglement.

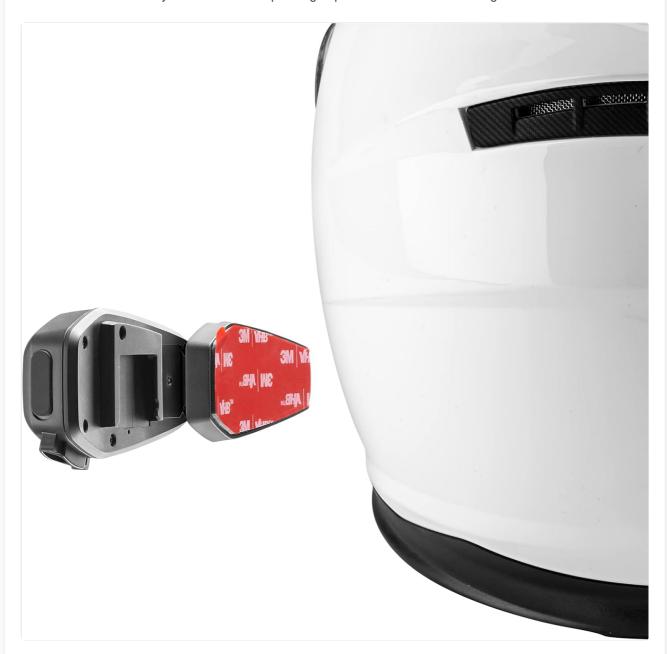


Figure 5.2: Installation of speakers and wired microphone inside a full-face helmet. This diagram illustrates the placement of the flat speakers in the ear recesses and the wired microphone near the chin bar.

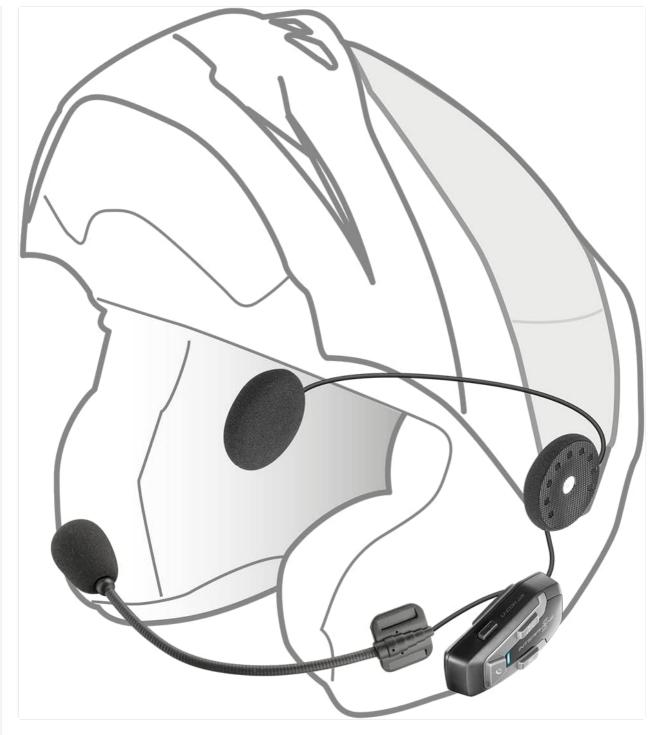


Figure 5.3: Installation of speakers and boom microphone inside an open-face helmet. This diagram shows the placement of speakers and the flexible boom microphone extending towards the rider's mouth.

6. Setup and Basic Operation

6.1. CHARGING THE DEVICE

Before first use, fully charge the U-Com 6R. Connect the supplied USB-C cable to the charging port on the unit and to a USB power source. The LED indicator will show charging status and turn off when fully charged. A full charge provides approximately 15 hours of talk time.

6.2. Power On/OFF

- Power On: Press and hold the Music button for 3 seconds. The LED will flash blue.
- Power Off: Press and hold the Music button for 5 seconds. The LED will turn red and then off.

6.3. BLUETOOTH PAIRING WITH MOBILE PHONE

- 1. With the U-Com 6R powered off, press and hold the Call button for 5 seconds until the LED flashes red and blue alternately, indicating pairing mode.
- 2. On your mobile phone, enable Bluetooth and search for new devices.
- 3. Select "Interphone U-Com 6R" from the list of available devices.
- 4. Once paired, the LED on the U-Com 6R will flash blue periodically.

6.4. INTERCOM PAIRING (UP TO 2 RIDERS)

The U-Com 6R supports communication with one other rider. For Mesh 2.0 technology with multiple riders, refer to the advanced features section or the full online manual.

- 1. Ensure both U-Com 6R units are powered on and not connected to other devices.
- 2. On both units, press and hold the Intercom button for 5 seconds until the LED flashes red and blue alternately.
- 3. The units will automatically search and pair with each other. Once connected, the LEDs will flash blue.
- 4. To initiate an intercom conversation, briefly press the Intercom button on either unit.

7. Operation

7.1. PHONE CALLS

- Answer Call: Briefly press the Call button.
- End Call: Briefly press the Call button.
- Reject Call: Press and hold the Call button for 2 seconds.
- Voice Assistant: Briefly press the Call button twice to activate your phone's voice assistant (Siri, Google Assistant).

7.2. MUSIC PLAYBACK

- Play/Pause: Briefly press the Music button.
- Next Track: Press the Music button twice.
- Previous Track: Press the Music button three times.

7.3. VOLUME ADJUSTMENT

The U-Com 6R features dedicated buttons for volume control, typically integrated with the main control panel. Refer to the device overview (Figure 4.1) for button locations.

- Increase Volume: Press the 'Volume Up' button.
- Decrease Volume: Press the 'Volume Down' button.

7.4. GPS AND OEM SYSTEM COMPATIBILITY

The U-Com 6R is designed with Bluetooth 5.2 to ensure broad compatibility with various GPS navigation devices and original equipment manufacturer (OEM) systems found on motorcycles. Pair these devices as you would a mobile phone, following their respective pairing instructions.

8. Maintenance

- Cleaning: Use a soft, damp cloth to clean the unit. Do not use abrasive cleaners or solvents.
- Water Resistance: The U-Com 6R is waterproof. However, ensure the USB-C port cover is fully sealed to maintain its water-resistant properties.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, especially if it will be stored for extended periods. The integrated battery is replaceable, extending the product's lifespan.
- Storage: Store the device in a cool, dry place when not in use.

9. Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device fully.
Cannot pair with phone/intercom.	Device not in pairing mode; distance too far; interference.	Ensure device is in pairing mode (flashing red/blue). Move closer to the other device. Turn off other Bluetooth devices.
No audio or poor audio quality.	Volume too low; speakers incorrectly positioned; loose connection.	Increase volume. Check speaker placement and connections. Ensure microphone is correctly positioned.
Intercom connection drops frequently.	Out of range; environmental interference.	Stay within 1 km range. Avoid areas with strong radio interference.

9.1. FACTORY RESET

If issues persist, a factory reset may resolve them. Consult the full online manual or contact customer support for specific instructions on performing a factory reset for the U-Com 6R.

10. Specifications

Feature	Detail
Model Number	INTERPHOUCOM6R
Bluetooth Version	5.2
Intercom Range	Up to 1 Kilometer (between 2 riders)
Talk Time	Approximately 15 hours
Battery Type	Lithium Polymer (included, replaceable)
Connectivity	Bluetooth, Mesh 2.0 (compatible with Sena)
Water Resistance	Yes
Weight	0.36 Kilograms (12.7 ounces)

Feature	Detail
Dimensions	9.09 x 5.83 x 2.64 inches (Package)
Compatibility	GPS and OEM systems, most other brands on the market

11. Warranty and Support

Interphone products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your product or visit the official Interphone website. For technical support or further assistance, please contact Interphone customer service through their official channels.

You can find more information and support resources by visiting theInterphone Store on Amazon.

© 2025 Interphone Cellularline. All rights reserved.

Related Documents - U-Com 6R



Interphone U-COM 7R User Manual

Comprehensive user manual for the Interphone U-COM 7R Bluetooth intercom system, covering installation, pairing, phone usage, music playback, intercom features, configuration, and troubleshooting.



Interphone U-COM 4 User Manual: Motorcycle Bluetooth Intercom Guide

Explore the Interphone U-COM 4 user manual for detailed instructions on installing, pairing, and operating this advanced Bluetooth motorcycle intercom system. Features include multi-rider intercom, phone connectivity, music, and FM radio.



Interphone F5MC User Manual: Bluetooth Motorcycle Helmet Headset

Explore the features and functions of the Interphone F5MC Bluetooth helmet headset. This user manual covers intercom, phone, GPS, FM radio, music streaming, and setup for motorcycle riders.



Interphone U-COM 16 User Manual

This user manual provides comprehensive instructions for the Interphone U-COM 16, an advanced Bluetooth and Mesh intercom system for motorcycles. It covers installation, pairing with various devices, mobile phone usage, music playback, Mesh and Bluetooth intercom features, FM radio, voice commands, configuration settings, and troubleshooting.



Interphone F5XT Motorcycle Helmet Bluetooth Communication System Instruction Manual

Comprehensive instruction manual for the Interphone F5XT, a Bluetooth 3.0 communication system designed for motorcycle helmets, offering features like intercom, music playback, and phone connectivity with weather protection.

Da de mitgelelete Beleningsanleting etnes misseratündlich tox-urvalstandig ist, socials ich hiernit die tedenung der wildtigsten Fusikanen im Klatocs erlauten.

And the plant of the control of the leading for wellington had been as the control of the contro

Interphone Bluetooth Helmet Headset User Manual

Concise guide to operating the Interphone Bluetooth Helmet Headset, covering pairing with mobile phones and other Interphones, making calls, and basic functions.