

[Manuals.plus](#) /

› [Denver](#) /

› Denver CCT-1230 Dash Cam User Manual

Denver CCT-1230

Denver CCT-1230 Dash Cam User Manual

Model: CCT-1230

INTRODUCTION

Thank you for purchasing the Denver CCT-1230 Dash Cam. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure proper functionality and safety.

PRODUCT OVERVIEW



This image displays two views of the Denver CCT-1230 Dash Cam. On the left, the dash cam is shown from the back, revealing its 2.4-inch LCD screen displaying a road scene, along with control buttons below the screen. On the right, the dash cam is shown from the front, highlighting its camera lens and the 'FULL HD CAR DVR 1080P' branding. Both views include the attached suction cup mount.

The Denver CCT-1230 is a compact Full HD car DVR designed to record your journeys. It features a 2.4-inch LCD screen for live view and playback, a 60-degree viewing angle, and automatic recording capabilities.

PACKAGE CONTENTS

- Denver CCT-1230 Dash Cam
- Car Mount (Suction Cup)
- 12V Car Power Adapter (Micro USB)
- User Manual (this document)

SETUP

1. Installing the MicroSD Card (Not Included)

Locate the MicroSD card slot on the side or bottom of the dash cam. Insert a Class 10 or higher MicroSD card (up to 32GB recommended) with the gold contacts facing the back of the camera until it clicks into place. Ensure the card is formatted before first use (refer to the 'Operating' section for formatting instructions).

2. Mounting the Dash Cam

1. Clean the desired area on your windshield thoroughly.
2. Attach the suction cup mount to the dash cam.
3. Press the suction cup firmly against the windshield and flip the lever to secure it.
4. Adjust the angle of the dash cam to ensure a clear view of the road ahead, avoiding obstruction of your driving view.

3. Connecting to Power

Connect the included 12V car power adapter to the dash cam's Micro USB port and plug the other end into your vehicle's cigarette lighter socket. The dash cam will automatically power on and begin recording when your vehicle starts, and power off when the vehicle is turned off.

OPERATING INSTRUCTIONS

Automatic Recording

The dash cam is designed to automatically start recording when power is supplied (e.g., when the car engine starts) and stop recording when power is cut off (e.g., when the car engine is turned off).

Manual Recording

To manually start or stop recording, press the **OK** button (usually indicated by a red circle or 'OK' text) located below the screen.

Loop Recording

The dash cam supports loop recording, which means it will continuously record and overwrite the oldest files when the memory card is full. You can set the loop recording duration in the settings menu:

- Off
- 3 minutes
- 5 minutes
- 10 minutes

To access this setting, press the **MENU** button, navigate to the 'Loop Recording' option, and select your desired duration using the navigation buttons and **OK** button.

Parking Monitor

The parking monitor feature allows the dash cam to automatically start recording if it detects a sudden shake or collision while the vehicle is parked. This feature requires continuous power or a built-in battery with sufficient charge. Refer to the settings menu to enable or disable this function.

Playback

To view recorded videos:

1. Stop recording if it's active.
2. Press the **MODE** button to switch to playback mode.
3. Use the navigation buttons (Up/Down or Left/Right) to browse through recorded files.

4. Press the **OK** button to play the selected video.

Formatting the MicroSD Card

It is recommended to format the MicroSD card regularly to ensure optimal performance and prevent data corruption. To format:

- 1. Press the **MENU** button to enter the settings menu.
- 2. Navigate to the 'Format' option.
- 3. Confirm your selection. All data on the card will be erased.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the dash cam's lens and screen. Do not use abrasive cleaners or solvents.
- **Temperature:** Avoid exposing the dash cam to extreme temperatures, both hot and cold, as this can affect battery life and device performance.
- **Storage:** If storing the dash cam for an extended period, remove the MicroSD card and store the device in a cool, dry place.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to ensure optimal performance and new features.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dash cam does not power on.	No power from car adapter; faulty adapter; loose connection.	Check car's cigarette lighter socket; ensure adapter is securely plugged in; try a different 12V power source if available.
Recording stops unexpectedly.	MicroSD card full; card error; low battery.	Format the MicroSD card; replace the card if corrupted; ensure continuous power supply.
Video quality is poor.	Dirty lens; protective film on lens; incorrect resolution setting.	Clean the lens; remove any protective film; check video resolution settings in the menu.
Buttons are unresponsive.	Device frozen.	Press and hold the power button to force a restart, or use the reset button (if available, usually a small pinhole).

SPECIFICATIONS

- Model:** CCT-1230
- Screen:** 2.4-inch LCD
- Video Resolution:** Up to 1080p
- Viewing Angle:** 60 degrees
- Loop Recording:** Off, 3 min, 5 min, 10 min
- Special Features:** Parking Monitor, Automatic Start/Stop
- Storage:** MicroSD card (Class 10 or higher, up to 32GB, not included)
- Power Input:** 12V Car Adapter (Micro USB)
- Dimensions:** 3.2 x 6.5 x 7 cm (approx.)
- Weight:** 270 grams (approx.)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Denver website or contact your local retailer. Keep your proof of purchase for any warranty claims.

Online Support: www.denver.eu

© 2023 Denver. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question